


MX21 INSTA-MOUNT™ Series—Modular Incremental Rotary Optical Encoder

BEI Sensors

Dimensions

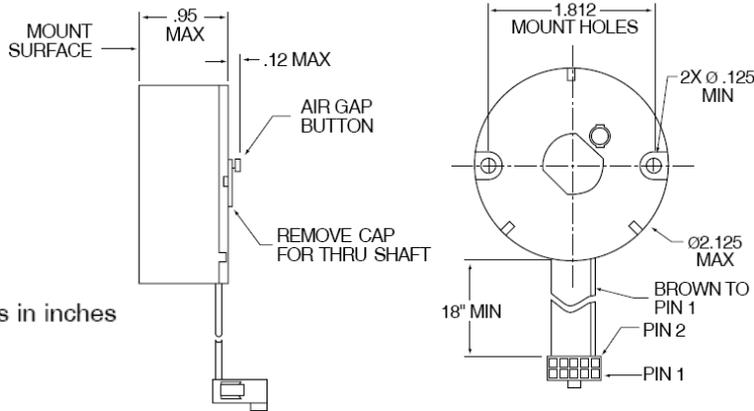


All dimensions in inches

.xx = ±.02
.xxx = ±.005

Installation

Instructions

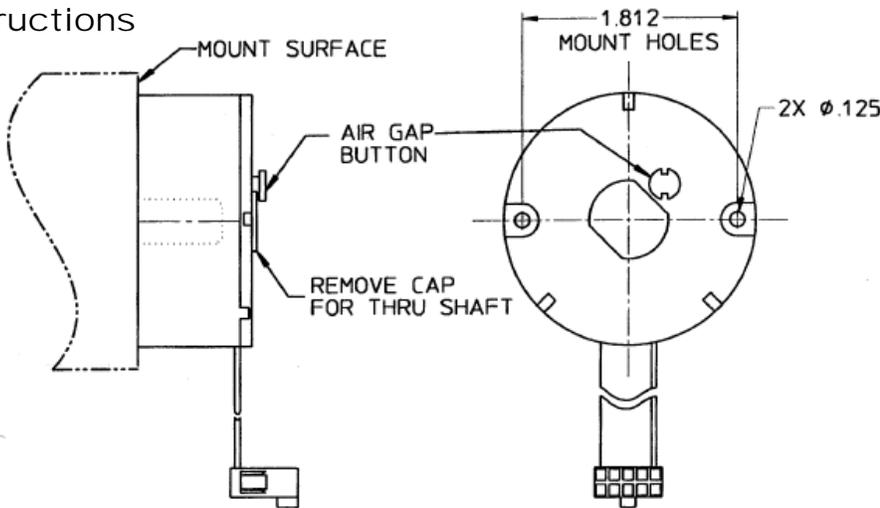

Preparation:

1. Inspect motor interface per MX21 Data Sheet or specification drawing.
2. Motor shaft must be free of burrs & other surface defects.

Installation:

1. Motor shaft should NOT be rotating during initial encoder installation.
2. Hold encoder perpendicular to motor shaft. Guide the encoder onto the motor shaft, pushing encoder STRAIGHT on until it is flush against the mount surface. Do NOT rock side to side.
3. Install two #4-40 mount screws. Do not fully tighten at this point. (Note: A thread sealant should be applied to the screw threads)
4. Rotate the motor shaft (300 RPM, minimum). Press the air-gap button until it bottoms to the top of the encoder momentarily, then release. CAUTION: DO NOT press air-gap button while motor shaft is stationary. Button should only be pressed for one or two seconds while shaft is rotating.
5. Tighten mounting screws fully. (recommended torque is 30 to 40 ounce inches.)
6. This completes the mechanical installation. Proceed with electrical connections as indicated on product data sheet or specification drawing.


Removal:

1. Motor shaft may be stationary or rotating up to 1000 RPM during encoder removal.
2. Remove two mounting screws.
3. Grasp encoder firmly and pull STRAIGHT off of the motor shaft. Do NOT rock side to side.

These commodities, technology or software if exported from the United States must be in accordance with the Bureau of Industry, and Security, Export Administration regulations. Diversion contrary to U.S law is prohibited.


Output

Waveform

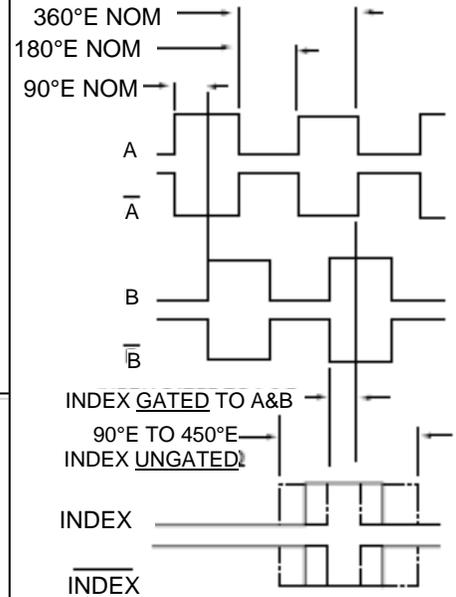

→ CCW ROTATION OF SHAFT →
MX212 outputs A & B ONLY
MX213 outputs A, B & INDEX ONLY
MX216 outputs as shown

Figure 3

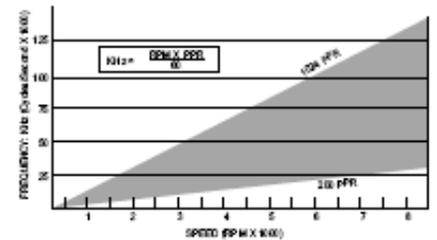

Terminations

Pinout MX212/213

| Pin # | Signal | Pin # | Signal |
|-------|-----------|-------|-------------|
| 1 | channel A | 6 | NC |
| 2 | +5 volts | 7 | NC |
| 3 | ground | 8 | channel B |
| 4 | NC | 9 | NC |
| 5 | NC | 10 | index (213) |

Pinout MX216

| Pin # | Signal | Pin # | Signal |
|-------|-----------|-------|-----------|
| 1 | NC | 6 | channel A |
| 2 | +5 volts | 7 | channel B |
| 3 | ground | 8 | channel B |
| 4 | NC | 9 | index |
| 5 | channel A | 10 | index |

MX21 INSTA-MOUNT™ Series—Modular Incremental Rotary Optical Encoder

BEI Sensors

| Color Codes | |
|-------------|---------------------------|
| RED | +5V |
| BLACK | GROUND |
| WHITE | A |
| GREEN | B |
| ORANGE | INDEX |
| BLUE | \bar{A} |
| WHT/BLK | \bar{B} |
| RED/BLK | $\overline{\text{INDEX}}$ |

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Encoders](#) category:

Click to view products by [BEI Sensors](#) manufacturer:

Other Similar products are found below :

[6-1393048-5](#) [62AG22-H5-P](#) [62B22-LP-030C](#) [62D22-02-P](#) [62R22-01-040S](#) [63K25](#) [63K32](#) [63KS100](#) [63KS64](#) [63R100](#) [63R50-020](#) [63RS256-060](#) [700-09-36](#) [E6C2-CWZ6C-10 500P/R 5M](#) [E6C3-CWZ5GH 1000P/R 2M](#) [25LB22-G-Z](#) [T101-5C2-111-M1](#) [T101-5C3-111-M1](#) [T101-5C4-111-M1](#) [25LB45-Q-Z](#) [HEDS-8905](#) [385001M0439](#) [385001M0216](#) [DPL12SV2424A25K3](#) [E69-1](#) [E69-DF15](#) [E69-FBA-02](#) [E69-FCA](#) [E6B2-CWZ1X 2000P/R 0.5M](#) [E6B2-CWZ3E 600P/R 0.5M](#) [E6C3-CWZ3EH 800P/R 2M](#) [ENA1D-472-L00050L](#) [61S64-2](#) [62B11-LP-100S](#) [62B11-LPP-P](#) [62C1111-02-020C](#) [62N11-P](#) [62S22-H9-120S](#) [62S30-L0-200C](#) [62V15-02-080S](#) [62V22-02-030C](#) [632911-128](#) [63K64](#) [63KS100-040](#) [63R64-050](#) [63RS256](#) [63RS64](#) [700-16-16](#) [3-1393048-1](#) [63KS128](#)