



F&F Filipowski Sp. J.

95-200 Pabianice, ul. Konstantynowska 79/81 phone +48 42 215 23 83 www.fif.com.pl

DATA SHEET

rH- S2

Battery two-channel transmitter
of the F&Home RADIO system.



The rH-S2 module has wires to connect two momentary and potential-free contacts (buttons). The module sends information about closing or opening of the contacts to the server of F&Home RADIO system. Communication is done via radio. The rH-S2 module is particularly suited for controlling lighting, roller blinds or light scenes. In areas where 230 V power supply is available it is recommended to use a transmitter powered from the mains, for example rH-S4Tes AC.

The module is represented in configurator by an object, which consist of two binary inputs and two binary outputs (bistate), separate for each physical input. Closing or opening of the contact causes a change in logic state of the corresponding output.

Inputs		
Figure	Name	Type
	Channel 1, 2	binary

Outputs		
Figure	Name	Type
	Status of contacts 1, 2	binary




Installer settings in the configuration program

Feature name	Description	Range	Unit / Description
Connection monitoring	Sets action in case of loss of connection to the server (information about the modules out of reach).	Standard module	Information on the standard output SX 752
		Alarm module	Information on the alarm output SX 752
		Unmonitored module	No connection correctness control
The delay in signaling a lack of coverage	Sets the delay after which the module is reported that it is beyond the coverage range of the server	1 - 5	
Contact 1, 2 active, when	Defines the status of contacts on the output for which the status is to be set active, which means logical state 1	Closed	Logical state '1' is generated on the output when the contacts are closed.
		Open	Logical state '1' is generated on the output when the contacts are open.
Maximum activity time (0 - unlimited)	Sets the time after which the output status will be changed to logical state '0' in the absence of a response from the module.	0 - 600	second

Contact active when feature: the system adopted positive logic. This means that the idle state is '0', and the active state (unstable) is '1'. For momentary button (bell button) the stable state is an inactive state - at the output of the object we have logical state '0'. Regardless of the selected *Contact active* option and the actual status of contacts, shortly after the project starts the outputs have the logical state '0'. It takes a minute to synchronize with the module and the object outputs are updated. If you choose the *Contact active, when open* option, which means the contact inputs are permanently open, then on the appropriate output of the object will cyclically appear logical state '1' for the time specified in the *Installer Settings*, then the logical state '0' before syncing. If you choose *Contact active, when closed* option and contact inputs are permanently closed, then the appropriate output object will appear cyclically logical state of '1' for the time specified in the *Installer Settings*, then the logical state '0' before syncing. *Maximum activity time* feature: setting the parameter to '0' disables the auto-zeroing of the output. This is usually the case when the contact is treated as a bistable (for example as a limit switch). The maximum activity time has been introduced so that the logic state '1' did not last non-stop, when communication with the module is lost (except in the case where a user himself forced such a situation in *Installer Settings*).

If you connect any element to the binary input of the object, then the signal from this element will be summed up with the signal from physical contact and shared at the corresponding logic output.

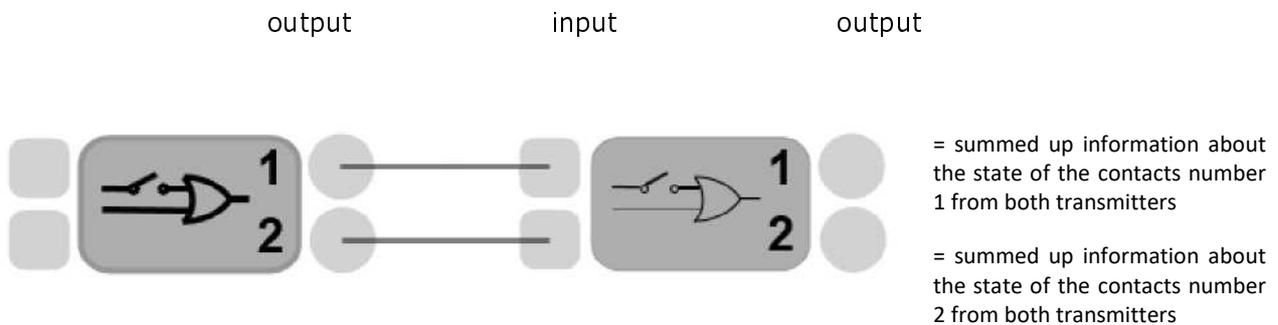

The system also allows for connection of signals of different types, performing for this purpose an automatic conversion before summing up.

Technical specifications table	
Battery	CR123 (lithium) or SL861/S
Battery operating time	12 - 36 months (depending on the battery)
Supply voltage range	2.5 - 3.5 V
Radio link (operation frequency)	868 MHz
Signal strength	9 mW
Transmission type	One-way with confirmation
Coding	Yes
Range in open space	100 m
Period of logging in the system	Up to 5 minutes
Inputs	2 x potential-free contact
Contact voltage	3 V
Contact current	250 uA
Storing temperature	-20°C to +50°C
Working temperature	+10°C, +40°C for CR123A battery, -30°C, +40°C for SL861/S battery
Humidity	<=85% (without condensation and aggressive gases)
Dimensions	51 x 37 x 20 mm
Ingress protection	IP20
Operating position	any
Enclosure type	in-wall
Battery monitoring	yes

- Insert the batteries according to shown polarity and mount the housing of the module.
- Connect the rH-S2 wires to terminals of the button in accordance to the above scheme.
- If there are uninsulated wires in the installation box, then disconnect the power supply circuit, make sure using the appropriate device if there is no voltage on the supply lines and perform adequate insulation.
- Screw down the button and place the module in an installation box.
- Place the antenna of the module parallel to one of the antennas of the server and move it away as far as possible from other wires.
- Register the module in the system.

Registration in the system

1. Select the registration method in the configurator.
2. Press and hold the left key of the button (close the circuit by closing the wires S1 and C).
3. After 5 seconds the module will register itself in the system or the program will report an error in case of failure.

WARNING

The connection method is specified in this manual. Any activities related to installation, connection and regulation should be carried out by persons with electrical qualifications who are familiar with this manual and features of the module. Manner of transport, storing and using the module affects its proper operation. Installation of the module is not recommended in the following cases: missing components, damage to the module or its deformation. In case of malfunction the module should be returned to the manufacturer.



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Industrial Relays](#) category:

Click to view products by [F&F](#) manufacturer:

Other Similar products are found below :

[6-1617801-8](#) [6-1618107-9](#) [EV250-4A-02](#) [EV250-6A-01](#) [FCA-210-113](#) [FCA-325-159](#) [FCA-410-138](#) [8-1618273-6](#) [9-1618397-7](#)
[GCA32A208VAC60HZ](#) [GCA63A600VAC60HZ](#) [1-1833005-4](#) [H-8C](#) [ACC530U20](#) [AVR907](#) [B329](#) [B490A](#) [1618095-3](#) [1618104-9](#) [1618279-1](#) [BHR124Y](#) [N417](#) [2071229-4](#) [2-1617748-6](#) [2-1618396-6](#) [2-1618398-1](#) [JMAPD-5XL](#) [JMGACD-5M](#) [JMGSCD-5L](#) [PBO-40A3040](#)
[RT334012WG](#) [SAH159](#) [SF5201F02](#) [301-17SX](#) [1618105-2](#) [1618112-6](#) [1618113-5](#) [1618276-6](#) [A837D](#) [A862B1](#) [ACC730-8025B](#) [SZ-T13](#) [2-1616126-3](#) [2-1618002-9](#) [2-1618100-8](#) [2-1618273-3](#) [GCA32A12VDC](#) [GPBR](#) [26852304](#) [CGE40-2P-20AN](#)