

PART NUMBER	CODE NUMBER	NUMBER OF CONTACTS	DIMENSION OF CONNECTOR, FPC,PCB MOUNTING PATTERN AND STENCIL							DIMENSION OF DRAWING FOR PACKING				
			Α	В	С	D	E	F	G	Н	J	K	L	М
FH34SRJ-4S-0.5SH(99)	CL580-1238-7-99	4	4	1.5	2.53	3.38	3.1	3.9	2.5	16	7.5	_	17.4	21.4
FH34SRJ-5S-0.5SH(99)	CL580-1264-7-99	5	4.5	2	3.03	3.88	3.6	4.4	3	16	7.5	_	17.4	21.4
FH34SRJ-6S-0.5SH(99)	CL580-1236-1-99	6	5	2.5	3.53	4.38	4.1	4.9	3.5	16	7.5	_	17.4	21.4
FH34SRJ-7S-0.5SH(99)	CL580-1200-0-99	7	5.5	3	4.03	4.88	4.6	5.4	4	16	7.5	_	17.4	21.4
FH34SRJ-8S-0.5SH(99)	CL580-1231-8-99	8	6	3.5	4.53	5.38	5.1	5.9	4.5	16	7.5	_	17.4	21.4
FH34SRJ-9S-0.5SH(99)	CL580-1262-1-99	9	6.5	4	5.03	5.88	5.6	6.4	5	16	7.5	_	17.4	21.4
FH34SRJ-10S-0.5SH(99)	CL580-1251-5-99	Toy	7	4.5	5.53	6.38	6.1	6.9	5.5	16	7.5	_	17.4	21.4
FH34SRJ-11S-0.5SH(99)	CL580-1258-4-99	11//	7.5	5	6.03	6.88	6.6	7.4	6	16	7.5	_	17.4	21.4
FH34SRJ-12S-0.5SH(99)	CL580-1253-0-99	12	8	5.5	6.53	7.38	7.1	7.9	6.5	24	11.5	_	25.4	29.4
FH34SRJ-14S-0.5SH(99)	CL580-1252-8-99	14	9	6.5	7.53	8.38	8.1	8.9	7.5	24	11.5	_	25.4	29.4
FH34SRJ-16S-0.5SH(99)	CL580-1259-7-99	16	10	7.5	8.57	9.38	9.1	9.9	8.5	24	11.5	_	25.4	29.4
FH34SRJ-18S-0.5SH(99)	CL580-1248-0-99	18	11	8.5	9.57	10.38	10.1	10.9	9.5	24	11.5	_	25.4	29.4
FH34SRJ-20S-0.5SH(99)	CL580-1256-9-99	20	12	9.5	10.57	11.38	11.1	11.9	10.5	24	11.5	_	25.4	29.4
FH34SRJ-22S-0.5SH(99)	CL580-1254-3-99	22	13	10.5	11.57	12,38	12.1	12.9	11.5	24	11.5	_	25.4	29.4
FH34SRJ-24S-0.5SH(99)	CL580-1255-6-99	24	14	11.5	12.57	13.38	13.1	13.9	12.5	24	11.5	_	25.4	29.4
FH34SRJ-26S-0.5SH(99)	CL580-1247-8-99	26	15	12.5	13.57	14.38	14.1	14.9	13.5	24	11.5	_	25.4	29.4
FH34SRJ-30S-0.5SH(99)	CL580-1232-0-99	30	17	14.5	15.57	16.38	16.1	16.9	15.5	32	14.2	28.4	33.4	37.4
FH34SRJ-32S-0.5SH(99)	CL580-1257-1-99	32	18	15.5	16.53	17.38	17.1	17.9	16.5	32	14.2	28.4	33.4	37.4
FH34SRJ-34S-0.5SH(99)	CL580-1261-9-99	34	19	16.5	17.53	18.38	18.1	18.9	17.5	32	14.2	28.4	33.4	37.4
FH34SRJ-40S-0.5SH(99)	CL580-1260-6-99	40	22	19.5	20.53	21.38	21.1	21.9	20.5	44	20.2	40.4	45.4	49.4
FH34SRJ-45S-0.5SH(99)	CL580-1265-0-99	45	24.5	22	23.03	23.88	23.6	24.4	23	44	20.2	40.4	45.4	49.4
FH34SRJ-50S-0.5SH(99)	CL580-1266-2-99	50	27	24.5	25.53	26.38	26.1	26.9	25.5	44	20.2	40.4	45.4	49.4

EDC3-159714-05 FH34SRJ-*S-0.5SH(99) CL580 HRS DRAWING NO.
PART NO.
CODE NO.

FORM HC0011-5-8 1

5

В

D

Ε

4

This connector features small, thin and back flip design, requiring delicate and careful handling. To prevent connector/FPC breakage and contact failure (meting failure, FPC pattern breakage, etc), read through the instructions shown below and handle the connector properly. Each values indicating here are for reference and may differ from standard value.

Operation and Precautions


1. Initial condition


Actuator does not have to be operated before inserting FPC. as the connector is delivered with the actuator opened.

[Caution]

- -Do not close the actuator before inserting FPC. Closing the actuator without FPC could make the contact
- gap smaller, which could increase the FPC insertion force.

 —Do not insert FPC or operate actuator before mounting.

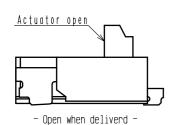

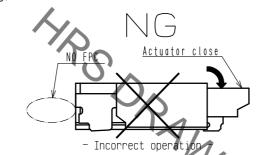

3. FPC insertion check (for using contacts on the top, for FPC pattern only applicable to FH34S*)

FPC (Angled insertion)

Incorrect operation modes are prevented by visual check, comparing positions of housing opening end line and FPC pattern line.

- Incorrect operation

[Caution]

 $\bigcirc K$

-

FPC (Angled insertion)

-Do not insert the FPC at an angle and/or stop it before insertion is completed




2. How to insert FPC

Insert the FPC into the connector opening horizontally to the PCB plane. Insert it properly to the very end.


[Caution]


FORM HC0011-5-8

- -Insert the FPC with the actuator opened.
- -Do not twist the FPC to up and down, right and left or an angle.

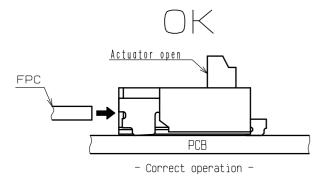


- Incorrect operation -

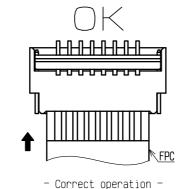

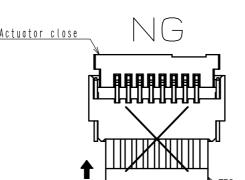


- Incorrect operation -

Control operation

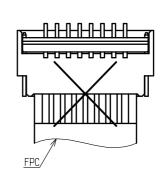

- incorrect operation (Insufficiently inserted)

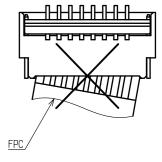


NG


HHHHHHH


- Incorrect operation

 
Incorrect operation -(Angle insertion)



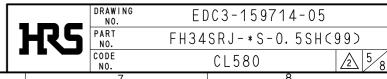

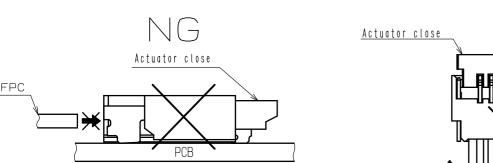

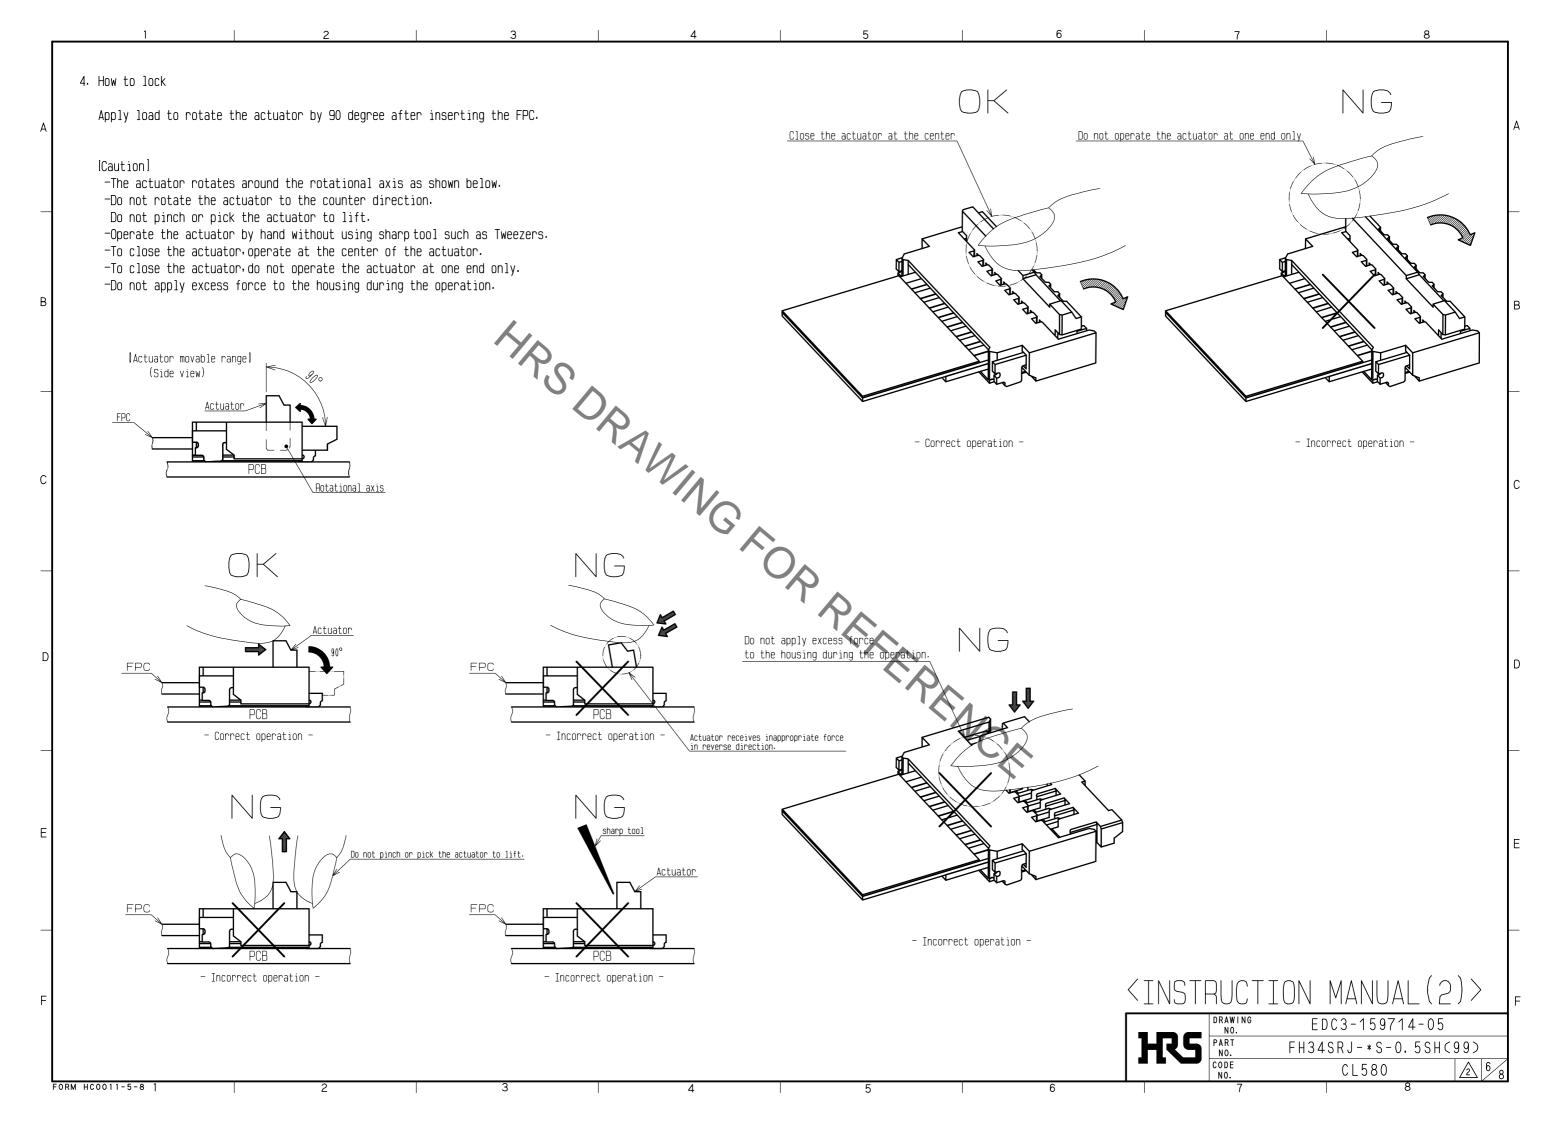

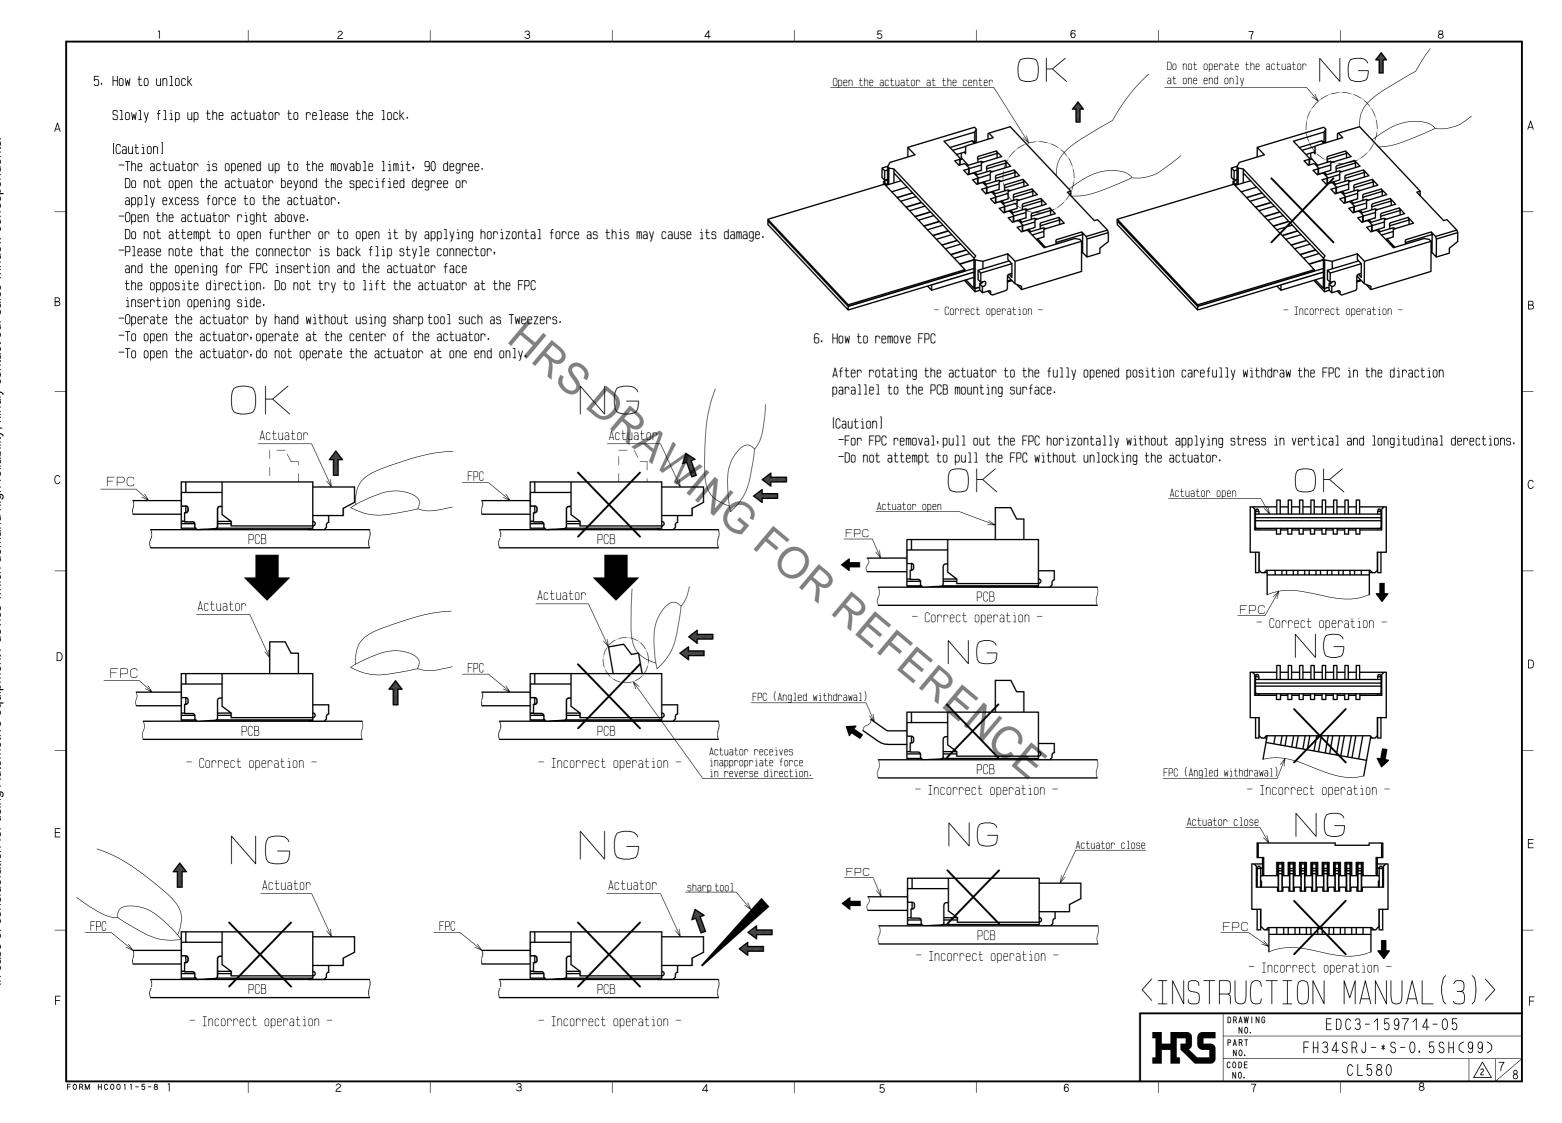

Precautions for design!

1. During FPC wiring , ensure that stress is not applied directly to the connector. Do not bend the FPC excessively near the connector during use , or it may cause contact failure or FPC breakage. Stabilizing the FPC is recommended.

2. Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion.

Appropriate FPC length and component layout are recommended for assembly ease. Too short FPC length makes assembly difficult.

- 3. Follow the recommended PCB mounting pattern, stencil opening design and the FPC design.
- 4. Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.
- 5. Keep spaces for the actuator movement and its operation for PCB design and component layout.


IFPC routing after connection


Depending on a FPC rounding, a load is applied to the connector, and a contact failure may occur. To prevent a failure, take the following notes into a consideration during mechanism design.


[Caution]

FORM HC0011-5-8

- -Avoid applying forces to FPC in vertical or horizontal directions. In addition, avoid pulling up and down on the FPC.
- -When fixing FPC after FPC cabling avoid pulling FPC and route the wire FPC with slack. In this regard, the stiffener is parallel to the PCB.
- -Do not mount other components touching to the FPC underneath the FPC stiffener.

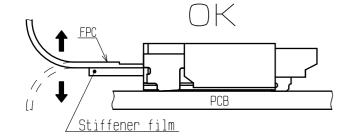

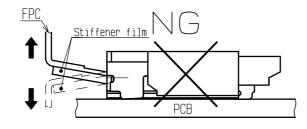

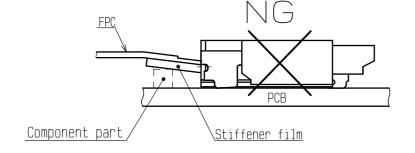

Instructions for mounting on the PCB

♦Warp of PCB

Minimize warp of the PCB as much as possible.

Lead co-planarity including reinforced metal fittings is 0.1 mm or less. Too much warp of the PCB may result in a soldering failure.

♦Flexible board design

Please make sure to put a stiffener on the backside of the flexible board. We recommend a glass epoxy material with the thickness of 0.3mm MIN.

♦Load to Connector

Do not add 0.5N or greater external force when unreel or pick and place the connector etc. or it may get broken.

In addition, do not insert the FPC or operate the connector before mounting.

♦Reflow temperature profile

Apply reflow temperature profile within the specified conditions.

In individual applications, the actual temperature may vary,
depending on solder paste type, volume/thickness and PCB size/thickness.
Consult your solder paste and equipment manufacturer for specific recommendations.

INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR!

♦Load to PCB

·Splitting a large PCB into several pieces


·Screwing the PCB

Avoid the handling described above so that no force is exerted on the PCB during the assembly process. Otherwise, the connector may become defective.

♦Amount of Warp

The warp of a 100mm wide PCB should be 0.5 mm or less.

The warp of PCB suffers stress on connector and the connector may become defective.

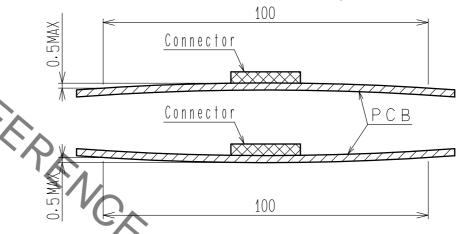

Other instructions

♦Instructions on manual soldering

Follow the instructions shown below when soldering the connector manually during repair work, etc.

- 1. Do not perform manual soldering with the FPC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not supply excessive solder (or flux).

 If excessive solder (or flux) is supplied on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator. Supplying excessive solder to the metal fittings may hinder actuator rotation, resulting in breakage of the connector.

<INSTRUCTION MANUAL(4)>

С

HR5 | DRAWING | EDC3-159714-05 | PART | FH345RJ-*S-0.55H(99) | CL580 | 2 8/8

2 3 4 5

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for FFC & FPC Connectors category:

Click to view products by Hirose manufacturer:

Other Similar products are found below:

K-FC20 FH29B-80S-0.2SHW(99) FPH-2022G AYF332735 52610-1075 52610-1275 52610-1934 501864-3091-TR225 086222026001800 52610-0675 62684-36210E9ALF 52746-1671-TR250 10051922-2810EHLF 6-520415-9 SFV6R-1STE9HLF XF3M-2915-1B-R100 1658549-1 46214008010800 AYF534065TA AYF351525 086212040340800+ AYF530365TA 67000-014LF 67000-004LF 006207341915000+ DS1020-19RT1D 67000-003LF 67000-011LF 67000-016LF HFW14R-2STE9LF SFV32R-2STBE9HLF SFW12R-5STE9LF SFW18R-1STAE9LF SFW4R-5STE9LF 52807-0430 046283021002868+ THD1015-8CL-SN 67000-006LF 502250-8027 104267-9617 66987-011LF AYF362535 F0501-T-50-20T-R HFW8S-2STAE1HLF 67000-008LF 67000-012LF ECC576069EU F1002-B-20-20T-R HFW15S-2STAE1HLF 0781271110