

	PART NO.	CODE NO.	NUMBER OF	DIMENSION OF CONNECTOR, PCB MOUNTING PATTERN, STENCIL PATTERN AND FFC/FPC					DIMENSION OF DRAWING FOR PACKING									
A		0052110.	CONTACT	A	B	C	D	E	F	G	— H	J	K		<u> </u>	N	P	Q
	FH52E-4S-0.5SH		4	6.3	1.5	2.57	4.55	7.1	4.1	4.1	2.5	6.6	7.6	7.5	16.0		21.4	17.4
	FH52E-5S-0.5SH		5	6.8	2.0	3.07	5.05	7.6	4.6	4.6	3.0	7.1	8.1	11.5	24.0		29.4	25.4
	FH52E-6S-0.5SH	CL580-3365-0-00	6	7.3	2.5	3.57	5.55	8.1	5.1	5.1	3.5	7.6	8.6	11.5	24.0		29.4	25.4
	FH52E-8S-0.5SH	CL580-3349-0-00	8	8.3	3.5	4.57	6.55	9.1	6.1	6.1	4.5	8.6	9.6	11.5	24.0	_	29.4	25.4
	FH52E-10S-0.5SH	CL580-3346-0-00	10	9.3	4.5	5.57	7.55	10.1	7.1	7.1	5.5	9.6	10.6	11.5	24.0	_	29.4	25.4
	FH52E-11S-0.5SH		11	9.8	5.0	6.07	8.05	10.6	7.6	7.6	6.0	10.1	11.1	11.5	24.0	_	29.4	25.4
	FH52E-12S-0.5SH		12	10.3	5.5	6.57	8.55	11.1	8.1	8.1	6.5	10.6	11.6	11.5	24.0	_	29.4	25.4
	FH52E-15S-0.5SH	CL580-3337-0-00	15	11.8	7.0	8.07	10.05	12.6	9.6	9.6	8.0	12.1	13.1	11.5	24.0	_	29.4	25.4
	FH52E-16S-0.5SH		16	12.3	7.5	8.57	10.55	13.1	10.1	10.1	8.5	12.6	13.6	11.5	24.0	_	29.4	25.4
	FH52E-18S-0.5SH	CL580-3331-3-00	18	13.3	8.5	9.57	11.55	14.1	11.1	11.1	9.5	13.6	14.6	11.5	24.0	_ [29.4	25.4
	FH52E-20S-0.5SH	CL580-3357-0-00	20	14.3	9.5	10.57	12.55	15.1	12.1	12.1	10.5	14.6	15.6	11.5	24.0	_ [29.4	25.4
	FH52E-22S-0.5SH	CL580-3343-2-00	22	15.3	10.5	11.57	13.55	16.1	13.1	13.1	11.5	15.6	16.6	14.2	32.0	28.4	37.4	33.4
	FH52E-24S-0.5SH	CL580-3340-4-00	24	16.3	11.5	12.57	14.55	17.1	14.1	14.1	12.5	16.6	17.6	14.2	32.0	28.4	37.4	33.4
	FH52E-25S-0.5SH		25	16.8	12.0	13.07	15.05	17.6	14.6	14.6	13.0	17.1	18.1	14.2	32.0	28.4	37.4	33.4
	FH52E-26S-0.5SH	CL580-3366-0-00	26	17.3	12.5	13.57	15.55	18.1	15.1	15.1	13.5	17.6	18.6	14.2	32.0	28.4	37.4	33.4
A	FH52E-28S-0.5SH		28	18.3	13.5	14.57	16.55	19.1	16.1	16.1	14.5	18.6	19.6	14.2	32.0	28.4	37.4	33.4
	FH52E-30S-0.5SH	CL580-3347-3-00	30	19.3	14.5	15.57	17.55	20.1	17.1	17.1	15.5	19.6	20.6	20.2	44.0	40.4	49.4	45.4
	FH52E-32S-0.5SH		32	20.3	15.5	16.57	18.55	21.1	18.1	18.1	16.5	20.6	21.6	20.2	44.0	40.4	49.4	45.4
	FH52E-40S-0.5SH	CL580-3334-1-00	40	24.3	19.5	20.57	22.55	25.1	22.1	22.1	20.5	24.6	25.6	20.2	44.0	40.4	49.4	45.4
	FH52E-42S-0.5SH		42	25.3	20.5	21.57	23.55	26.1	23.1	23.1	21.5	25.6	26.6	20.2	44.0	40.4	49.4	45.4
	FH52E-45S-0.5SH	CL580-3368-0-00	45	26.8	22.0	23.07	25.05	27.6	24.6	24.6	23.0	27.1	28.1	20.2	44.0	40.4	49.4	45.4
	FH52E-50S-0.5SH	CL580-3335-4-00	50	29.3	24.5	25.57	27.55	30.1	27.1	27.1	25.5	29.6	30.6	20.2	44.0	40.4	49.4	45.4
	FH52E-60S-0.5SH	CL580-3339-5-00	60	34.3	29.5	30.57	32.55	35.1	32.1	32.1	30.5	34.6	35.6	26.2	56.0	52.4	61.4	57.4
	FH52E-64S-0.5SH	CL580-3333-9-00	64	36.3	31.5	32.57	34.55	37.1	34.1	34.1	32.5	36.6	37.6	26.2	56.0	52.4	61.4	57.4
	FH52E-68S-0.5SH	CL580-3332-6-00	68	38.3	33.5	34.57	36.55	39.1	36.1	36.1	34.5	38.6	39.6	26.2	56.0	52.4	61.4	57.4

**CONTACT POSITIONS WITHOUT CODE NUMBERS ARE CURRENTLY UNDER PLANNING.

PLEASE CONTACT HIROSE FOR DETAILED INFORMATION ABOUT PRODUCT VARIATION.

	HS.	DRAWING NO.	EDC3-347552-01	
H		PART NO.	FH52E-**S-0.5SH	
		CODE NO.	CL580	A
			^	

FORM HC0011-5-8 1 2 3 4 5

This connector requires delicate and careful handling. Read through the instructions shown below and handle the connector properly. Each values indicating here are for reference and may differ from standard value.

INSTRUCTIONS FOR MOUNTING ON THE BOARD!

♦ Warp of Board

Minimize warp of the board as much as possible. Lead co-planarity including reinforced metal fittings is 0.1 mm or less. Too much warp of the board may result in a soldering failure.

♦Flexible board design

Please make sure to put a stiffener on the backside of the flexible board.

♦Load to Connector

INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR!

♦ Lord to Board

ecommend a glass epoxy mucc.

I to Connector
Do not add 1N or greater external force when unreel or pick and place the connector
or it may get broken.
In addition, do not insert the FFC/FPC or operate the connector before mounting it.

D


MONINTING THE CONNECTOR! Otherwise, the connector may become defective.


♦ Amount of Warp

FORM HC0011-5-8 1

The warp of a 100mm wide board should be 1 mm or less.

The warp of board suffers stress on connector and the connector may become defective.

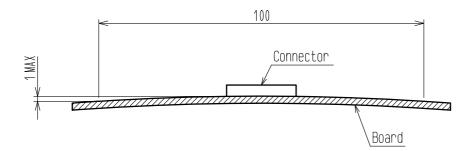

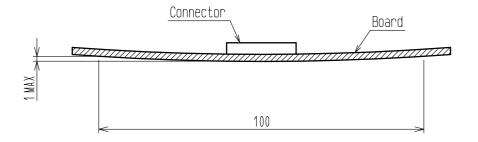


INSTRUCTIONS ON INSERTING FFC/FPC AND CONNECTION

♦ Use of the Actuator


1. Be very careful not to apply excessive force when releasing the actuator in the initial position.

If you use your nail or finger as shown below, the terminals may be deformed.

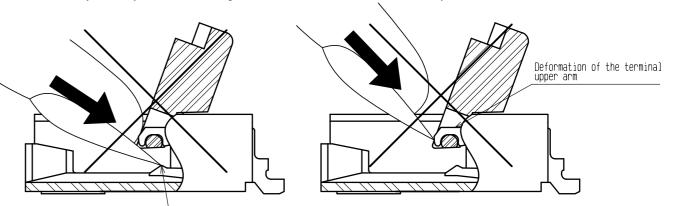


Deformation of the terminal

- 2. The actuator rotates around the rotational axis as shown below. Rotate the actuator.
- 3. The actuator will not open more than 110°. Do not apply any force backward beyond this point. Otherwise, the actuator may come off or break.

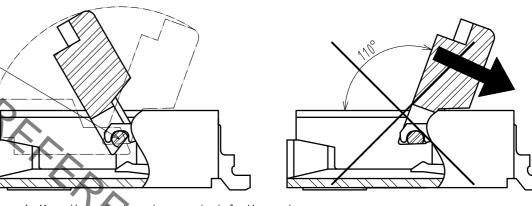

4. Move the actuator at approximately the center.
5. Do not pinch or pick the actuator to lift it as shown below. Otherwise, it may break. (Do not carry out any operation other than rotating the actuator as shown in 2 above.)

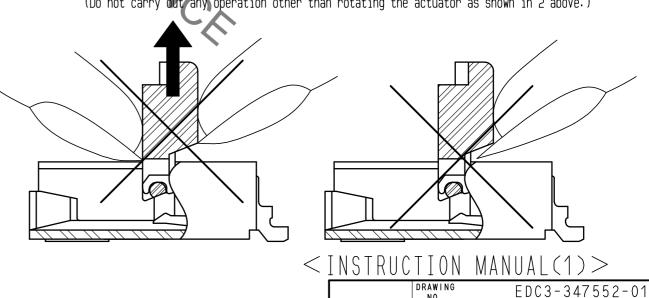


FH52E-**S-0.5SH

CL580

♦ Direction of Contacts

This connector has contacts on the bottom. Thus, insert FFC/FPC with the exposed conductors face down.

- ♦ Inserting the FFC/FPC
 - 1. Insert the FFC/FPC by about 10 degrees along the surface and at a right angle to the connector. Insert it properly to the very end.

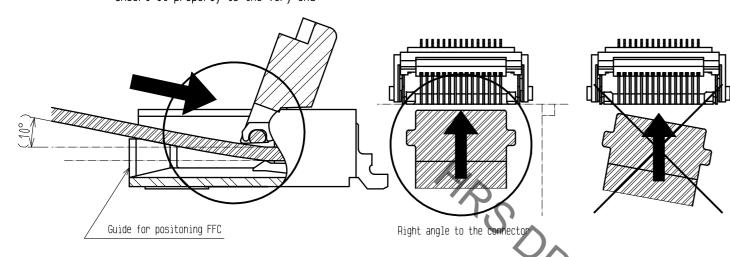


2. Do not insert the FFC/FPC diagonally from above.


If the FFC/FPC is inserted at a slant (incorrectly) as shown below in the FFC/FPC insertion process, the edge of the FFC/FPC may catch in the terminals, resulting in deformation of the terminals. The FFC/FPC may bend and patterns may break or the FFC may not insert completely, resulting in improper conduction.

*Keep a sufficient FFC/FPC insertion space in the stage of the layout in order to avoid incorrect FFC/FPC insertion.
Besides, it is not difficult to insert FFC/FPC correctly all the way to the end.
Design the proper layout of parts.

₩ Make adjustments with the FFC/FPC manufacturer for FFC/FPC bending perfomance and wire breakage.

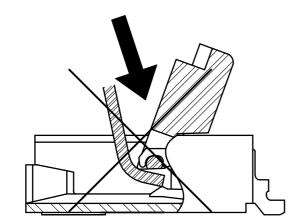

3. Do not rotate the actuator when FFC/FPC TAB is on right and left guides for positioning FFC/FPC. Make sure the position of FFC TAB and guides before rotate the actuator.

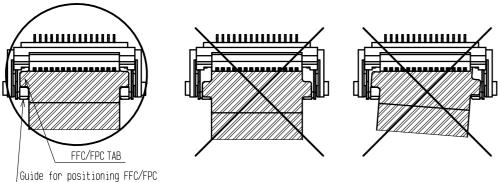

♦ Checking the Locking Condition

In the locked condition, make sure that the actuator is horizontal on the board surface. Do not apply excessive force to it near the 0° position of the actuator. Otherwise, the terminals may be deformed.


INSTRUCTIONS ON FFC/FPC LAYOUT AFTER CONNECTION

♦ Load to FFC/FPC

Be very careful not to apply any force to the connector directly after inserting FFC/FPC. Otherwise, the connector may become unlocked or the FFC/FPC may break. In particular, design the FFC/FPC layout with care not to bend it sharply upward in a vertial direction near the insertion opening.

Fix the FFC/FPC when loads are applied to it continuously.


Load:0.10 X n N MAX
(n:number of contacts)

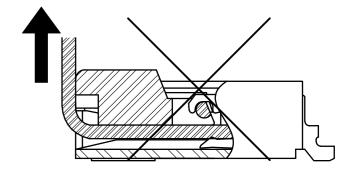

INSTRUCTIONS ON REMOVING FEC/FPCI

- ♦ Move the actuator at approximately the center.
- ♦ Release the actuator to remove the FFC/FPC.

 Remove the FFC/FPC by about 10 degrees along the surface.

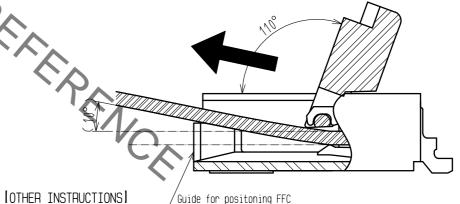

IOIIIEN INSTRUCTIONSI

♦ Instructions on Manual Soldering

Follow the instructions shown below when soldering the connector manually during repair work, etc.

- 1. Do not perform reflow soldering or manual soldering with the FFC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not use excessive solder (or flux). If excessive solder (or flux) is used on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator. Supplying excessive solder to the reinforcing bracket may hinder actuator rotation, resulting in breakage of the connector.

<INSTRUCTION MANUAL(2)>

PART FH52E-**S-0.5SH CODE CL580		DRAWING NO.	EDC3-347552-01		
	HR5		FH52E-**S-0.5SH		
NO. 02300 [25]		CODE NO.	CL580	\triangle	6/6

FORM HC0011-5-8 1 2 3 4 5

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for FFC & FPC Connectors category:

Click to view products by Hirose manufacturer:

Other Similar products are found below:

K-FC20 FH29B-80S-0.2SHW(99) FPH-2022G AYF332735 52610-1075 52610-1275 52610-1934 501864-3091-TR225 086222026001800 52610-0675 62684-36210E9ALF 52746-1671-TR250 10051922-2810EHLF 6-520415-9 SFV6R-1STE9HLF XF3M-2915-1B-R100 1658549-1 46214008010800 AYF534065TA AYF351525 086212040340800+ AYF530365TA 67000-014LF 67000-004LF 006207341915000+ DS1020-19RT1D 67000-003LF 67000-011LF 67000-016LF HFW14R-2STE9LF SFV32R-2STBE9HLF SFW12R-5STE9LF SFW18R-1STAE9LF SFW4R-5STE9LF 52807-0430 046283021002868+ THD1015-8CL-SN 67000-006LF 502250-8027 104267-9617 66987-011LF AYF362535 F0501-T-50-20T-R HFW8S-2STAE1HLF 67000-008LF 67000-012LF ECC576069EU F1002-B-20-20T-R HFW15S-2STAE1HLF 0781271110