


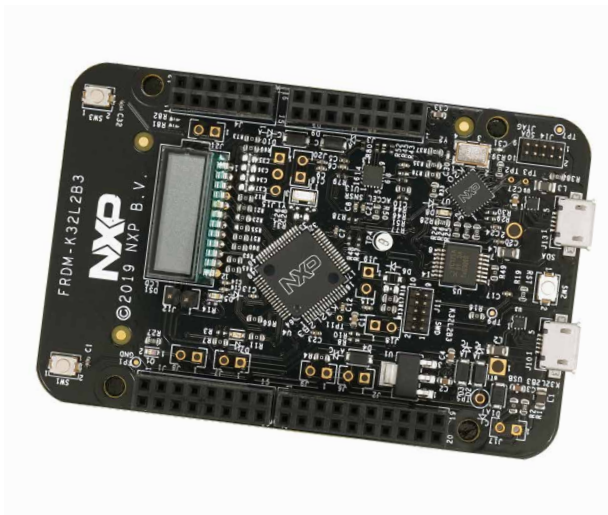

QUICK START GUIDE

FREEDOM DEVELOPMENT PLATFORM

FRDM-K32L2B3



GET TO KNOW THE FRDM-K32L2B3

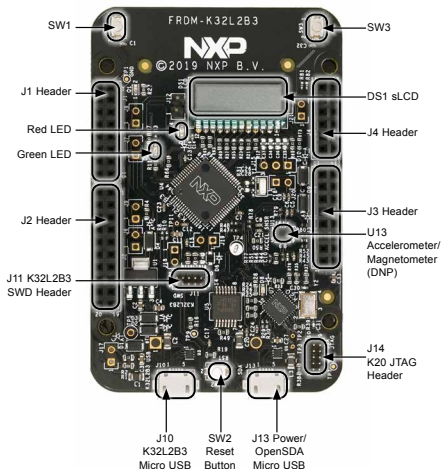


Figure 1: FRDM-K32L2B3 Callouts

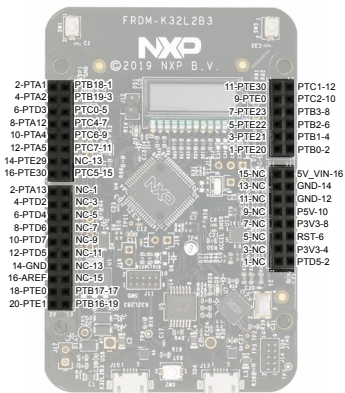


Figure 2: FRDM-K32L2B3 Pin-Outs

HOW TO GET STARTED

1. Connect the FRDM-K32L2B3 development board to a PC using the included micro-USB cable to the Power/OpenSDA Micro USB connector (J13).
2. When the board is powered up, a green LED (D8) will illuminate, indicating 3.3V is on. Notice that Boot ROM code is executed first out of reset, a time of about three seconds are consumed by ROM bootloader to check the active communication port before application code is executed.
3. The FRDM-K32L2B3 board comes preprogrammed with a demo that will initiate the LED on the board to flash periodically when plugged in.
4. J10 is the USB connector of K32L2B3 on chip USB module.
5. J14 is the K20 JTAG header for OpenSDA firmware update.
6. J11 is the SWD header for K32L2B3.
7. Explore more out-of-box demos and download software and tools at www.nxp.com/FRDM-K32L2B3.



GET STARTED

Download installation software
and documentation under
“Jump Start Your Design” at
www.nxp.com/FRDM-K32L2B3

SUPPORT

Visit **www.nxp.com/support** for a list of phone numbers within your region.

WARRANTY

Visit **www.nxp.com/warranty** for complete warranty information.



www.nxp.com

NXP and the NXP logo are trademarks of NXP B.V. All other product or service names are the property of their respective owners. © 2021 NXP B.V.

Document Number: FRDMK32L2B3QSG REV 1

Agile Number: 926-46355 REV B

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Development Boards & Kits - ARM](#) category:

Click to view products by [NXP](#) manufacturer:

Other Similar products are found below :

[OM13090UL](#) [ZDSD-Pinboard](#) [LKS32MC077MBS8-K](#) [LKS32MC074DOF8Q8-K](#) [LKS32MC038Y6P8-k](#) [XDS601](#) [LKS32MC033H6P8B-K](#)
[Ra-08H-Kit](#) [PB-03M-Kit](#) [Ai-WB2-13-Kit](#) [PB-03F-Kit](#) [Ra-08-Kit](#) [Hi-07SL-Kit](#) [PB-03-Kit](#) [FT8132Q-3HALL-FOC+EMF](#) [FU6832L-TGB-](#)
[DEMO](#) [APM32F072VBT6](#) [APM32F091VC MINI](#) [HLK-V20-SUIT](#) [JLC-DIG01](#) [JLC-DIG02](#) [LKS32MC057EM6S8-K](#) [LKS32MC088C6T8-](#)
[K](#) [LKS32AT039PXL5G6Q9B-K](#) [LKS32MC074DF8Q8-K](#) [LKS32MC081C8T8-K](#) [LKS32MC057M6S8-K](#) [LKS32MC082K8Q8-K](#)
[LKS32MC037M6S8B-K](#) [R7FA6M5BH3CFC](#) [RP2040-Zero](#) [ESP32-S3-Pico](#) [RP2040-LCD-1.28](#) [SN65HVD230 CAN Board](#) [Luckfox Pico](#)
[RP2040-LCD-0.96](#) [CH32V307V-EVT-R1](#) [YM02-AM02](#) [MQTT ANYWHERE KIT - SIM868](#) [W5500-EVB-PICO](#) [MQTT ANYWHERE KIT](#)
[- SARA-R410M](#) [OLIMEXINO-GD32](#) [M815NEVB](#) [M326LZBA](#) [Raspberry Pi 5 4GB](#) [Raspberry Pi 5 8GB](#) [MKSDTestBoard-D](#)
[LKS32MC455LRCT8-K](#) [MKIDNV2911](#) [MKIDV1811](#)