



SD50 Status Display Product Manual

Original Instructions

p/n: 242994 Rev. E

01-Jul-25

© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Contents

Chapter 1 Features	3
Models	3
Chapter 2 Wiring.....	4
Chapter 3 Pro Editor Configuration for the SD50 Pro LED Status Display	5
Full Preview Connection (Required)	6
Discrete Control.....	6
Basic I/O State	6
Advanced I/O State	7
I/O Block I/O State	7
Sequence Mode	8
Timer Mode.....	8
Counter Mode.....	9
Measure Mode.....	9
Pulse Control	10
Factory Reset	11
Display Settings.....	11
Chapter 4 Specifications	13
FCC Part 15 Class B for Unintentional Radiators.....	13
Industry Canada ICES-003(B).....	14
Dimensions.....	14
Chapter 5 Accessories.....	15
Cordsets	15
Mounting Brackets.....	15
Chapter 6 Product Support and Maintenance	17
UTF-8 Encoding Table and Unicode Characters	17
Clean with Mild Detergent and Warm Water	21
Repairs	21
Contact Us.....	22
Banner Engineering Corp Limited Warranty	22


Chapter Contents

Models 3

Chapter 1

Features

Provide More Status Information in the Most Helpful Locations



- Easily configurable, versatile display can be installed nearly anywhere, making it a simple yet powerful alternative to complex HMIs and other displays
- Great for displaying takt time, equipment status, assembly sequences, counts, and measurements where they are most useful
- Integrates into many different systems and applications, especially Banner sensing, safety, and monitoring solutions
- Quick and easy configuration—simply define the desired text and call it via discrete control or process data
- Bright white LED display and multicolored status LEDs legible from 10 meters away inform operators about exactly what is going on so they can respond quickly and accurately
- IP65-rated polycarbonate housing resists impact and condensation to provide clear communication in challenging and changing environmental conditions

Models

Model Key


Series	Height	Style	Display Length	Display Text Color	Control	Connector ⁽¹⁾
SD	50	P	300	W	D15	QP
Status Display	50 mm height	P = Pro	300 = 300 mm	W = White	D15 = Discrete 15 states	QP = 150 mm (6 in) PVC-jacketed cable with a 5-pin M12 male quick-disconnect connector

⁽¹⁾ Models with a quick-disconnect connector require a mating cordset.

Chapter 2

Wiring

Wiring

5-Pin Male M12 Pinout	Pinout Key and Wiring
	1. Brown - Input 2 2. White - Input 3 3. Blue - DC Common 4. Black - Input 1 5. Gray - Input 4

Chapter Contents

Full Preview Connection (Required).....	6
Discrete Control.....	6
Sequence Mode	8
Timer Mode	8
Counter Mode.....	9
Measure Mode	9
Pulse Control.....	10
Factory Reset.....	11
Display Settings.....	11

Chapter 3

Pro Editor Configuration for the SD50
Pro LED Status Display

Applications





DISCRETE CONTROL



SEQUENCE



FACTORY RESET



TIMER



COUNTER



DISPLAY SETTINGS



MEASURE




PULSE CONTROL

Banner's Pro Editor software offers an easy way to configure Pro Series-enabled indication, touch, and illumination devices, allowing users full control of device states and device logic modes. The easy-to-use configuration software provides a variety of tools and capabilities to solve a wide range of applications such as indicating machine status or warm-up time, indicating unique steps in an assembly process, or incorporating status information into touch buttons.

Setup any Pro Series-enabled device using the free Pro Editor software, available for download at www.bannerengineering.com/proeditor.

Full Preview Connection (Required)

The full preview connection must be used for the SD50 Status Display.


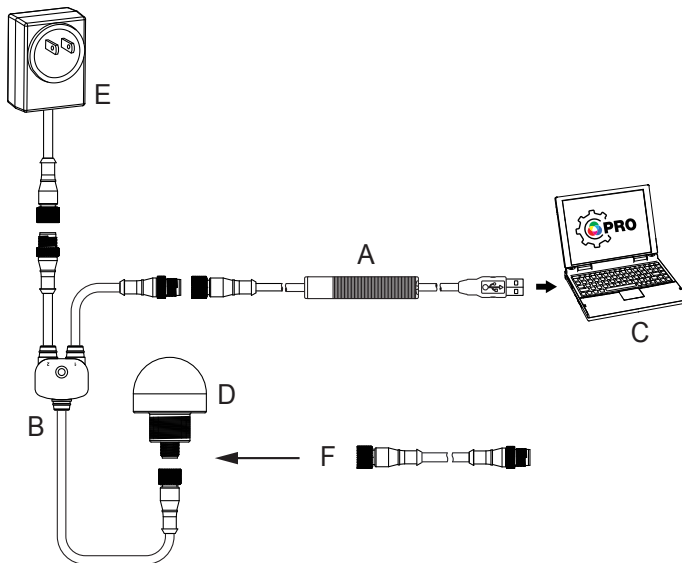


A = Pro Converter Cable (MQDC-506-USB)
 B = Splitter (CSB-M1251FM1251M)
 C = PC running Pro Editor software
 D = Any Banner Pro Series-enabled device (K50 shown)
 E = Power Supply (PSW-24-1, PSW-24-2, or PSD-24-4)
 F = 8-Pin to 5-Pin Double-Ended Cordset (MQDC-801-5M-PRO), required for 8-Pin models

Discrete Control

Selecting the Discrete Control tile displays three I/O State tiles:

- Basic
- Advanced
- I/O Block

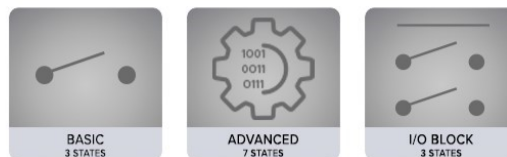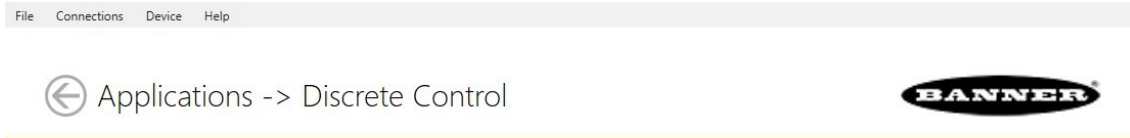

Basic I/O State

Basic four-state control. Configurations made in Basic I/O State assign one wire to one state, with the following override control:

- Pin 1 (Brown) overrides Pin 4 (Black)
- Pin 2 (White) overrides Pins 1 and 4 (Brown and Black)
- Pin 5 (Gray) overrides Pins 1, 2, and 4 (Brown, White, and Black)

← Applications -> Discrete Control -> Basic

BANNER

Preview	Device State	Animation	Color 1	Intensity 1	Color 2	Intensity 2	Speed	Pattern	Display Text
Start	Black Wire (Pin 4)	Off							SD50 State 1!
Start	Brown Wire (Pin 1)	Off							SD50 State 2!
Start	White Wire (Pin 2)	Off							SD50 State 4!
Start	Gray Wire (Pin 5)	Off							SD50 State 8!

Read Device Settings Write Device Settings

Wiring Diagram **BANNER**

Advanced I/O State

Advanced, default I/O state, with fifteen state options for maximum configuration ability. Configurations made in Advanced I/O State assign binary wiring combinations of all valid inputs to each state. Both the indication LEDs and the display text can be programmed for each of the states.

← Applications -> Discrete Control -> Advanced

BANNER

Preview	Device State	Animation	Color 1	Intensity 1	Color 2	Intensity 2	Speed	Pattern	Display Text
Start	Black Wire (Pin 4)	Off							SD50 State 1!
Start	Brown Wire (Pin 1)	Off							SD50 State 2!
Start	White Wire (Pin 2)	Off							SD50 State 4!
Start	Gray Wire (Pin 5)	Off							SD50 State 8!
Start	Black & Brown	Off							SD50 State 3!
Start	Black & White	Off							SD50 State 5!
Start	Black & Gray	Off							SD50 State 9!
Start	Brown & White	Off							SD50 State 6!
Start	Brown & Gray	Off							SD50 State 10!
Start	White & Gray	Off							SD50 State 12!
Start	Black & Brown & White	Off							SD50 State 7!
Start	Black & Brown & Gray	Off							SD50 State 11!
Start	Black & White & Gray	Off							SD50 State 13!
Start	Brown & White & Gray	Off							SD50 State 14!
Start	All 4 Wires	Off							SD50 State 15!

Read Device Settings Write Device Settings

Wiring Diagram **BANNER**

I/O Block I/O State

Three-state control for use with I/O block. Configurations made in I/O Block assign state to the black, white, and combination of black and white wires for use with the I/O blocks, for which power (brown) and common (blue) are always on for five-pin connections.

← Applications -> Discrete Control -> I/O Block

BANNER


Preview	Device State	Animation	Color 1	Intensity 1	Color 2	Intensity 2	Speed	Pattern	Display Text
Start	Black (Pin 4)	Off							SD50 State 3!
Start	White (Pin 2)	Off							SD50 State 6!
Start	Black & White	Off							SD50 State 7!

Read Device Settings Write Device Settings

Wiring Diagram **BANNER**

Sequence Mode


Sequence Mode allows up to sixteen states that a single input can control. A pulse on the input wire moves the SD50 to the next state.

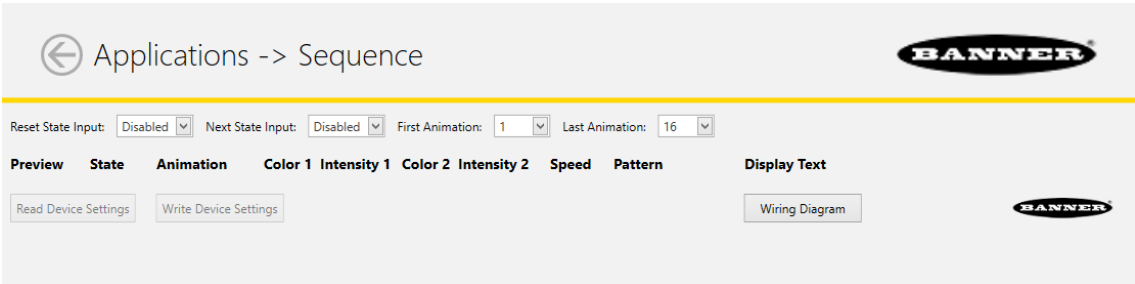

Reset State Input	Choose the desired input wire to restart the SD50 to the First Animation as chosen in the dropdown menu.
Next State Input	Choose the desired input wire to move SD50 to the next state in the series until the Last Animation is reached.
First Animation	Choose the initial state to display as the sequence is initiated.
Last Animation	Choose the final state to include in the sequence.

Timer Mode

Set a total time and up to four thresholds. Start and stop the timer counting up or down with discrete control. Colors change across threshold values.

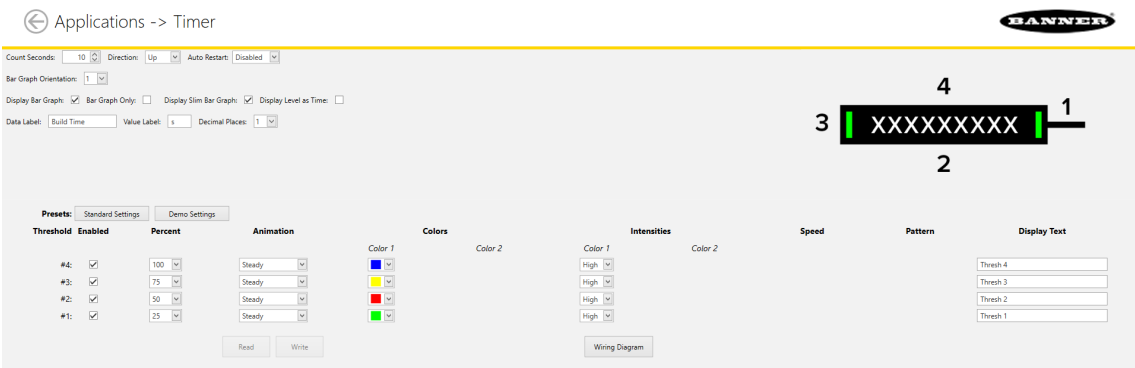

Count Seconds	The total time of the timer.
Direction	Up: Counts up from zero to Count Seconds. Down: Counts down from Count Seconds to zero.
Reset Input	Enable or disable the input wire to reset the timer to the initial value.
Auto Restart	The timer loops back to the original value automatically when it reaches its final value.

Bar Graph Orientation	Determine the starting side of the bar graph. The direction of the graph is determined by the direction of the timer.
Decimal Places	Determine the number of decimal places displayed on the Count Value.
Display Graph Only	Only display the bar graph, and not the numerical Count Value.
Display Bar Graph	Display the bar graph across the full display.
Display Slim Bar Graph	Display the bar graph as a single line of LEDs.
Display Level as Time	Display the time in HH:MM:SS format without data labels.
Data Label	Text that displays before the Count Value.


Continued on page 9

Continued from page 8

Value Label	Text that displays after the Count Value to indicate the units displayed. This can be up to three characters.
Standard Settings	Reset the SD50 to predetermined settings.

Counter Mode

Set a total count and up to four thresholds. Discrete, rising edge pulses count up or down. Colors change across threshold values.

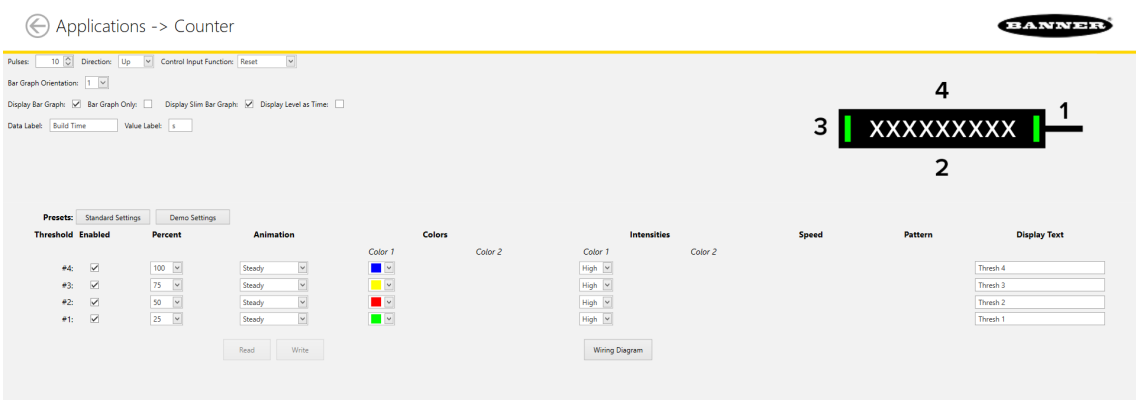


Pulses	Determine the number of counts that are either counted up to or counted down from, depending on the chosen direction.
Direction	Up: Counts from zero to Pulses. Down: Counts from Pulses to zero.
Reset Input	Enable or disable the input wire to reset the count to the initial value.

Bar Graph Orientation	Determine the starting side of the bar graph. The direction of the graph is determined by the direction of the timer.
Decimal Places	Determine the number of decimal places displayed on the Count Value.
Display Graph Only	Only display the bar graph, and not the numerical Count Value.
Display Bar Graph	Display the bar graph across the full display.
Display Slim Bar Graph	Display the bar graph as a single line of LEDs.
Data Label	Text that displays before the Count Value.
Value Label	Text that displays after the Count Value to indicate the units displayed. This can be up to three characters.
Standard Settings	Reset the SD50 to predetermined settings.

Measure Mode

Measure Mode uses the SD50 to display a measurement as either PWM control or PFM control.

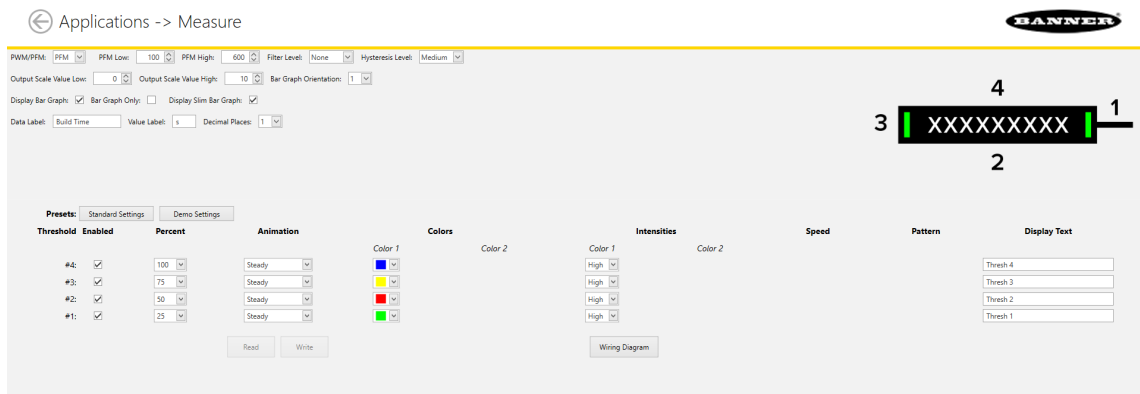

PWM/PFM	PWM: Pulse-Width Modulation. PFM: Pulse-Frequency Modulation.
PWM/PFM Low	The lowest frequency of the input range.
PWM/PFM High	The highest frequency of the input range.
Filter Level	The level of filtering used to minimize the effects of noise on the output.
Hysteresis Level	The level of lag between the measurement thresholds to minimize the flickering at switch points.
Output Scale Value Low	The low-end value of the output translated from the input frequency.
Output Scale Value High	The high-end value of the output translated from the input frequency.

Bar Graph Orientation	Determine the starting side of the bar graph. The direction of the graph is determined by the direction of the timer.
Decimal Places	Determine the number of decimal places displayed on the Count Value.
Display Graph Only	Only display the bar graph, and not the numerical Count Value.
Display Bar Graph	Display the bar graph across the full display.
Display Slim Bar Graph	Display the bar graph as a single line of LEDs.
Display Level as Time	Display the time in HH:MM:SS format without data labels.
Data Label	Text that displays before the Count Value.
Value Label	Text that displays after the Count Value to indicate the units displayed. This can be up to three characters.
Standard Settings	Reset the SD50 to predetermined settings.

Pulse Control

Selecting the Pulse Control tile displays up to sixteen states that correspond to input frequencies on the white wire. The number of states (1) and input characteristics (2) are user-defined. Ranges are calculated (3).

Applications -> Pulse Control

Number of States: 16

PWM/PFM: PFM

PFM Low: 100

PFM High: 600

Preview	State	Animation	Color 1	Intensity 1	Color 2	Intensity 2	Speed	Pattern	Display Text	Range (Hz)
Start	1	Off							SD50 State 0!	100 - 131
Start	2	Off							SD50 State 1!	131 - 163
Start	3	Off							SD50 State 2!	163 - 194
Start	4	Off							SD50 State 3!	194 - 225
Start	5	Off							SD50 State 4!	225 - 256
Start	6	Off							SD50 State 5!	256 - 288
Start	7	Off							SD50 State 6!	288 - 319
Start	8	Off							SD50 State 7!	319 - 350
Start	9	Off							SD50 State 8!	350 - 381
Start	10	Off							SD50 State 9!	381 - 413
Start	11	Off							SD50 State 10!	413 - 444
Start	12	Off							SD50 State 11!	444 - 475
Start	13	Off							SD50 State 12!	475 - 506
Start	14	Off							SD50 State 13!	506 - 538
Start	15	Off							SD50 State 14!	538 - 569
Start	16	Off							SD50 State 15!	569 - 600

Number of States	Determine the number of states from 1 to 16.
PWM/PFM	Select either PWM (Pulse Width Modulation) or PFM (Pulse Frequency Modulation) as the device's input.
PWM/PFM Low	Determine the low end of the input signal range.
PWM/PFM High	Determine the high end of the input signal range.

Factory Reset

Restore the SD50 to default settings.

Display Settings

Display Settings are a type of advanced settings that are accessible across all Applications.

Advanced Settings

Display Settings

Text Color: White

Brightness: High

Scroll Direction: Away From Connector

Scroll Speed: Standard

Scroll Mode: Auto

Connector Orientation: Right

Text Justification: Left

Mirror: Disabled

Confirm

Text Color	Configure the primary text color as either white or black.
Brightness	Control the brightness of the display text.
Scroll Direction	Scroll the display text either toward or away from the connector.
Scroll Speed	Control the speed the display text scrolls.
Scroll Mode	Auto: Scrolls if the number of characters is greater than sixteen. Off: Does not scroll the display text. On: Scrolls the display text regardless of the number of characters.
Connector Orientation	Determine the orientation of the connector when installed. The display text automatically adjusts to the correct orientation.
Text Justification	Control the alignment of the display text: left, right, or center.
Mirror	Enable this setting to reverse the display text so that it can be read in a mirror.

Chapter Contents

FCC Part 15 Class B for Unintentional Radiators	13
Industry Canada ICES-003(B).....	14
Dimensions.....	14

Chapter 4 Specifications

Supply Voltage

12 V DC to 30 V DC

Use only with a suitable Class 2 power supply (UL) or SELV power supply (CE)

Supply Current

550 mA max. at 12 V DC

260 mA max. at 24 V DC

210 mA max. at 30 V DC

Connections

150 mm (6 in) PVC-jacketed cable with a 5-pin M12 male quick-disconnect connector

Models with a quick-disconnect connector require a mating cordset

Do not spray cable with high-pressure sprayer or cable damage will result

Operating Temperature

−40 °C to +50 °C (−40 °F to +122 °F)

Storage Temperature

−40 °C to +70 °C (−40 °F to +158 °F)

Environmental Rating

Rated IP65

Suitable for damp locations per UL 2108

Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 1.0 mm amplitude, 5 minutes sweep, 30 minutes dwell)

Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

Construction

Black polycarbonate housing and end caps

Internal silicone-encapsulated LEDs

Smoky polycarbonate window

Character Limit

Discrete Control: 29 characters

All other Modes: 32 characters

Certifications



Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM



Animations

Animation	Description
Off	Light is off
Steady	Color 1 is solid on at a defined intensity
Flash	Color 1 flashes at a defined speed, color intensity, and pattern (Normal, Strobe, Three Pulse, SOS, or Random)
Two Color Flash	Color 1 and Color 2 flash alternately at defined speed, color intensities, and pattern (Normal, Strobe, Three Pulse, SOS, or Random)
50/50	Color 1 and Color 2 are solid at a defined intensity
50/50 Flash	Color 1 and Color 2 flash at a defined speed, color intensity, and pattern (Normal, Strobe, Three Pulse, SOS, or Random)
Intensity Sweep	Color 1 repeatedly increases and decreases intensity between 0% to 100% at defined speed and color intensity
Two Color Sweep	Color 1 and Color 2 define the end values of a line across the color gamut. The light continuously displays a color by moving along the line at the defined speed and color intensities

Required Overcurrent Protection



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (A)	Supply Wiring (AWG)	Required Overcurrent Protection (A)
20	5.0	26	1.0
22	3.0	28	0.8
24	1.0	30	0.5

Mounting

M5 and 1/4-20 compatible end caps (not included)

Clip brackets for mounting are available

FCC Part 15 Class B for Unintentional Radiators

(Part 15.105(b)) This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate

radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

(Part 15.21) Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.


Industry Canada ICES-003(B)

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme NMB-3(B). Le fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne peut pas occasionner d'interférences, et (2) il doit tolérer toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité du dispositif.

Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

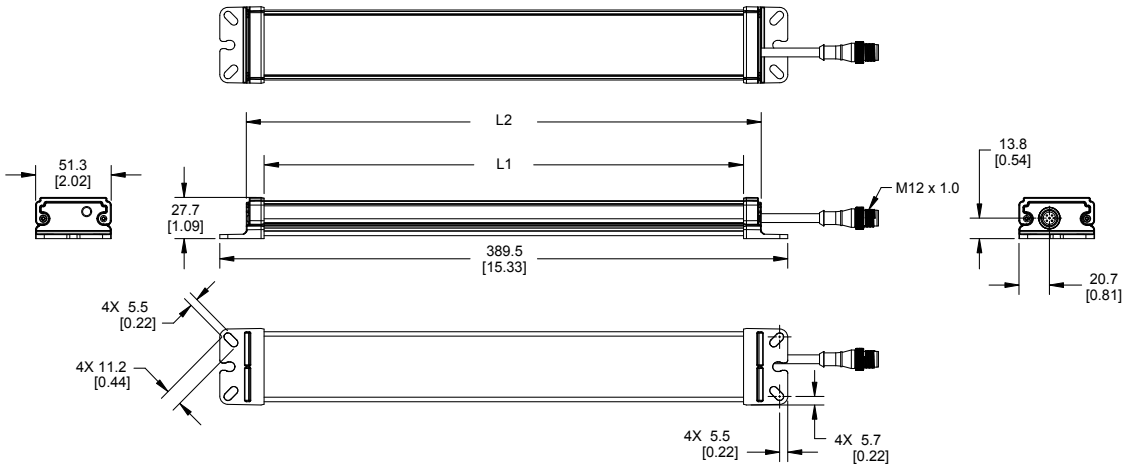

Models	L1	L2
SD50..300..	329.5 mm (12.97 in)	353.5 mm (13.92 in)

Chapter Contents	
Cordsets	15
Mounting Brackets.....	15

Chapter 5

Accessories


Cordsets

All measurements are listed in millimeters [inches], unless noted otherwise. The measurements provided are subject to change.

5-pin A-Code Double-Ended M12 Female to M12 Male Cordsets						
Model	Length	Dimensions (mm)		Pinouts		
BC-M12F5-M12M5-22-1	1 m (3.28 ft)			Female 	1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray	
BC-M12F5-M12M5-22-2	2 m (6.56 ft)			Male 		
BC-M12F5-M12M5-22-5	5 m (16.4 ft)					
BC-M12F5-M12M5-22-8	8 m (26.25 ft)					
BC-M12F5-M12M5-22-10	10 m (30.81 ft)					
BC-M12F5-M12M5-22-15	15 m (49.2 ft)					


5-pin A-Code Double-Ended M12 Female Right-Angle to M12 Male Right-Angle Cordsets					
Model	Length	Dimensions (mm)	Pinouts		
BC-M12F5A-M12M5A-22-1	1 m (3.28 ft)		Female 	1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray	
BC-M12F5A-M12M5A-22-2	2 m (6.56 ft)		Male 		
BC-M12F5A-M12M5A-22-5	5 m (16.4 ft)				
BC-M12F5A-M12M5A-22-8	8 m (26.25 ft)				
BC-M12F5A-M12M5A-22-10	10 m (30.81 ft)				
BC-M12F5A-M12M5A-22-15	15 m (49.2 ft)				

Mounting Brackets

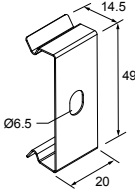
LMBSD50 • Metal mounting bracket kit • Hardware included	
--	---

LMBSD50MAG


- Magnetic mounting bracket kit
- Up to 7.26 kg (16 lb) pull
- Hardware included

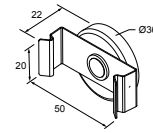**LMBSD50-180S**

- Metal mounting bracket kit with 180-degree rotation
- Stainless steel
- Hardware included

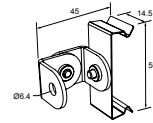**LMBSD50-180SMAG**

- Magnetic mounting bracket kit with 180-degree rotation
- Stainless steel
- Up to 7.26 kg (16 lb) pull
- Hardware included



Chapter Contents

UTF-8 Encoding Table and Unicode Characters.....	17
Clean with Mild Detergent and Warm Water	21
Repairs	21
Contact Us.....	22
Banner Engineering Corp Limited Warranty.....	22

Chapter 6 Product Support and Maintenance

UTF-8 Encoding Table and Unicode Characters

Unicode Code Point	Character	UTF-8 (hex.)	Name
U+0020		20	SPACE
U+0021	!	21	EXCLAMATION MARK
U+0022	"	22	QUOTATION MARK
U+0023	#	23	NUMBER SIGN
U+0024	\$	24	DOLLAR SIGN
U+0025	%	25	PERCENT SIGN
U+0026	&	26	AMPERSAND
U+0027	'	27	APOSTROPHE
U+0028	(	28	LEFT PARENTHESIS
U+0029	)	29	RIGHT PARENTHESIS
U+002A	*	2a	ASTERISK
U+002B	+	2b	PLUS SIGN
U+002C	,	2c	COMMA
U+002D	-	2d	HYPHEN-MINUS
U+002E	.	2e	FULL STOP
U+002F	/	2f	SOLIDUS
U+0030	0	30	DIGIT ZERO
U+0031	1	31	DIGIT ONE
U+0032	2	32	DIGIT TWO
U+0033	3	33	DIGIT THREE
U+0034	4	34	DIGIT FOUR
U+0035	5	35	DIGIT FIVE
U+0036	6	36	DIGIT SIX
U+0037	7	37	DIGIT SEVEN
U+0038	8	38	DIGIT EIGHT
U+0039	9	39	DIGIT NINE
U+003A	:	3a	COLON
U+003B	;	3b	SEMICOLON
U+003C	<	3c	LESS-THAN SIGN
U+003D	=	3d	EQUALS SIGN
U+003E	>	3e	GREATER-THAN SIGN

Continued on page 18

Continued from page 17

Unicode Code Point	Character	UTF-8 (hex.)	Name
U+003F	?	3f	QUESTION MARK
U+0040	@	40	COMMERCIAL AT
U+0041	A	41	LATIN CAPITAL LETTER A
U+0042	B	42	LATIN CAPITAL LETTER B
U+0043	C	43	LATIN CAPITAL LETTER C
U+0044	D	44	LATIN CAPITAL LETTER D
U+0045	E	45	LATIN CAPITAL LETTER E
U+0046	F	46	LATIN CAPITAL LETTER F
U+0047	G	47	LATIN CAPITAL LETTER G
U+0048	H	48	LATIN CAPITAL LETTER H
U+0049	I	49	LATIN CAPITAL LETTER I
U+004A	J	4a	LATIN CAPITAL LETTER J
U+004B	K	4b	LATIN CAPITAL LETTER K
U+004C	L	4c	LATIN CAPITAL LETTER L
U+004D	M	4d	LATIN CAPITAL LETTER M
U+004E	N	4e	LATIN CAPITAL LETTER N
U+004F	O	4f	LATIN CAPITAL LETTER O
U+0050	P	50	LATIN CAPITAL LETTER P
U+0051	Q	51	LATIN CAPITAL LETTER Q
U+0052	R	52	LATIN CAPITAL LETTER R
U+0053	S	53	LATIN CAPITAL LETTER S
U+0054	T	54	LATIN CAPITAL LETTER T
U+0055	U	55	LATIN CAPITAL LETTER U
U+0056	V	56	LATIN CAPITAL LETTER V
U+0057	W	57	LATIN CAPITAL LETTER W
U+0058	X	58	LATIN CAPITAL LETTER X
U+0059	Y	59	LATIN CAPITAL LETTER Y
U+005A	Z	5a	LATIN CAPITAL LETTER Z
U+005B	[	5b	LEFT SQUARE BRACKET
U+005C	\	5c	REVERSE SOLIDUS
U+005D	]	5d	RIGHT SQUARE BRACKET
U+005E	^	5e	CIRCUMFLEX ACCENT
U+005F	_	5f	LOW LINE
U+0060	`	60	GRAVE ACCENT
U+0061	a	61	LATIN SMALL LETTER A
U+0062	b	62	LATIN SMALL LETTER B
U+0063	c	63	LATIN SMALL LETTER C
U+0064	d	64	LATIN SMALL LETTER D
U+0065	e	65	LATIN SMALL LETTER E
U+0066	f	66	LATIN SMALL LETTER F
U+0067	g	67	LATIN SMALL LETTER G
U+0068	h	68	LATIN SMALL LETTER H

Continued on page 19

Continued from page 18

Unicode Code Point	Character	UTF-8 (hex.)	Name
U+0069	i	69	LATIN SMALL LETTER I
U+006A	j	6a	LATIN SMALL LETTER J
U+006B	k	6b	LATIN SMALL LETTER K
U+006C	l	6c	LATIN SMALL LETTER L
U+006D	m	6d	LATIN SMALL LETTER M
U+006E	n	6e	LATIN SMALL LETTER N
U+006F	o	6f	LATIN SMALL LETTER O
U+0070	p	70	LATIN SMALL LETTER P
U+0071	q	71	LATIN SMALL LETTER Q
U+0072	r	72	LATIN SMALL LETTER R
U+0073	s	73	LATIN SMALL LETTER S
U+0074	t	74	LATIN SMALL LETTER T
U+0075	u	75	LATIN SMALL LETTER U
U+0076	v	76	LATIN SMALL LETTER V
U+0077	w	77	LATIN SMALL LETTER W
U+0078	x	78	LATIN SMALL LETTER X
U+0079	y	79	LATIN SMALL LETTER Y
U+007A	z	7a	LATIN SMALL LETTER Z
U+007B	{	7b	LEFT CURLY BRACKET
U+007C		7c	VERTICAL LINE
U+007D	}	7d	RIGHT CURLY BRACKET
U+007E	~	7e	TILDE
U+00A0		c2 a0	NO-BREAK SPACE
U+00A1	¡	c2 a1	INVERTED EXCLAMATION MARK
U+00A2	¢	c2 a2	CENT SIGN
U+00A3	£	c2 a3	POUND SIGN
U+00A4	¤	c2 a4	CURRENCY SIGN
U+00A5	¥	c2 a5	YEN SIGN
U+00A6	¦	c2 a6	BROKEN BAR
U+00A7	§	c2 a7	SECTION SIGN
U+00A8	¨	c2 a8	DIAERESIS
U+00A9	©	c2 a9	COPYRIGHT SIGN
U+00AA	ª	c2 aa	FEMININE ORDINAL INDICATOR
U+00AB	«	c2 ab	LEFT-POINTING DOUBLE ANGLE QUOTATION MARK
U+00AC	¬	c2 ac	NOT SIGN
U+00AD		c2 ad	SOFT HYPHEN
U+00AE	®	c2 ae	REGISTERED SIGN
U+00AF	—	c2 af	MACRON
U+00B0	°	c2 b0	DEGREE SIGN
U+00B1	±	c2 b1	PLUS-MINUS SIGN
U+00B2	²	c2 b2	SUPERSCRPT TWO
U+00B3	³	c2 b3	SUPERSCRPT THREE

Continued on page 20

Continued from page 19

Unicode Code Point	Character	UTF-8 (hex.)	Name
U+00B4	´	c2 b4	ACUTE ACCENT
U+00B5	µ	c2 b5	MICRO SIGN
U+00B6	¶	c2 b6	PILCROW SIGN
U+00B7	·	c2 b7	MIDDLE DOT
U+00B8	¸	c2 b8	CEDILLA
U+00B9	¹	c2 b9	SUPERSCRIPT ONE
U+00BA	º	c2 ba	MASCULINE ORDINAL INDICATOR
U+00BB	»	c2 bb	RIGHT-POINTING DOUBLE ANGLE QUOTATION MARK
U+00BC	¼	c2 bc	VULGAR FRACTION ONE QUARTER
U+00BD	½	c2 bd	VULGAR FRACTION ONE HALF
U+00BE	¾	c2 be	VULGAR FRACTION THREE QUARTERS
U+00BF	¿	c2 bf	INVERTED QUESTION MARK
U+00C0	À	c3 80	LATIN CAPITAL LETTER A WITH GRAVE
U+00C1	Á	c3 81	LATIN CAPITAL LETTER A WITH ACUTE
U+00C2	Â	c3 82	LATIN CAPITAL LETTER A WITH CIRCUMFLEX
U+00C3	Ã	c3 83	LATIN CAPITAL LETTER A WITH TILDE
U+00C4	Ä	c3 84	LATIN CAPITAL LETTER A WITH DIAERESIS
U+00C5	Å	c3 85	LATIN CAPITAL LETTER A WITH RING ABOVE
U+00C6	Æ	c3 86	LATIN CAPITAL LETTER AE
U+00C7	Ç	c3 87	LATIN CAPITAL LETTER C WITH CEDILLA
U+00C8	È	c3 88	LATIN CAPITAL LETTER E WITH GRAVE
U+00C9	É	c3 89	LATIN CAPITAL LETTER E WITH ACUTE
U+00CA	Ê	c3 8a	LATIN CAPITAL LETTER E WITH CIRCUMFLEX
U+00CB	Ë	c3 8b	LATIN CAPITAL LETTER E WITH DIAERESIS
U+00CC	Ì	c3 8c	LATIN CAPITAL LETTER I WITH GRAVE
U+00CD	Í	c3 8d	LATIN CAPITAL LETTER I WITH ACUTE
U+00CE	Î	c3 8e	LATIN CAPITAL LETTER I WITH CIRCUMFLEX
U+00CF	Ï	c3 8f	LATIN CAPITAL LETTER I WITH DIAERESIS
U+00D0	Ð	c3 90	LATIN CAPITAL LETTER ETH
U+00D1	Ñ	c3 91	LATIN CAPITAL LETTER N WITH TILDE
U+00D2	Ò	c3 92	LATIN CAPITAL LETTER O WITH GRAVE
U+00D3	Ó	c3 93	LATIN CAPITAL LETTER O WITH ACUTE
U+00D4	Ô	c3 94	LATIN CAPITAL LETTER O WITH CIRCUMFLEX
U+00D5	Õ	c3 95	LATIN CAPITAL LETTER O WITH TILDE
U+00D6	Ö	c3 96	LATIN CAPITAL LETTER O WITH DIAERESIS
U+00D7	×	c3 97	MULTIPLICATION SIGN
U+00D8	Ø	c3 98	LATIN CAPITAL LETTER O WITH STROKE
U+00D9	Ù	c3 99	LATIN CAPITAL LETTER U WITH GRAVE
U+00DA	Ú	c3 9a	LATIN CAPITAL LETTER U WITH ACUTE
U+00DB	Û	c3 9b	LATIN CAPITAL LETTER U WITH CIRCUMFLEX
U+00DC	Ü	c3 9c	LATIN CAPITAL LETTER U WITH DIAERESIS
U+00DD	Ý	c3 9d	LATIN CAPITAL LETTER Y WITH ACUTE

Continued on page 21

Continued from page 20

Unicode Code Point	Character	UTF-8 (hex.)	Name
U+00DE	þ	c3 9e	LATIN CAPITAL LETTER THORN
U+00DF	ß	c3 9f	LATIN SMALL LETTER SHARP S
U+00E0	à	c3 a0	LATIN SMALL LETTER A WITH GRAVE
U+00E1	á	c3 a1	LATIN SMALL LETTER A WITH ACUTE
U+00E2	â	c3 a2	LATIN SMALL LETTER A WITH CIRCUMFLEX
U+00E3	ã	c3 a3	LATIN SMALL LETTER A WITH TILDE
U+00E4	ä	c3 a4	LATIN SMALL LETTER A WITH DIAERESIS
U+00E5	å	c3 a5	LATIN SMALL LETTER A WITH RING ABOVE
U+00E6	æ	c3 a6	LATIN SMALL LETTER AE
U+00E7	ç	c3 a7	LATIN SMALL LETTER C WITH CEDILLA
U+00E8	è	c3 a8	LATIN SMALL LETTER E WITH GRAVE
U+00E9	é	c3 a9	LATIN SMALL LETTER E WITH ACUTE
U+00EA	ê	c3 aa	LATIN SMALL LETTER E WITH CIRCUMFLEX
U+00EB	ë	c3 ab	LATIN SMALL LETTER E WITH DIAERESIS
U+00EC	ì	c3 ac	LATIN SMALL LETTER I WITH GRAVE
U+00ED	í	c3 ad	LATIN SMALL LETTER I WITH ACUTE
U+00EE	î	c3 ae	LATIN SMALL LETTER I WITH CIRCUMFLEX
U+00EF	ï	c3 af	LATIN SMALL LETTER I WITH DIAERESIS
U+00F0	ð	c3 b0	LATIN SMALL LETTER ETH
U+00F1	ñ	c3 b1	LATIN SMALL LETTER N WITH TILDE
U+00F2	ò	c3 b2	LATIN SMALL LETTER O WITH GRAVE
U+00F3	ó	c3 b3	LATIN SMALL LETTER O WITH ACUTE
U+00F4	ô	c3 b4	LATIN SMALL LETTER O WITH CIRCUMFLEX
U+00F5	õ	c3 b5	LATIN SMALL LETTER O WITH TILDE
U+00F6	ö	c3 b6	LATIN SMALL LETTER O WITH DIAERESIS
U+00F7	÷	c3 b7	DIVISION SIGN
U+00F8	ø	c3 b8	LATIN SMALL LETTER O WITH STROKE
U+00F9	ù	c3 b9	LATIN SMALL LETTER U WITH GRAVE
U+00FA	ú	c3 ba	LATIN SMALL LETTER U WITH ACUTE
U+00FB	û	c3 bb	LATIN SMALL LETTER U WITH CIRCUMFLEX
U+00FC	ü	c3 bc	LATIN SMALL LETTER U WITH DIAERESIS
U+00FD	ý	c3 bd	LATIN SMALL LETTER Y WITH ACUTE
U+00FE	þ	c3 be	LATIN SMALL LETTER THORN
U+00FF	ÿ	c3 bf	LATIN SMALL LETTER Y WITH DIAERESIS

Clean with Mild Detergent and Warm Water

Wipe down the device with a soft cloth dampened with a mild detergent and warm water solution. Do not use any other chemicals for cleaning.

Repairs

Contact Banner Engineering for troubleshooting of this device. **Do not attempt any repairs to this Banner device; it contains no field-replaceable parts or components.** If the device, device part, or device component is determined to be defective by a Banner Applications Engineer, they will advise you of Banner's RMA (Return Merchandise Authorization) procedure.

IMPORTANT: If instructed to return the device, pack it with care. Damage that occurs in return shipping is not covered by warranty.

Contact Us

Banner Engineering Corp. headquarters is located at: 9714 Tenth Avenue North | Plymouth, MN 55441, USA | Phone: + 1 888 373 6767

For worldwide locations and local representatives, visit www.bannerengineering.com.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Mounting Fixings](#) category:

Click to view products by [Banner](#) manufacturer:

Other Similar products are found below :

[5912235-1 REV -](#) [71-344699-4S](#) [7717-8DAP](#) [HD7-1](#) [14320](#) [NT20SATT01](#) [89078GBESR](#) [9150700000](#) [BACC47CN2S](#) [ELXA051G1](#)
[1453315-11](#) [71-148608-2S](#) [H373247-15](#) [85054GBESR](#) [860099-1](#) [DM 330](#) [197-007](#) [BRKT-ND](#) [197-003](#) [1960004544](#) [CF81GHZMHDW](#)
[61104-01](#) [20011292N025050000](#) [DVA.4-40-20-M8-23-70](#) [GN 2277-ALN-20-K-30-A](#) [GN 2279-ALS-14-K-30-A](#) [GN 2280-ALN-20-K-30](#)
[GN 237-ZD-60-60-C-SR](#) [KALM-16](#) [189888-2](#) [G4-PEM-NUTS](#) [89309-00](#) [KJE-POGES 100K1](#) [M050NAHF](#) [POBW 150/20K](#) [451928](#)
[452413](#) [451521](#) [TPE-POB 100S](#) [3.ST27-1.001](#) [3.STZH3.001](#) [BPPB 0801 2100H](#) [GN 1362-NI-80-80-A-BL](#) [GN 1364-NI-105-50-B-BL](#) [GN](#)
[1364-NI-140-50-B-BL](#) [GN 136-NI-120-60-B](#) [GN 136-NI-50-50-A](#) [GN 136-NI-50-50-B](#) [GN 136-NI-50-50-C](#) [GN 136-NI-50-75-B](#)