

TLE9278BQX Evaluation Board

MCP+ SBC Family

Z8F65327770

Getting Started

Rev 1.0, April 2019

Revision History: 1

Previous Version: none


Page	Subjects (major changes since last revision)
1.0	Initial Release, All.

Table of Contents

1.	Evaluation Board Overview.....	4
2.	Banana Sockets.....	4
3.	Buttons.....	5
4.	LEDs	5
5.	Connectors	5
6.	Jumper Configurations.....	8
7.	Usage of ConfigWizard	9
8.	Additional Information	11

Schematic and Layout can be seen on the last pages of this PDF document.

There are 4 banana sockets, 3 LEDs, three buttons, one connector for the μ O stick and a set of headers for jumper configuration on the evaluation board. The functionalities will be explained in the next chapters. The distribution of these elements on the board can be observed in the following figure:

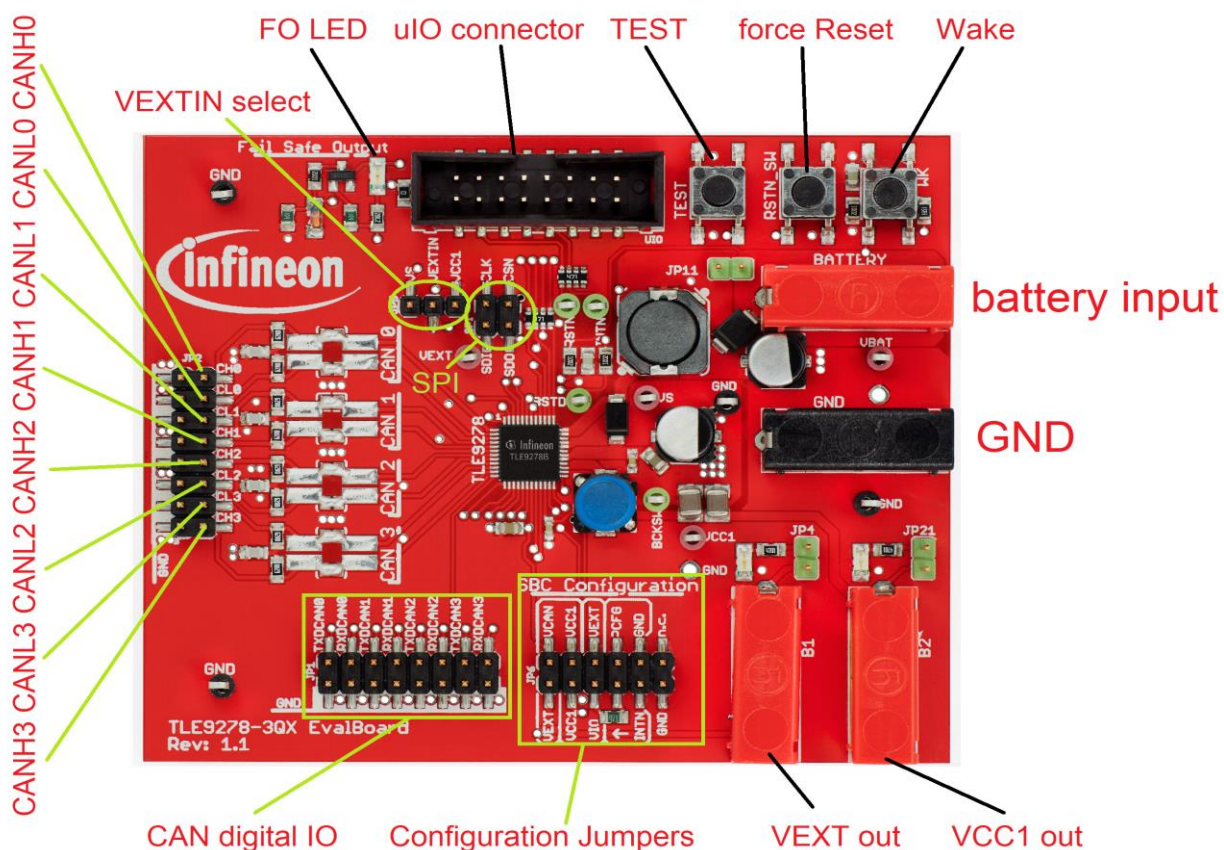

The SBC is usually supplied through the battery input and GND banana sockets. The VCC1 output (5 V or 3.3 V, depending on the SBC's version) and VEXT (voltage dependent on configuration) banana sockets provide the regulated voltages from the SBC. The voltages VCC1 and VEXT are used to supply the VCC1 and VEXT supply indication LEDs which can be disconnected via the jumpers directly next to the banana outputs of VCC1 and VEXT.

3. Buttons

In the upper right corner there are three buttons.

- **Test Button** for enabling test mode (press during SBC Init-Mode when sending arbitrary SPI command)
- **Reset Force** button pressing connects RO to GND to force low signal
- **Wake** forces a voltage level transition at the WK pin to trigger a wake-up externally


4. LEDs

In the upper left corner is one LED to indicate the state of the Fail-Output. There are also two indication LEDs for the status of VCC1 and VEXT (see behind the banana sockets for VCC1 and VEXT) which can be also disconnected via the jumpers directly next to the banana connectors of VCC1 and VEXT.

5. Connectors

5.1. μ IO Connector


The μ IO Connector is used for connecting to the μ IO stick, but can be also used to access the uC interfacing pins. The pin distribution of the connector is shown in the following figure:

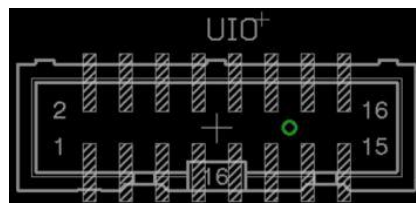

Pin	Functionality	Pin	Functionality
1	NC	2	GND
3	NC	4	NC
5	NC	6	VS_μIO
7	NC	8	INTN
9	CSN	10	NC
11	CLK	12	FO_UC
13	SDO	14	RSTN
15	SDI	16	ADC_μIO


5.2. CAN digital IO Connectors

This connector can be used to access the RXD and TXD pins of the appropriate CAN transceivers.

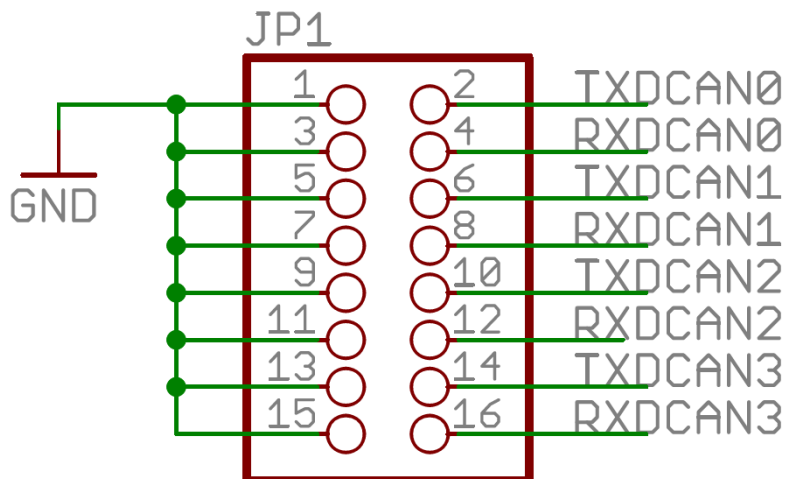


5.3. Transceiver Connectors

Those connectors can be used to connect to the transceiver outputs CAN0 – CAN3.

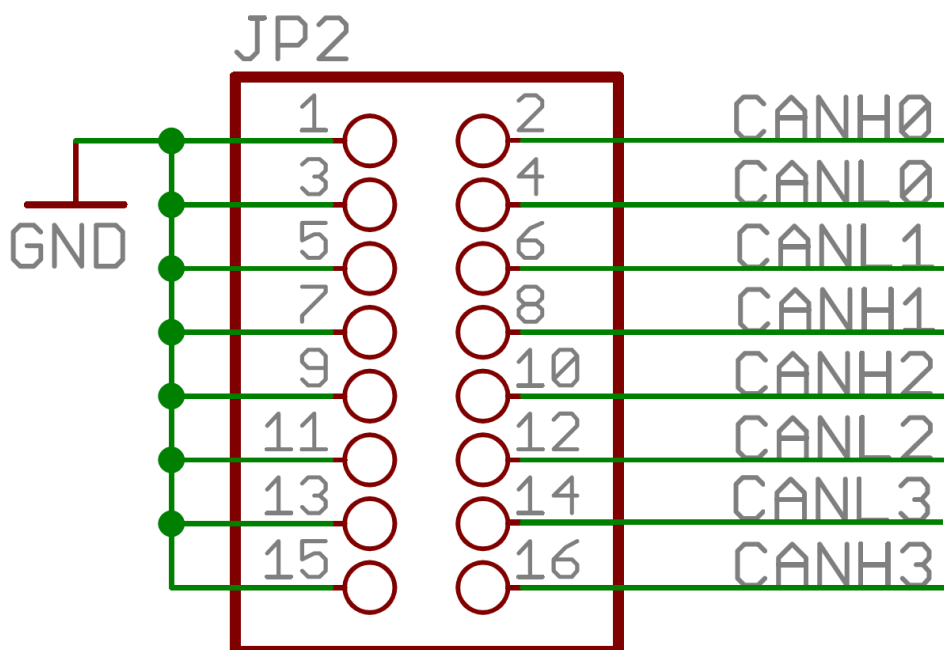

5.4. SPI connector

This connector can be used to access the SPI signals directly with a microcontroller or to analyze the SPI logic signals on the bus if μ IO stick is connected.

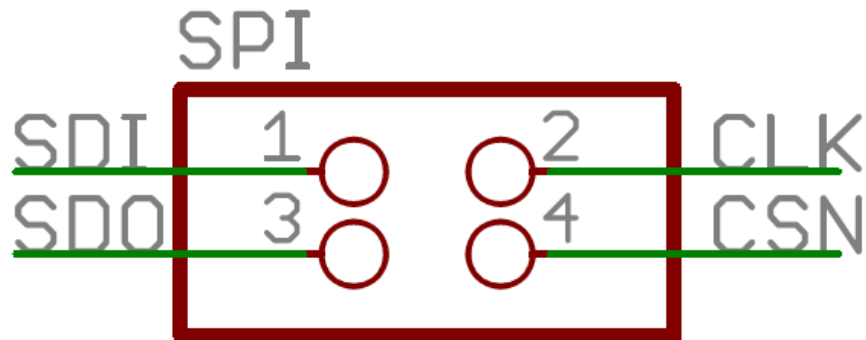


6. Jumper Configurations


6.1. VEXTIN selection jumper

The input supply of the external voltage regulator can be selected here being either VS or VCC1.

VEXT supply Slection

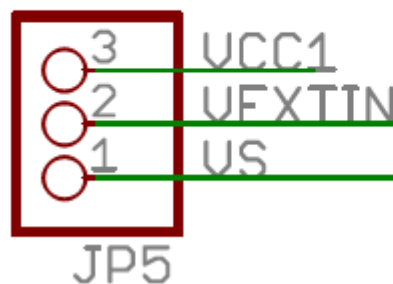

6.2. SBC configuration jumper

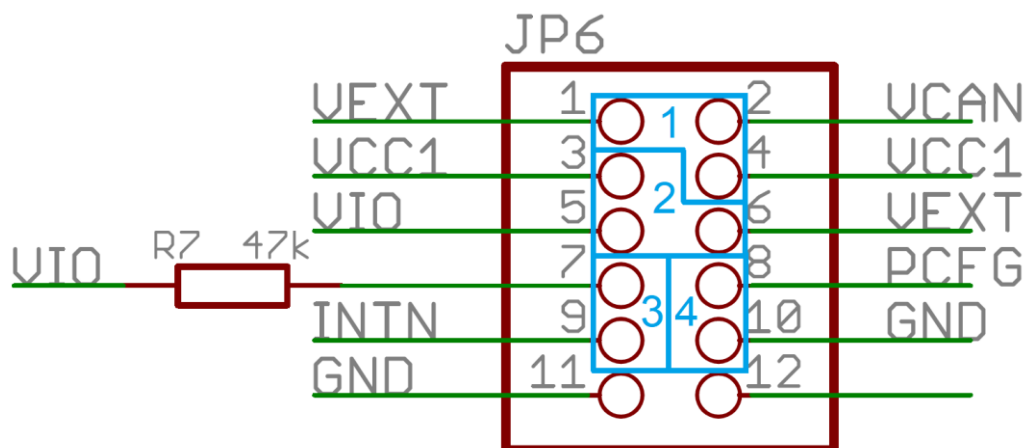

- Jumper 1: Select VCAN supply (VCC1 out or VEXT out)
- Jumper 2: Select VIO supply (VCC1 out or VEXT out)
- Jumper 3: INTN enable pull-up to VIO (CFG1 state)
- Jumper 4: PCFG <-> GND bridge (IO supply voltage config)


7 Usage of ConfigWizard

Please connect your μ IO stick to the μ IO interface header and supply the evaluation board with e.g. 12V.

After this, please open “Config Wizard for SBC” inside Infineon Toolbox and select “TLE9278”. For using the μ IO stick correctly, please refer to the μ IO stick user manual which can be also downloaded under <http://www.infineon.com/SBC>



As soon as the user interface has opened, the SBC should be in SBC normal mode and SPI should be accessible. This is indicated by green status flags.

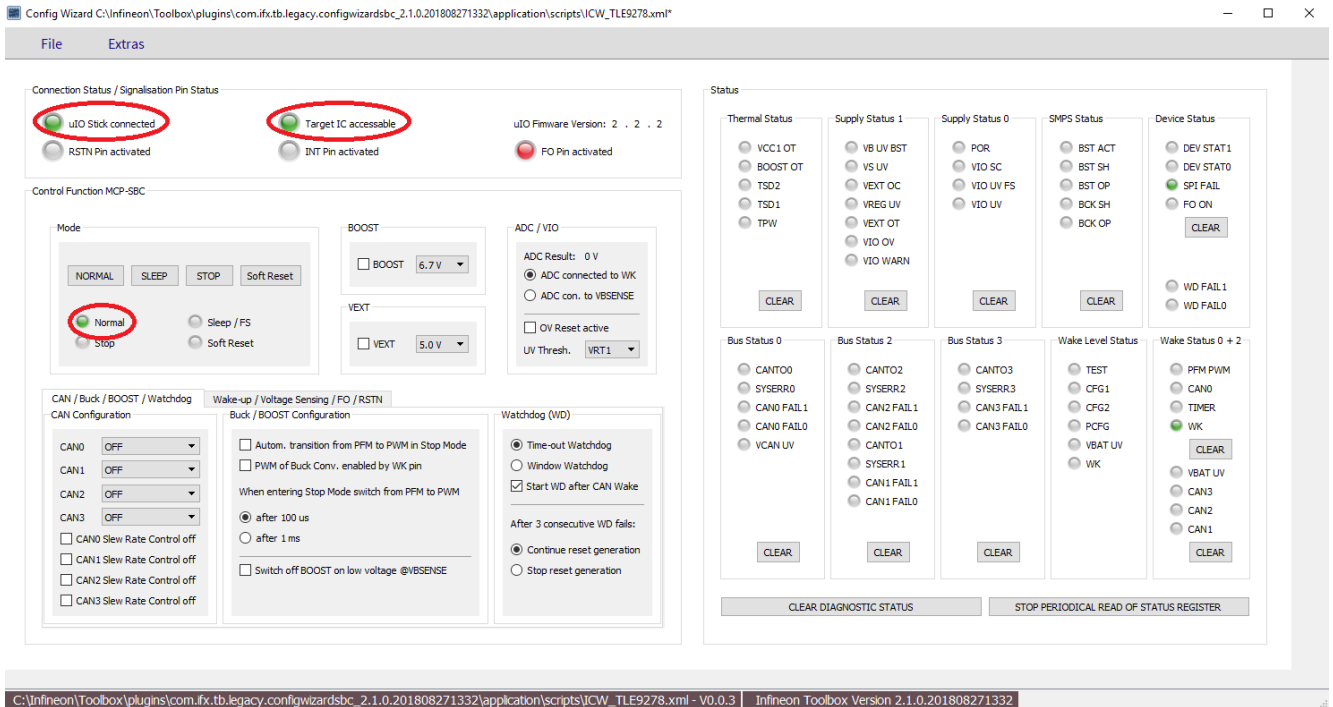

All functionalities of the SBC are live controllable by just clicking or selecting the appropriate functions.

8 Additional Information

For further information you may contact <http://www.infineon.com/SBC> or your regional FAE.

Edition 2019-04-09

**Published by
Infineon Technologies AG
81726 Munich, Germany**

**© 2019 Infineon Technologies AG
All Rights Reserved.**

LEGAL DISCLAIMER

THE INFORMATION GIVEN IN THIS APPLICATION NOTE IS GIVEN AS A HINT FOR THE IMPLEMENTATION OF THE INFINEON TECHNOLOGIES COMPONENT ONLY AND SHALL NOT BE REGARDED AS ANY DESCRIPTION OR WARRANTY OF A CERTAIN FUNCTIONALITY, CONDITION OR QUALITY OF THE INFINEON TECHNOLOGIES COMPONENT. THE RECIPIENT OF THIS APPLICATION NOTE MUST VERIFY ANY FUNCTION DESCRIBED HEREIN IN THE REAL APPLICATION. INFINEON TECHNOLOGIES HEREBY DISCLAIMS ANY AND ALL WARRANTIES AND LIABILITIES OF ANY KIND (INCLUDING WITHOUT LIMITATION WARRANTIES OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS OF ANY THIRD PARTY) WITH RESPECT TO ANY AND ALL INFORMATION GIVEN IN THIS APPLICATION NOTE.

Information


For further information on technology, delivery terms and conditions and prices, please contact the nearest Infineon Technologies Office (www.infineon.com).


Warnings


Due to technical requirements, components may contain dangerous substances. For information on the types in question, please contact the nearest Infineon Technologies Office.


Infineon Technologies components may be used in life-support devices or systems only with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.


www.infineon.com

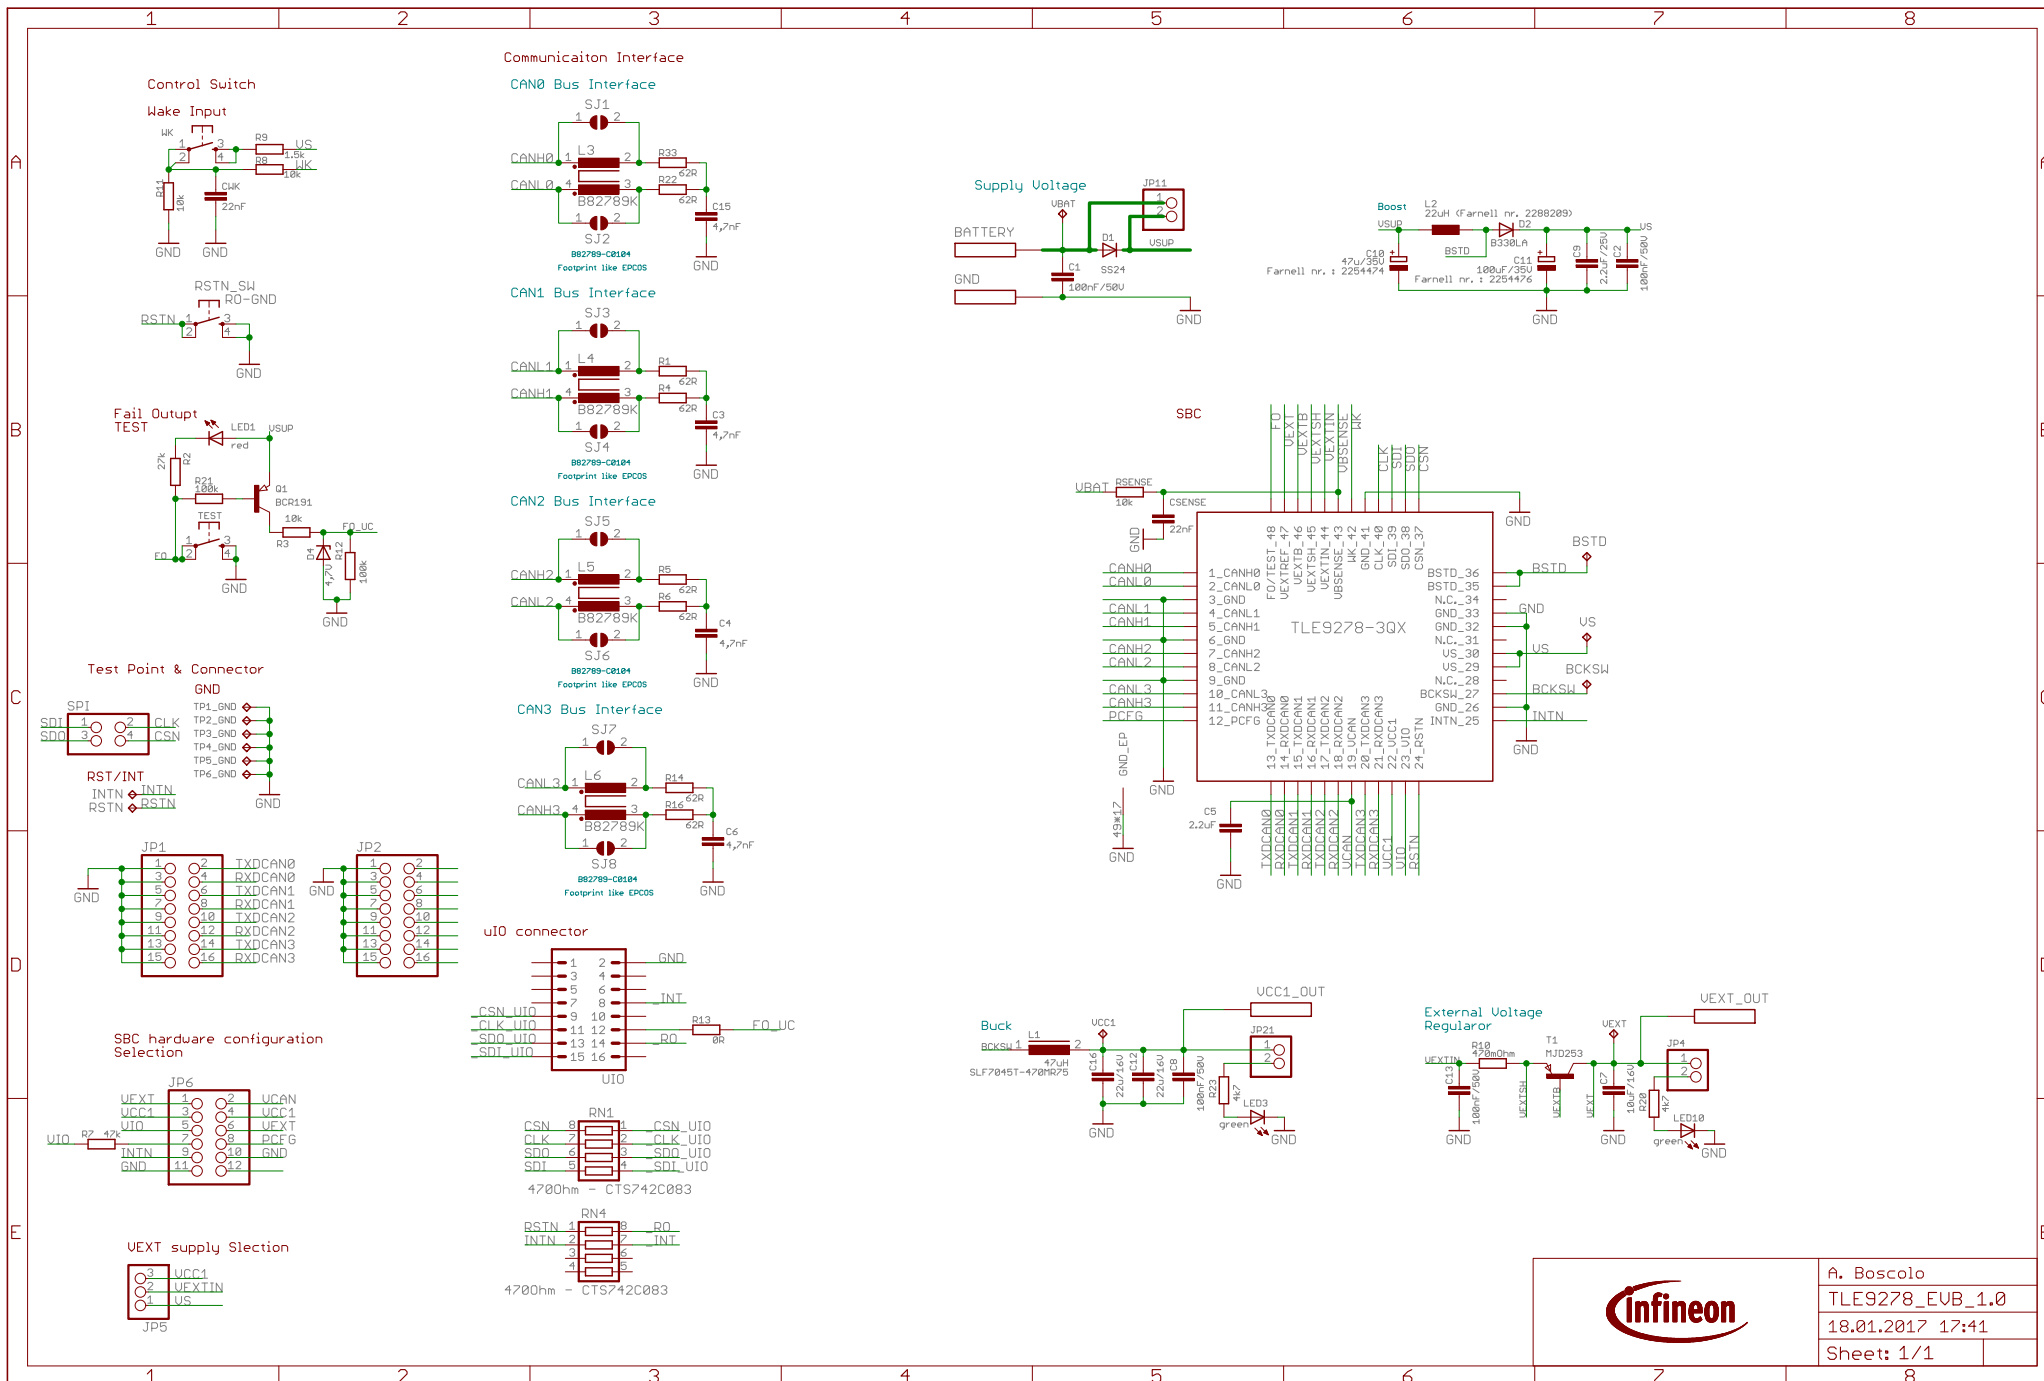

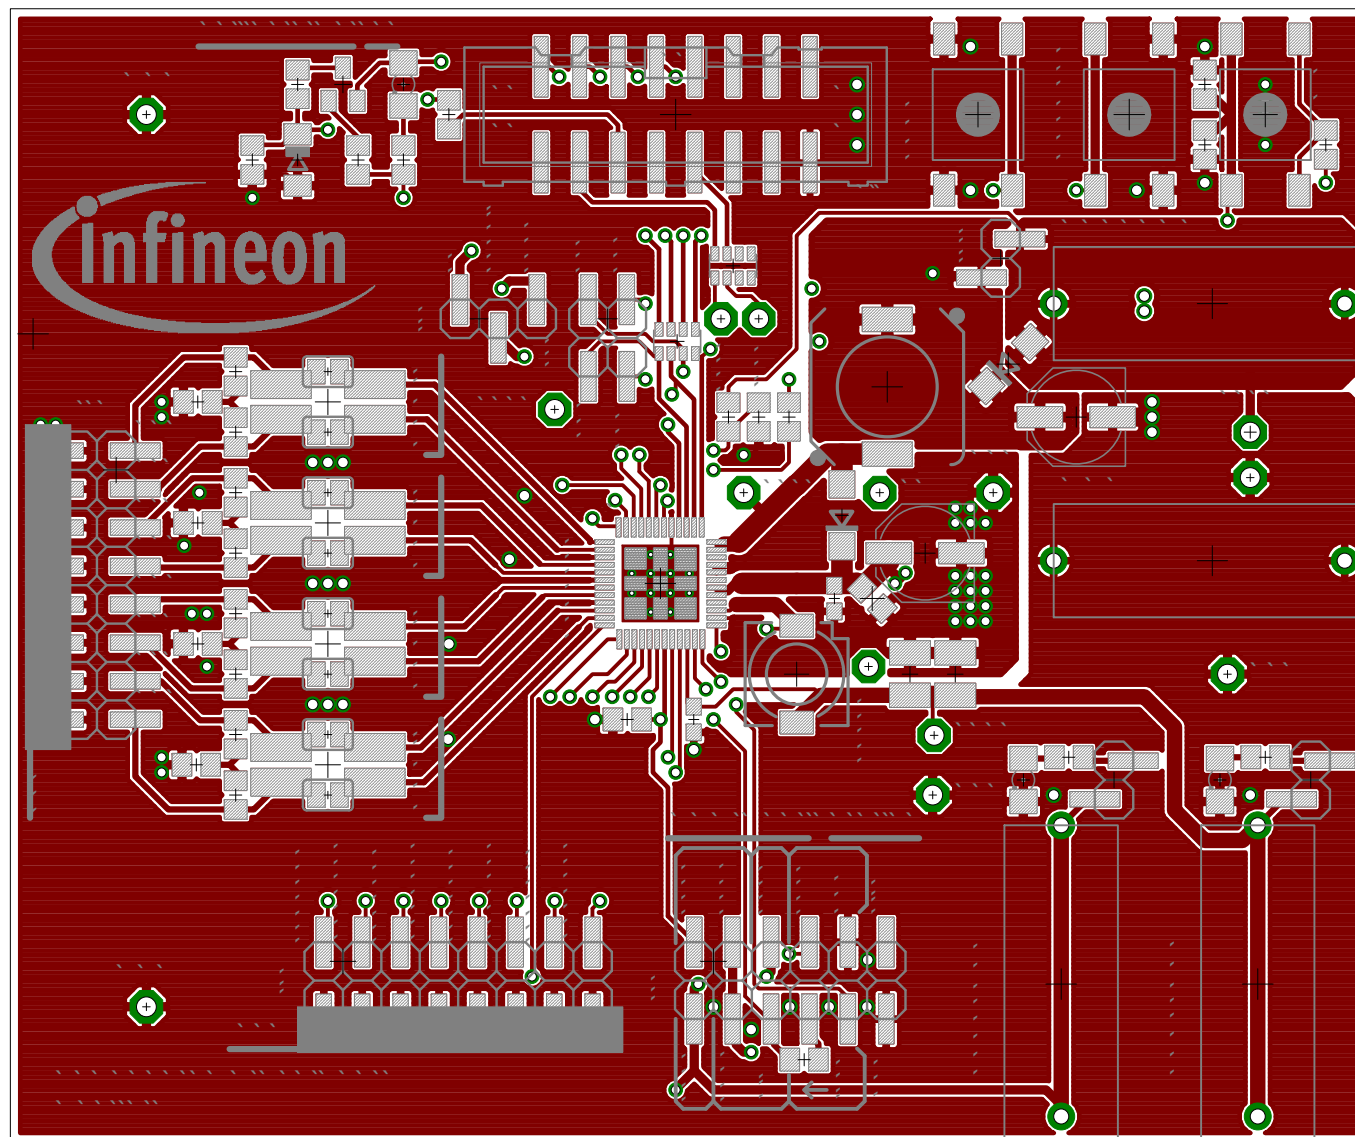

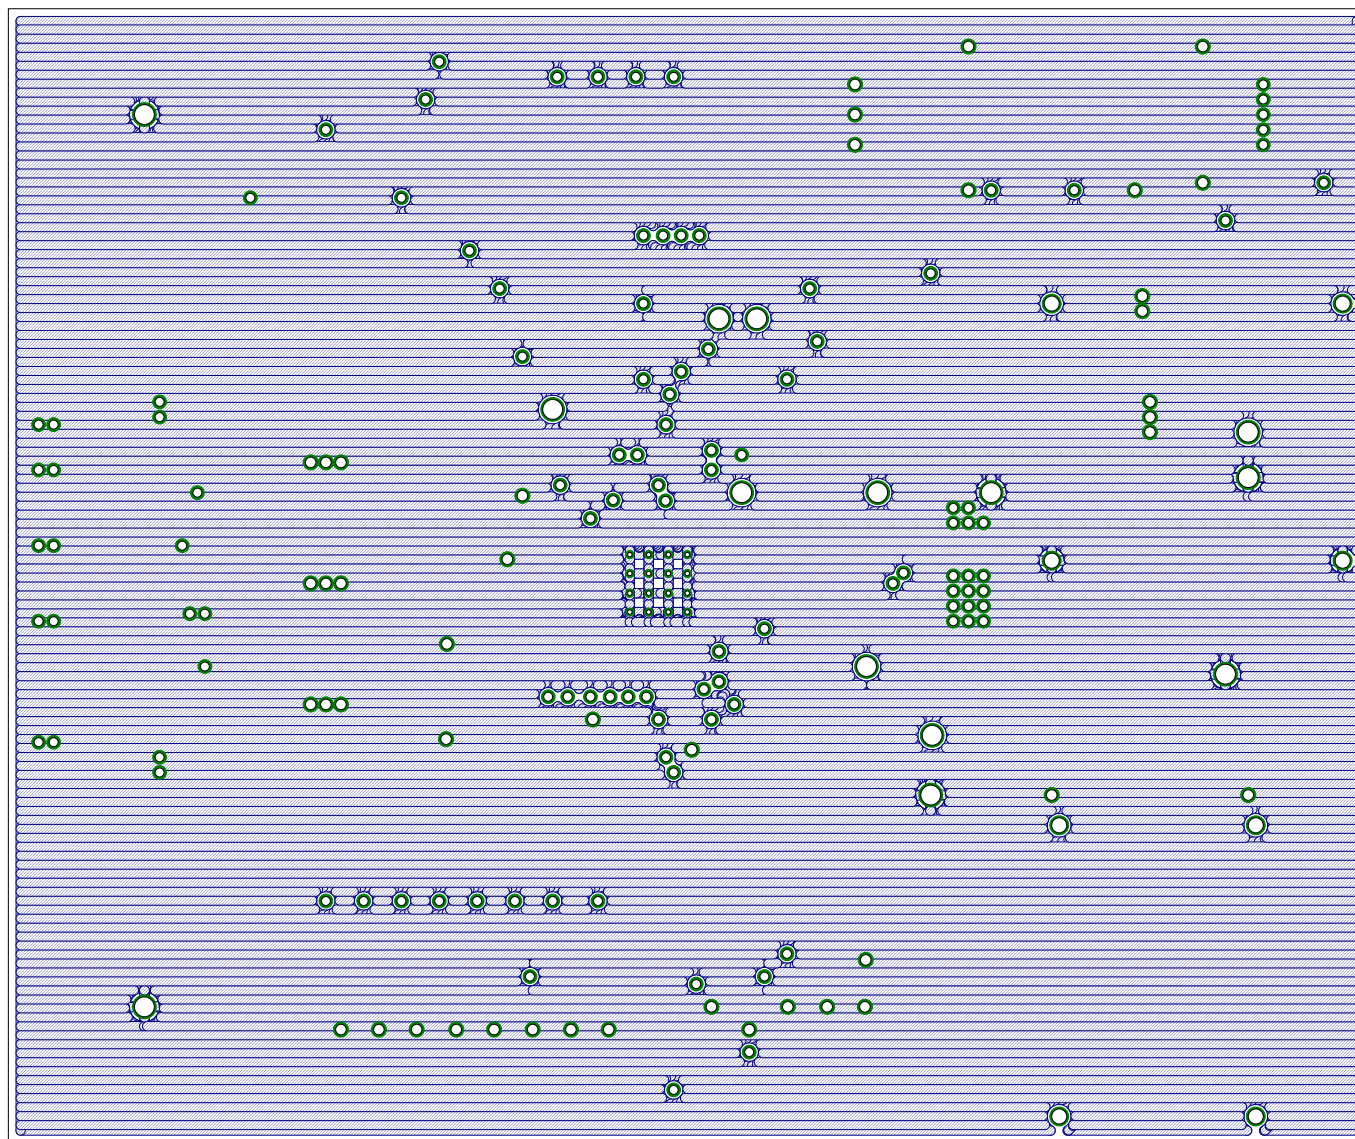

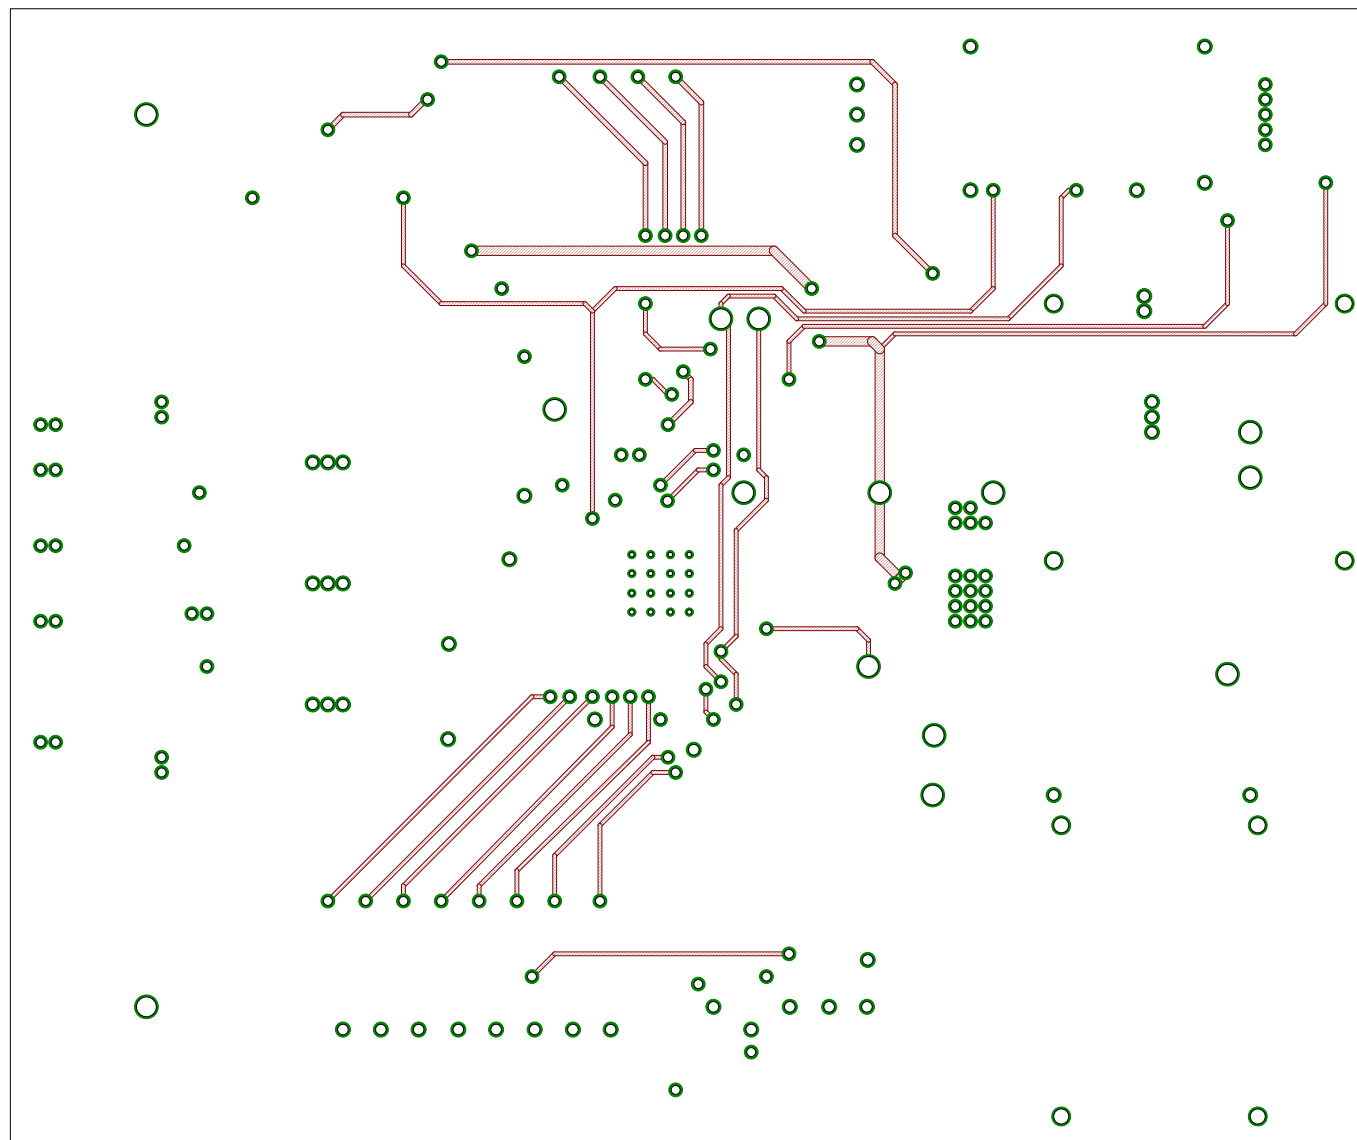

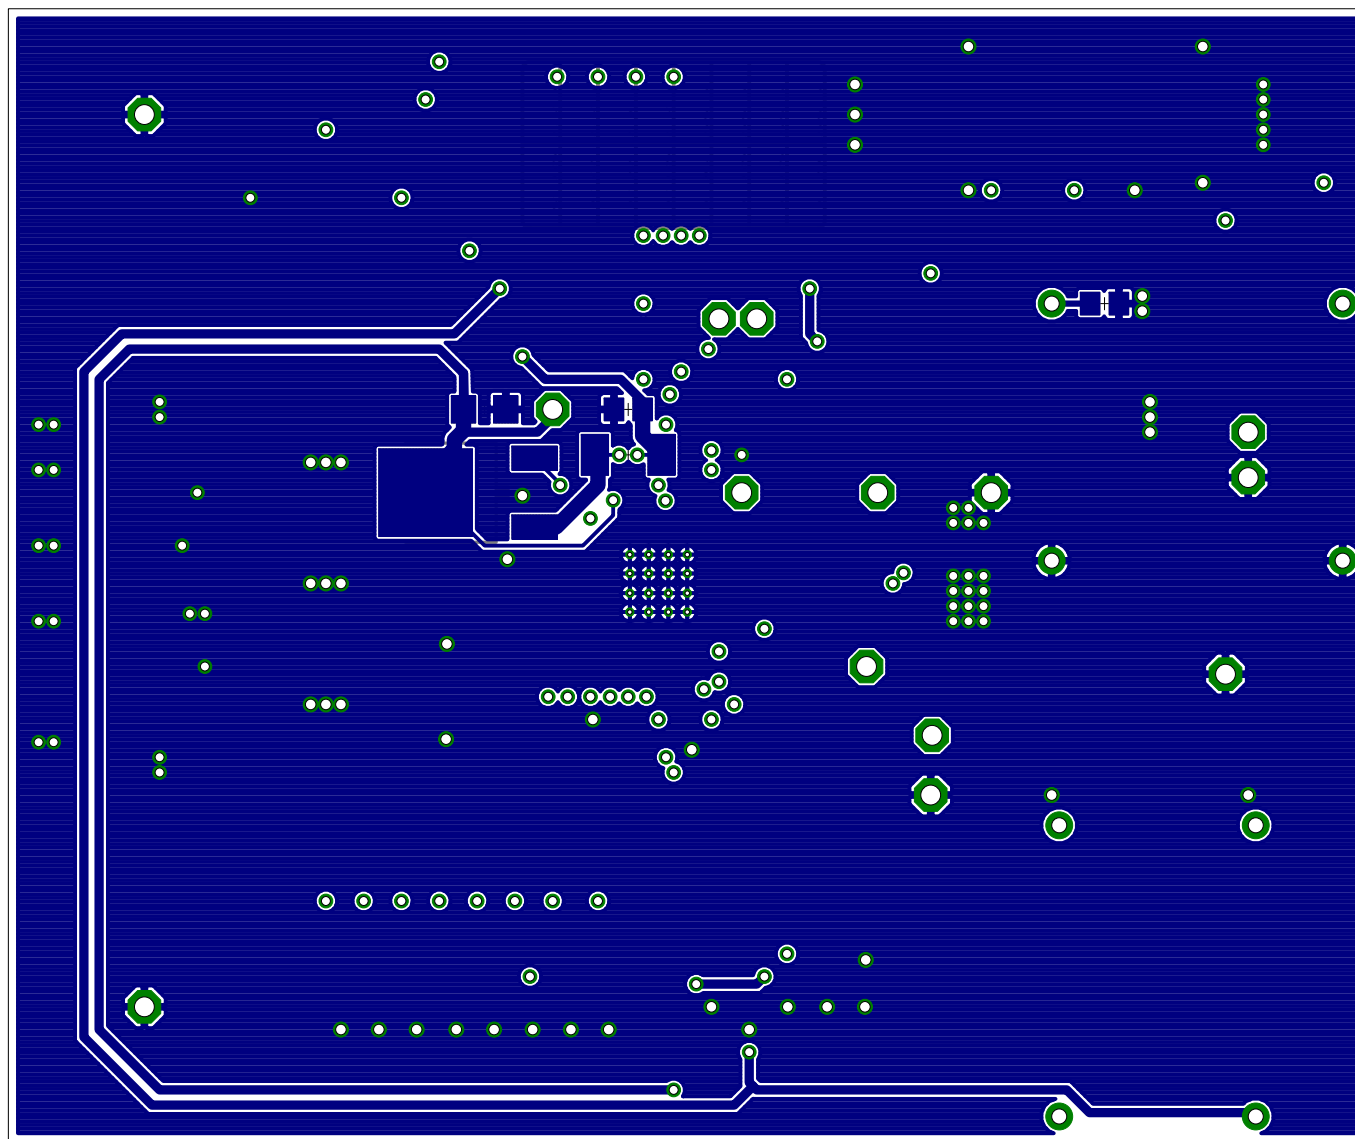

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Power Management IC Development Tools](#) **category:**

Click to view products by [Infineon](#) **manufacturer:**

Other Similar products are found below :

[EVB-EP5348UI](#) [ISLUSBI2CKIT1Z](#) [ISL8002AEVAL1Z](#) [ISL91108IIA-EVZ](#) [AP62250WU-EVM](#) [SAMPLEBOXILD8150TOBO1](#)
[AP61100Z6-EVM](#) [AP62300Z6-EVM](#) [BTS7030-2EPA](#) [LTC3308AIV#WTRPBF](#) [BTS71033-6ESA](#) [EV13N91A](#) [EV55W64A](#) [Si8285_86v2-](#)
[KIT](#) [AP33772S-EVB](#) [TDINV3000W50B-KIT](#) [NCP1681CCM1KWGEVB](#) [APEK89303KET-01-T](#) [NCP1681MM500WGEVB](#) [SI83401BAA-](#)
[KIT](#) [SI83402BAA-KIT](#) [SI83411BAA-KIT](#) [SI83412BAA-KIT](#) [MIKROE-5294](#) [MIKROE-5451](#) [MIKROE-5374](#) [APEK49406GES-01-T](#)
[MIKROE-5019](#) [BTG70902EPLDAUGHBRDTOBO1](#) [5650](#) [TAB-48017](#) [APEK89307KET-01-T](#) [MIKROE-5510](#) [64010](#)
[EVAL6EDL04I065PRTBOBO1](#) [LT8648SJV#WPBF](#) [LT8648SEV#WPBF](#) [EVB81340-100W](#) [RTKA489EPRDK0010BU](#) [DC3107A](#) [EVL4248-](#)
[QV-00A](#) [EVQ4371-V-1000-00A](#) [EVL28167-B-Q-00A](#) [NEVB-NID1100UL](#) [EV6631B-L-00A](#) [EVL1608C-TL-00A](#) [EVAL-LTPA-KIT](#)
[EVALKITTLE9189QUWTOBO1](#) [EVALKITTLE9189QVWTOBO1](#) [EVINVHPD2SICFS0108TOBO2](#)