



Special Fluoropolymer Heat Shrink End Kit




Description

A termination kit for the remote end termination of braided and overjacketed heating cables comprising a fluoropolymer heat shrink end cap.


Kit Contents (Bartec No. 01-5801-6104)

Part	Description (Kit Item No. 7196714)
A	One 25mm length of NDW (fluoropolymer) adhesive lined heat shrink tubing
B	One 75mm length of Kynar (fluoropolymer) 3/4" bore adhesive lined heat shrink tubing


Fitting Instructions For Braided and Overjacketed Tapes

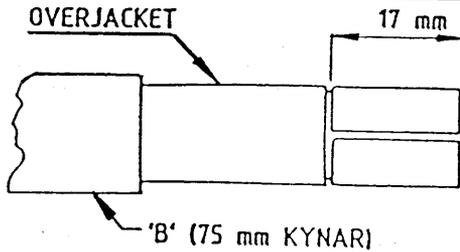


Slide 'B' (75mm Kynar) onto the tape.
Measure back 17mm from the end of the tape.
Score the overjacket with a knife and remove, taking care not to damage the overbraid.

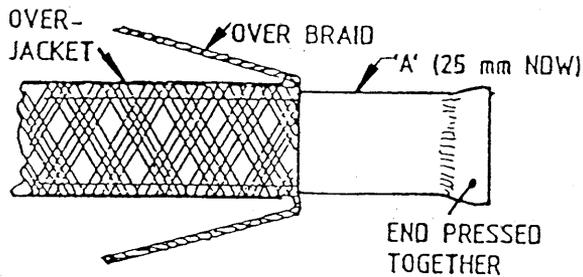


Un-ravel the over braid, folding the strands back over onto the overjacket.
Place 'A' (25mm NDW) over the now exposed inner sheath.
Shrink into position with a hot air gun.
Seal the end by squeezing the tubing flat with a pair of pliers.

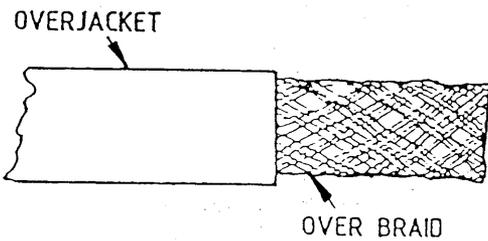

Lay the strands of the overbraid over 'A' so that they are evenly spread.

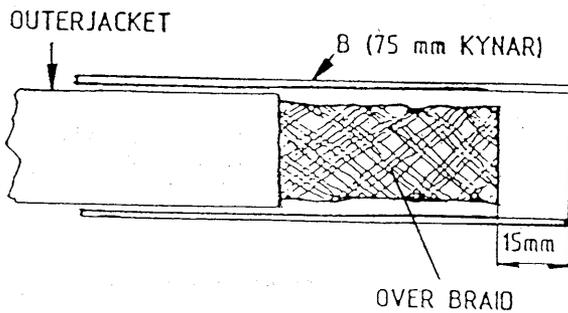

Slide 'B' over the end of the tape so that it overhangs the end by approx. 15mm.

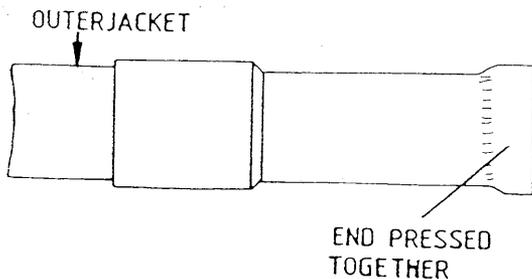

Use the hot air gun to gradually shrink into position. This is achieved by playing the hot air gun over the periphery of 'B'.
Do not concentrate on one spot.
Seal the end by squeezing the tubing flat with a pair of pliers.

BARTEC (UK) LTD.
Station Road,
Whitworth,
Near Rochdale,
Lancashire
OL12 8LN.

Tel. 01706 85 2224
Fax. 01706 85 2521



Flouropolymer Heat Shrink End Kit




Description

A termination kit for the remote end termination of braided and overjacketed heating cables comprising a flouropolymer heat shrink end cap.


Kit Contents (Bartec No. 01-5803-6131)

Part	Description (Kit Item No. 7196740)
A	One 25mm length 3/8" bore dual wall flouropolymer heat shrink
B	One 75mm length 3/8" bore dual wall flouropolymer heat shrink


Fitting Instructions For Braided and Overacketed Tapes

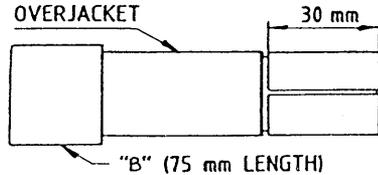


Slide 'B' (75mm length) onto the tape.
Measure back 30mm from the end of the tape.
Score the overjacket with a knife and remove, taking care not to damage the overbraid.

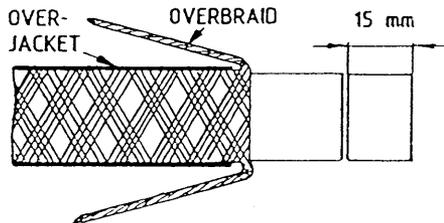


Loosen the overbraid folding the strands over onto the overjacket.
Cut 15mm off the end of the tape.

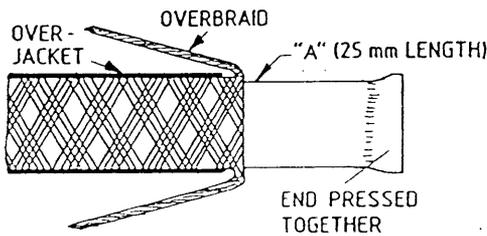


Place 'A' (25mm length) over the exposed inner jacket so that it rests next to the braid and overhangs the end of the tape.
Shrink into position with a hot air gun.
Seal the end by squeezing the tubing flat with a pair of pliers.
Do not concentrate the heat on one spot.

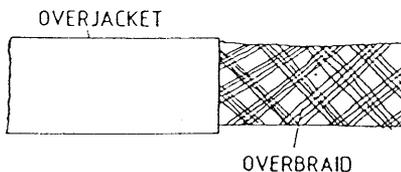

Lay the strands of the overbraid over 'A' so that they are evenly spread.

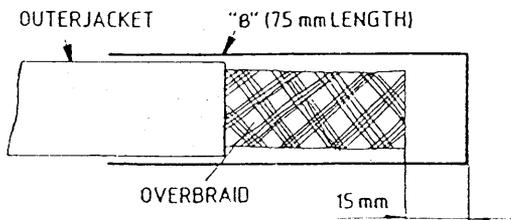

Slide 'B' over the end of the tape so that it overhangs the end by approx. 15mm.

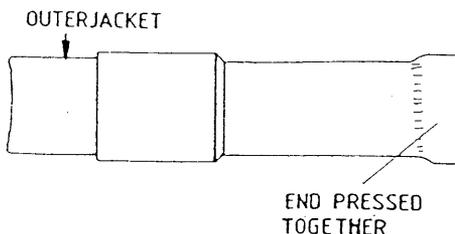

Use the hot air gun to gradually shrink into position.
This is achieved by playing the hot air gun over the periphery of 'B'.
Do not concentrate on one spot.
Seal the end by squeezing the tubing flat with a pair of pliers.

BARTEC (UK) LTD.
Station Road,
Whitworth,
Near Rochdale,
Lancashire
OL12 8LN.

Tel. 01706 85 2224
Fax. 01706 85 2521

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [bartec](#) manufacturer:

Other Similar products are found below :

[BARTEC](#)