



UP Chassis assembly SOP

Date: 24-01-2017


1. Place the top cover upside down on table

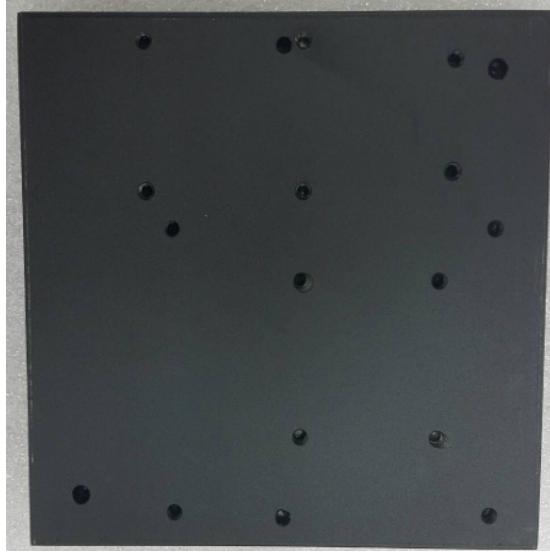

2. Take out AL block sink and 4 pcs black M2.5 4mm screw

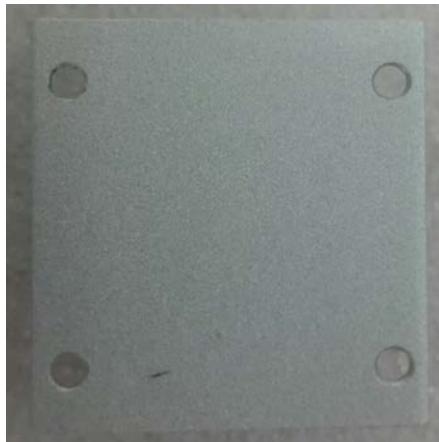


3. Screw the AL block sink to the top cover as below location

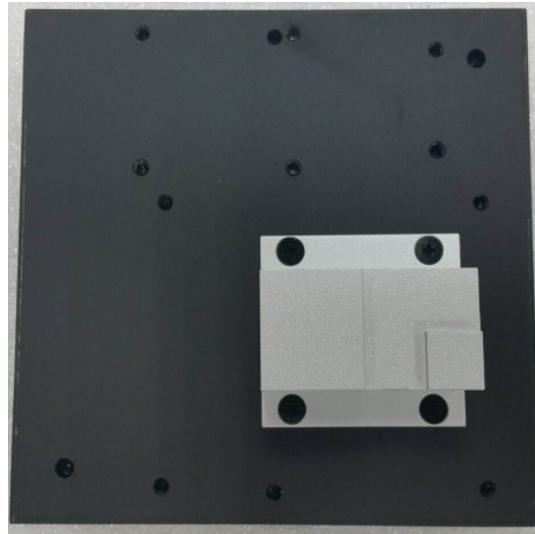

4. Take out 4 pcs M2.5 stand off



5. Screw the stand off as below location on the top cover

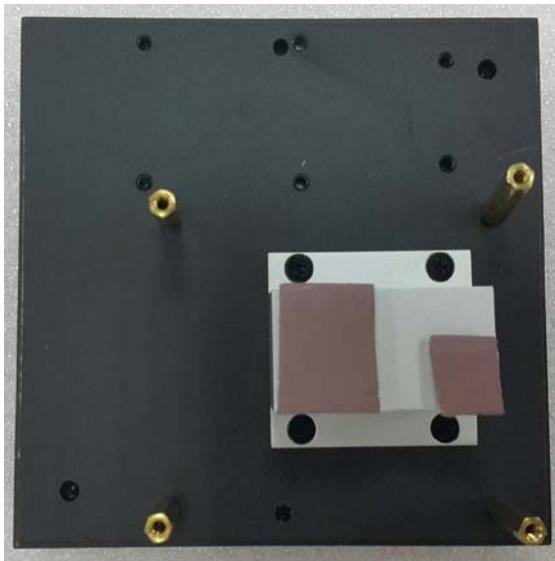


6. Place the RTC battery as below location on top cover, make sure UP board removed original heat sink and heat spreader for assembly




7. Take out 4 pcs M2.5 3.5mm stand off



8. Place UP board upside down and screw the 4 pcs stand off as below location

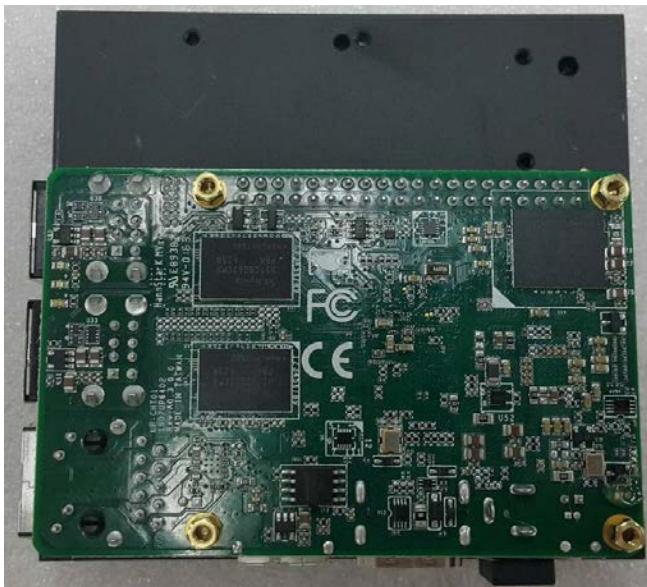

9. Assemble the top cover with UP board with bottom chassis, make sure USB ports align first

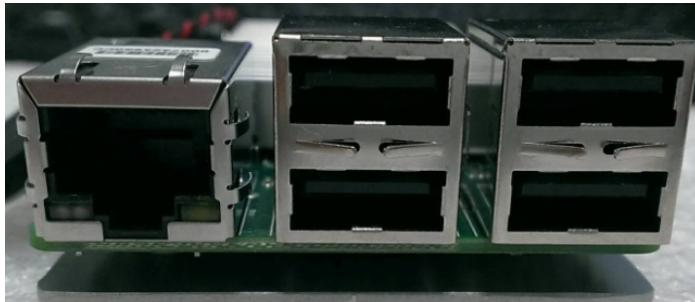

10. Align DC power Jack and make sure all ports are aligned.



11. Take out 4 pcs M2.5 4mm black screws



12. **Screw on the 4 pcs M2.5 black screw on the bottom chassis to complete assembly**



X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Modules Accessories category:

Click to view products by Aaeon manufacturer:

Other Similar products are found below :

[7010-0001 AX98219 A1UL8RISER F1UJPMICRISER FHW1U16RISER 20-101-0440 MBCDROM AX61221TM VM-105 EA](#)
[CARREDIPTFT02 RK-210E-B E226171106 88606200030E SI-HDMI-EDID-EM MIC-75M13-00A1E FPM-1000T-SMKE AMK-R004E](#)
[96FMCF-ST2ADAPTER1 AHWKPTP12GBGB AXXSTCPUCAR FPK-07-R10 Mini Din 6P to 6P HARNESS FPF1320 POWER](#)
[MULTIPLEXER CARRIER 881261510A0E AXXP3SWX08080 conga-B7XD/CSP-Cu-B 881281021A0E HFT for mounting KIT](#)
[FN928X_FN929X BB-MH112-1A 15100600 9-5000-1116 BKCMCR1ABB 70763 98R3612003E 881261910A0E 106897 48222R 4D](#)
[ARDUINO ADAPTOR SHIELD II 20926110901 PYCASE GREEN PYCASE BLUE FP15072_ZORYA-SC-HEKLA 20952000004](#)
[20953000007 DP-DVI-R10 575-BBIS RACK-220GW/A130B 492-BBKM IP411 70760](#)