
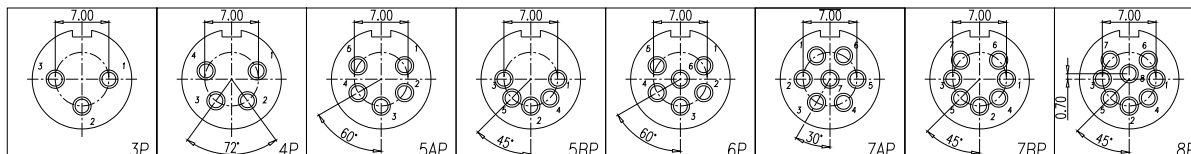


DESCRIPTION: M16 // F // SOLDER CUP // CABLE KIT // SHIELDED

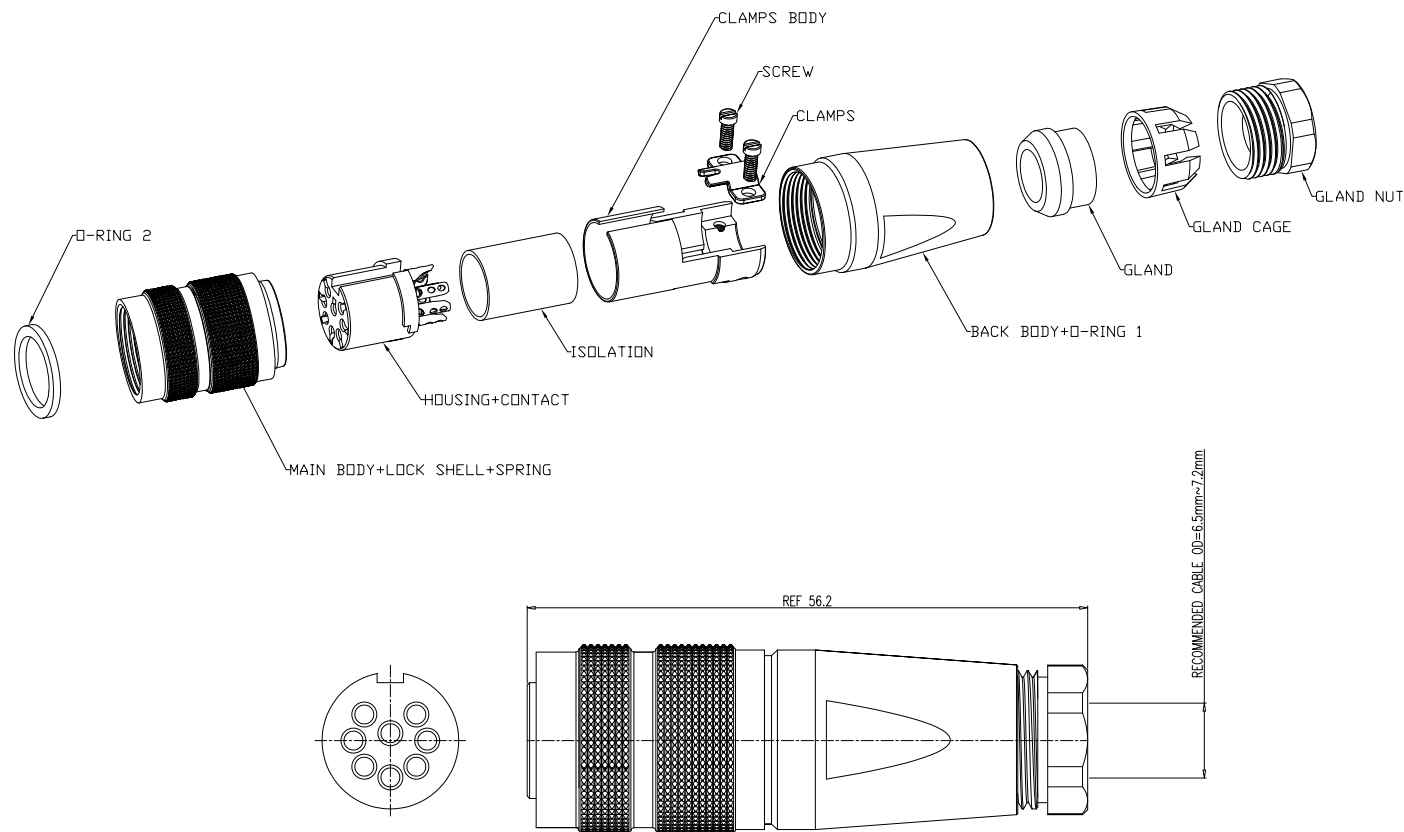

POSITION CHART (MATING SIDE SHOWN)

SPECIFICATIONS:

MATERIALS:

HOUSING:	PA66, UL94 V-0, BLACK
CONTACTS:	GOLD FLASH PLATED BRONZE
MAIN BODY:	NICKEL PLATED ZINC ALLOY
LOCK SHELL:	NICKEL PLATED BRASS
SPRING:	STAINLESS STEEL
ISOLATION:	PVC
CLAMPS BODY:	NICKEL PLATED ZINC ALLOY
CLAMPS:	NICKEL PLATED ZINC ALLOY
SCREW:	NICKEL PLATED SPCC
BACK BODY:	NICKEL PLATED BRASS
GLAND CAGE:	POM, WHITE
GLAND NUT:	SATIN NICKEL PLATED AL
GLAND:	SILICONE
ORING 1:	SILICONE
ORING 2:	SILICONE

ELECTRICAL:

RATED CURRENT:	7A (3,4,5A,5B) // 5A (6,7A,7B,8)
RATED VOLTAGE:	250V
INSULATION RESISTANCE:	100 MOhms MIN.
CONTACT RESISTANCE:	10 mOhms MAX.

ENVIRONMENT:

OPERATING TEMPERATURE:	-40°C TO +85°C
WATER PROOF:	IP67 (IN MATED CONDITION)

MAX WIRE AWG: 20 AWG

TORQUE: 0.7Nm to 1.5Nm

878-YYY-203RKT1

POSITIONS (SEE POSITION CHART)

003 = 3 POSITION
004 = 4 POSITION
05A = 5(A) POSITION
05B = 5(B) POSITION
006 = 6 POSITION
07A = 7(A) POSITION
07B = 7(B) POSITION
008 = 8 POSITION

RoHS COMPLIANT



THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.

DRAWN:

J. KADEL

DATE:

09/05/2023

UNITS = mm

DO NOT SCALE FROM DRAWING

NorComp


SCALE:
NTS

SHEET OF
1 2

REV
1

DWG NO.

878-YYY-203RKT1

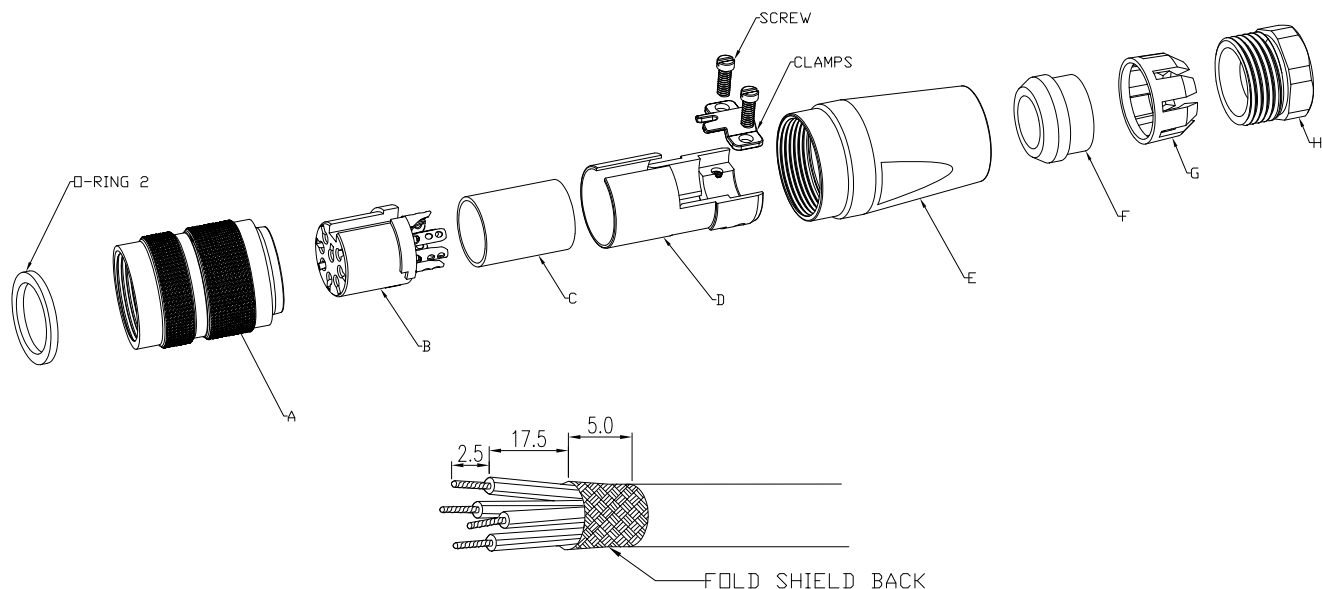

ASSEMBLY INSTRUCTIONS

1. Note assembly position & orientation.
2. Strip the cable according to cable diagram above.
3. Slide the stripped cable through all components in reverse order H-C.
4. Solder the conductors to the contacts on housing and contacts, component B .
5. Once soldering is complete, assemble (collapse) components B, C, D and use screw and clamps to secure cable to component D.
Ensure cable shield is clamped by screw and clamps.
6. Continue assembly by inserting component B, C, D in component A. There will be a key and key way to align components.
7. Continue assembly by sliding up components E, F, G, and H. Screw component E into component A. Screw component H into component E.
You will need to use a male mating connector to hold A stationary while screwing in component E to A.
Use torque range specified on page 1.
8. Last, assemble O-RING 2 around female insulator; using the mating connector mentioned in step 7 will aide in this step.

RoHS COMPLIANT



THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.

DRAWN:
J. KADEL

DATE:
09/05/2023

UNITS = mm

DO NOT SCALE FROM DRAWING

NorComp

SCALE:
NTS

SHEET 2 OF 2

REV 1

DWG NO.

878-YYY-203RKT1

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for [Circular Metric Connectors](#) ***category:***

Click to view products by [NorComp](#) ***manufacturer:***

Other Similar products are found below :

[600X518037X](#) [8R5000A16M005](#) [1-3637-600-5205](#) [1545399](#) [1A4000-348](#) [8R5006A18A120](#) [1R3006A20M005](#) [1R3006A20M030](#) [RF-12P1N8A80DU](#) [RF-12P1N8A90DU](#) [41-01016](#) [4-22279-4](#) [4-22281-1](#) [4-22284-9](#) [41-40005](#) [XS3P-M421-2](#) [SACC-DSI-FS-5P-PG9-L180 SC](#) [8R5006A16M020](#) [8R5006A16M005](#) [7A3006-32](#) [1R3004A20A1201](#) [N03FA03144](#) [1406328](#) [XS2RD4265](#) [080804EMF00000](#) [XS2R-D426-1](#) [XS8A-0441](#) [2273142-2](#) [41-50000](#) [41-50002](#) [ASB 8-S3064/5 M](#) [43-02534](#) [MA1LKE1700](#) [1400943](#) [8R4006A16M020](#) [WR8U26E02C300](#) [8R5000A16M020](#) [1R3000A20M050](#) [884A30K05M006](#) [1200910005](#) [1201010003](#) [2168083-2](#) [RC-Z2062](#) [SACC-MSQ-M12MS-25-3 2 SCO](#) [SACC-E-FSB-5CON-M16/0 5 SC](#) [SACC-DSI-FS-4CON-PG9/2 0UL](#) [SACC-1/2 NPT-LOCKNUT](#) [BEDC854NN0000052A000](#) [BKUA854NN0086155A000](#) [T4145515021-002](#)