


MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

RS485 7 Click

www.mikroe.com



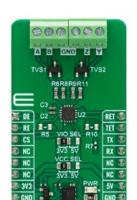

PID: MIKROE-5659

RS485 7 Click is a compact add-on board that enables communication over an RS485 network. This board features the <u>THVD1424</u>, a full duplex RS485 transceiver with a selectable data rate from <u>Texas Instruments</u>. The THVD1424 offers several pin-controlled features, including an on-chip 120Ω termination resistor, slew rate control, and the ability to switch between half and full duplex mode. With its high immunity to IEC Contact Discharge ESD events, the bus pins require no additional system-level protection components. Additionally, the chip is known for its low power consumption and glitch-free power-up/power-down functionality, which enables hot plug-in capability. This Click board $^{\text{m}}$ is suitable for industrial and multi-point applications over long cable runs.

RS485 7 Click is supported by a $\underline{\mathsf{mikroSDK}}$ compliant library, which includes functions that simplify software development. This $\underline{\mathsf{Click}}$ board $\underline{\mathsf{mikroBUS}}^{\mathsf{m}}$ comes as a fully tested product, ready to be used on a system equipped with the $\underline{\mathsf{mikroBUS}}^{\mathsf{m}}$ socket.

How does it work?

RS485 7 Click is based on the THVD1424, a flexible RS-485 transceiver from Texas Instruments for asynchronous data transmissions. The THVD1424 has two termination resistors of nominal 120Ω , one across Y/Z and another across A/B. Both termination resistors are enabled or disabled using pins RET and TET pins of the mikroBUSTM socket, routed to the default positions of PWM and INT pins of the mikroBUSTM socket. Both termination resistors can be enabled or disabled, independent of the state of the driver or receiver. Termination is OFF if the device is unpowered or in thermal shutdown. Internal ESD protection circuits protect the transceiver against Electrostatic Discharges (ESD) according to IEC 61000-4-2 of up to $\pm 8kV$ (Contact Discharge), $\pm 15kV$ (Air Gap Discharge), and against electrical-fast-transients (EFT) according to

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.










MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

www.mikroe.com

IEC 61000-4-4 of up to $\pm 4kV$.

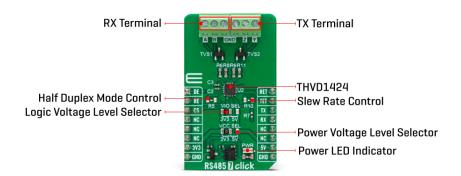

The THVD1424 RS-485 transceiver can be used in half-duplex or full-duplex RS-485 networks by populating an onboard R5 resistor. Full duplex mode is the default state of this board (with unpopulated R5 resistor), where Y and Z terminal pins are driver output pins, and A/B pins are receiver input pins. By populating the R5 resistor, Half duplex mode is activated where the driver and receiver share the same bus pins (Y/Z pins are both driver and receiver pins). The device state is then controlled via two mikroBUS™ pins labeled DE and RE (driver and receiver enable/disable), routed to the default positions of the AN and RST pins of the mikroBUS™ socket.

The THVD1424 can also be used in slow-speed or fast-speed RS485 networks by populating a slew rate control R10 resistor. By default, with the R10 resistor unpopulated, the maximum speed of operation for both driver and receiver is 20Mbps. By populating it, the maximum speed of operation for both driver and receiver is 500kbps, where the receiver path has an additional noise filtering feature enabled. The THVD1424 also has built-in protection features such as supply undervoltage, bus short-circuit, and thermal shutdown.

This Click board™ can operate with either 3.3V or 5V logic voltage levels selected via the VIO SEL jumper. This way, both 3.3V and 5V capable MCUs can use the communication lines properly. Also, the main power supply of the RS485 transceiver can be selected between 3.3V or 5V voltage levels selected via the VCC SEL jumper. The wide common-mode voltage range and low input leakage on bus pins make this Click board™ suitable for multi-point applications over long cable runs. However, the Click board™ comes equipped with a library containing easy-to-use functions and an example code that can be used, as a reference, for further development.

Specifications

Туре	RS485
	Can be used for industrial and multi-point applications over long cable runs
	THVD1424 - full duplex RS485 transceiver from Texas Instruments
	Highly flexible, selectable power and logic voltage levels, configurable half and full

Mikroe produces entire development toolchains for all major microcontrolfer architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.







MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918 Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

	duplex mode, pin-configurable 120Ω termination resistor on bus pins, configurable data rate, bus I/O protection, low power consumption, glitch-free power-up/power-down for hot plug-in capability, protection features, and more
Interface	GPIO,UART
Feature	ClickID
Compatibility	mikroBUS™
Click board size	M (42.9 x 25.4 mm)
Input Voltage	3.3V or 5V

Pinout diagram

This table shows how the pinout on RS485 7 Click corresponds to the pinout on the mikroBUS™ socket (the latter shown in the two middle columns).

Notes	Pin	mikro™ BUS				Pin	Notes
Driver Enable	DE	1	AN	PWM	16	RET	RX Termination Control
Receiver Enable	RE	2	RST	INT	15	TET	TX Termination Control
	NC	3	CS	RX	14	TX	UART TX
	NC	4	SCK	TX	13	RX	UART RX
	NC	5	MISO	SCL	12	NC	
	NC	6	MOSI	SDA	11	NC	
Power Supply	3.3V	7	3.3V	5V	10	5V	Power Supply
Ground	GND	8	GND	GND	9	GND	Ground

Onboard settings and indicators

Label	Name	Default	Description
LD1	PWR	-	Power LED Indicator
JP1	VCC SEL	Left	Power Voltage Level Selection 3V3/5V: Left position 3V3, Right position 5V
JP2	VIO SEL	Left	Logic Voltage Level Selection 3V3/5V: Left position 3V3, Right position 5V
R5	R5	Unpopulated	Half Duplex Mode Control Jumper
R10	R10	Unpopulated	Slew Rate Control Jumper

RS485 7 Click electrical specifications

Description	Min	Тур	Max	Unit
Supply Voltage	3.3	-	5	V

Mikroe produces enrire development rooichains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.





MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 11 78 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com

www.mikroe.com

Data Rate	0.5	-	20	Mbps
ESD Protection	-	±8	1	kV

Software Support

We provide a library for the RS485 7 Click as well as a demo application (example), developed using MIKROE <u>compilers</u>. The demo can run on all the main MIKROE <u>development boards</u>.

Package can be downloaded/installed directly from NECTO Studio Package Manager(recommended way), downloaded from our <u>LibStock™</u> or found on <u>Mikroe github</u> account.

Library Description

This library contains API for RS485 7 Click driver.

Key functions

- rs4857 receiver enable RS485 7 enables the receiver function.
- rs4857_driver_enable RS485 7 enables the driver function.

Example Description

This example reads and processes data from RS485 7 clicks. The library also includes a function for enabling/disabling the receiver or driver and data writing or reading.

The full application code, and ready to use projects can be installed directly from NECTO Studio Package Manager(recommended way), downloaded from our $\underline{\text{LibStock}}^{\text{TM}}$ or found on $\underline{\text{Mikroe}}$ github account.

Other Mikroe Libraries used in the example:

- MikroSDK.Board
- MikroSDK.Log
- Click.RS4857

Additional notes and informations

Depending on the development board you are using, you may need <u>USB UART click</u>, <u>USB UART 2 Click</u> or <u>RS232 Click</u> to connect to your PC, for development systems with no UART to USB interface available on the board. UART terminal is available in all MIKROE <u>compilers</u>.

mikroSDK

This Click board $^{\text{\tiny TM}}$ is supported with $\underline{\text{mikroSDK}}$ - Mikroe Software Development Kit, that needs to be downloaded from the $\underline{\text{LibStock}}$ and installed for the compiler you are using to ensure proper operation of mikroSDK compliant Click board $^{\text{\tiny TM}}$ demo applications.

For more information about mikroSDK, visit the official page.

Resources

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.







MIKROELEKTRONIKA D.O.O, Batajnički drum 23, 11000 Belgrade, Serbia VAT: SR105917343 Registration No. 20490918

Phone: + 381 1178 57 600 Fax: + 381 11 63 09 644 E-mail: office@mikroe.com www.mikroe.com

<u>mikroBUS™</u>

mikroSDK

Click board™ Catalog

Click boards™

ClickID

Downloads

RS485 7 click example on Libstock

RS485 7 click 2D and 3D files

THVD1424 datasheet

RS485 7 click schematic

Mikroe produces entire development toolchains for all major microcontroller architectures.

Committed to excellency, we are dedicated to helping engineers bring the project development up to speed and achieve outstanding results.







health and safety management system.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Interface Development Tools category:

Click to view products by MikroElektronika manufacturer:

Other Similar products are found below:

CY4607M XR17V358/SP339-E8-EB TW-DONGLE-USB XR21B1424IV64-0A-EVB P0551 5346 SI32185ACB10SL1KIT

RAA2S4252EXT 4901 DFR0979 LIME2-SHIELD EM01-D USB TO TTL USB TO RS485 USB-CAN-A MIKROE-5492

RTKH4Z2501S00000BE 5956 5964 103030295 MIKROE-2335 KIT_MINIWIGGLER_3_USB KITXMC4XCOMETH001TOBO1

SI871XSOIC8-KIT 1764 1833 1862 ZSC31010KITV2.1 EVB-USB82514 ATAB663231A-V1.2 ATAB663254A-V1.2 2264

MCP23X17EV PS09-EVA-KIT MAX96708COAXEVKIT# MAXPOWERTOOL002# SMA2RJ45EVK/NOPB FR12-0002 MAFR-000667
000001 MAFR-000589-000001 MAFR-000553-000001 BOB-13263 BP359C ORG4572-R01-UAR XR21B1422IL40-0A-EVB

XR21B1420IL28-0A-EVB 284 SKYFR-000743 SKYFR-000827 SKYFR-000982