



2-Cell Boost Charger with 2A Charge Current and NVDC Evaluation Board

DESCRIPTION

The EV2672A-D-00A is an evaluation board designed to demonstrate the capabilities of the MP2672A, a highly integrated, flexible switch-mode battery charging management device for 2-cell series Li-ion and Li-polymer battery packs. The MP2672A can be used in a wide range of portable applications.

When a 5V adapter or USB input is present, the MP2672A charges the 2-cell battery in step-up mode. When the 5V input is absent, the 2-cell battery discharges, and the battery supplies power to the system.

To effectively charge each application, the MP2672A automatically detects the battery voltage, and charges the battery in three phases: pre-charge, constant current (CC) charge, and constant voltage (CV) charge. Other charging features include charge termination and auto-recharge.

To guarantee safe operation, the MP2672A limits the die temperature to a preset value (about 120°C). Other safety features include input over-voltage protection (OVP), battery OVP, thermal shutdown, battery temperature monitoring, and a configurable timer to prevent prolonged charging of a dead battery.

The MP2672A is available in a QFN-18 (2mmx3mm) package.

ELECTRICAL SPECIFICATIONS

Parameter	Symbol	Value	Units
Input voltage	ge V _{IN} 4.5 to 6.0		V
Pre-charge threshold	VBATT_PRE	6.4, I ² C-configurable	٧
Battery charge voltage regulation	VBATT_REG	8.4, I ² C-configurable	٧
Fast charge current	e Icc 2, I ² C-configurable		Α
System regulation minimum voltage	ulation nimum V _{SYS_REG_MIN} 6.7		V

FEATURES

- 4.0V to 5.75V Input Voltage Range
- Compatible with Host and Standalone Mode
- NVDC Power Path Management
- Configurable Input Voltage Limit
- Up to 2A Configurable Charge Current for 2-Cell Battery
- Configurable Charge Voltage with 0.5% Accuracy
- No External Sense Resistor Required
- Integrated Cell-Balancing Circuit and Preconditioning for Fully Depleted Battery
- Flexible New Charging Cycle Initiation
- Charging Operation Indicator
- I²C Port for Flexible System Parameter Setting and Status Reporting
- Negative Temperature Coefficient (NTC)
 Pin for Temperature Monitoring
- Built-In Charging Protection and Configurable Safety Timer
- Thermal Regulation and Thermal Shutdown
- Available in a QFN-18 (2mmx3mm) Package

APPLICATIONS

- Portable Handheld Solutions
- Point-of-Sale (PoS) Machines
- Bluetooth Speakers
- E-Cigarettes
- General 2-Cell Applications


All MPS parts are lead-free, halogen-free, and adhere to the RoHS directive. For MPS green status, please visit the MPS website under Quality Assurance. "MPS", the MPS logo, and "Simple, Easy Solutions" are registered trademarks of Monolithic Power Systems, Inc.



EV2672A-D-00A EVALUATION BOARD



Top Layer

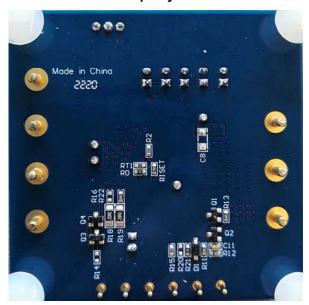


Bottom Layer

(LxWxH) 6.35cmx6.35cmx0.16cm

Board Number	MPS IC Number	
EV2672A-D-00A	MP2672AGD	


Charge Efficiency Tests on the EVB **Constant Current Charge Efficiency**

 $V_{IN} = 5V$ (5A), $I_{SYS} = 0A$, V_{BATT} ramp from 6.4V to 8.4V in a constant current loop

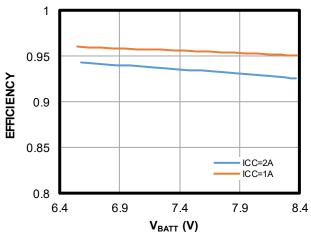

Constant Voltage Efficiency

V_{IN} = 5V (5A), I_{SYS} = 0A, V_{BATT} = 8.4V, charge current decreases until charging is done in the constant voltage loop

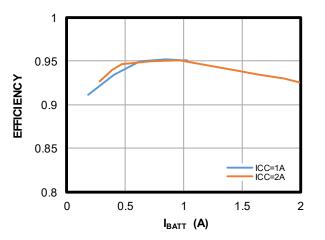



QUICK START GUIDE

Table 1: Jumper Connections

Jumper	Description	Factory Setting
JP1	Standalone mode, BATT_REG = 8.4V	Floating
JP2	Standalone mode, BATT_REG = 8.6V	Floating
JP3	Standalone mode, BATT_REG = 8.7V	Floating
JP4	Standalone mode, BATT_REG = 8.8V	Floating
JP5	Host-control mode, BATT_REG = 8.4V (default)	Connected

Table 2: Enabling the Cell Balance Function

Jumper	Floating	Connected	Factory Setting
JP6	Enable the cell balance function	Disable the cell balance function	Connected

This evaluation board is designed for the MP2672A, which can be used as a standalone switching charger with integrated MOSFETs. Its layout accommodates most commonly used components. The default function of this board is preset for host-control mode, and the battery regulation voltage is 8.4V (default) for 2-cell Lithium-ion batteries.

The evaluation board can work in two control modes: standalone mode or host-control mode.

1. Standalone Mode

Figure 1 shows the test set-up for standalone mode. To operate in standalone mode, connect the CV pin to AGND via a resistor, then set the battery-full voltage.

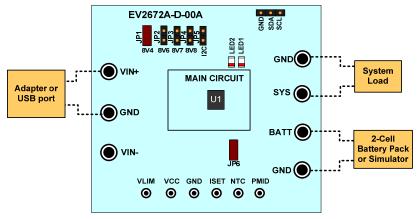


Figure 1: Test Set-Up for the MP2672A in Standalone Mode

In standalone mode, the charge current (I_{CC}) is configured by the resistor (R_{ISET}) connected between the ISET pin and GND. R_{ISET} should be below 24k Ω . I_{CC} can be calculated with Equation (1):

$$I_{CC}(A) = 1(A) \times \frac{12(k\Omega)}{R_{ISET}(k\Omega)}$$
 (1)

2. Host-Control Mode

Figure 2 shows the set-up for host-control mode. For this mode, connect the CV pin to the VCC pin. The battery-full voltage and charge current are set by the I²C register.

EV2672A-D-00A Rev. 1.0 MonolithicPower.com

12/2/2020 MPS Proprietary Information. Patent Protected. Unauthorized Photocopy and Duplication Prohibited.

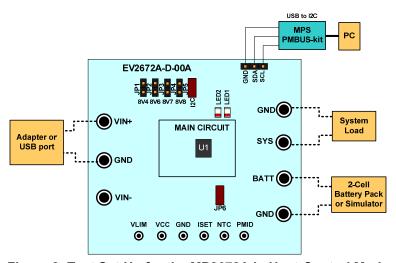


Figure 2: Test Set-Up for the MP2672A in Host-Control Mode

4



Evaluation Platform Preparation

Follow the steps below to set up the evaluation platform:

- 1) Ensure a computer is available with at least one USB port and a USB cable. The MP2672A evaluation software must be properly installed.
- 2) Ensure that the USB to I²C communication kit (EVKT-USBI2C-02) is present (see Figure 3).



Figure 3: USB to I²C Communication Kit

3) To enable the software, double-click on the "MP2672A Evaluation Kit" .exe file to run the MP2672A evaluation software. The software supports the Windows XP, Windows 7, and later operating systems.

The MP2672A evaluation kit.exe file can be downloaded from MPS website.

- 4) Configure the test set-up for the MP2672A (see Figure 2).
- 5) Attach the input voltage ($V_{IN} = 5V$) to the VIN pin, and attach the input ground to the GND pin.
- 6) Connect the battery terminals ($V_{BATT} = 6.4V$ to 8.4V) to:
 - a) Positive (+): BATT
 - b) Negative (-): GND

If using a battery simulator, set the voltage to 7.4V with a 5A sink current limit.

- 7) Connect the system load to the SYS pin, and attach the system load ground to the GND pin.
- 8) Turn the computer on, then launch the MP2672A evaluation software. Figure 4 shows the main software window of the GUI software.

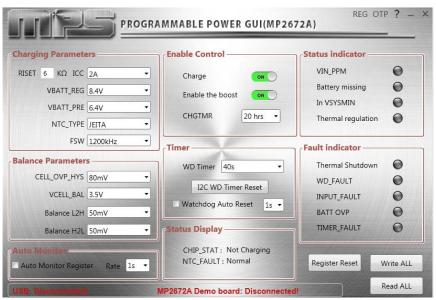


Figure 4: Main Software Window



Procedure

- 1. Ensure that all the connections are normal (the USB is connected and the EV2672A-D-00A is connected). If all the connections are successful, the user is able to run the program (see Figure 5).
- 2. Turn the DC source on. It should be ready to run the MP2672A in boost charge (see Figure 5).

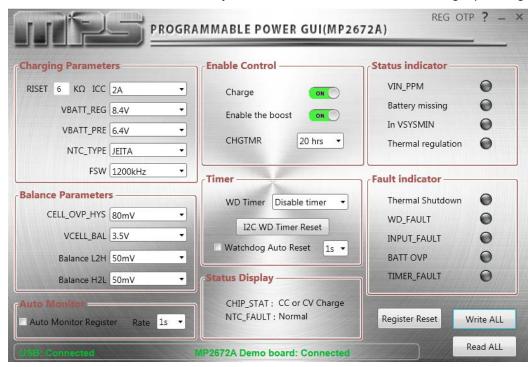


Figure 5: Successful Demo Board Connection

3. Configure the charging parameters, such as the charge current, battery regulation voltage, constant charge timer, and NTC type (see Figure 6).

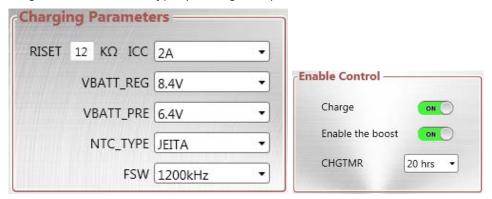


Figure 6: Charging Parameters

4. Set the balance parameters (see Figure 7)

For cell-balance control, connect PMID to the middle pin of the 2-cell battery pack (or 2-battery simulator in series), then check the battery cell balance function.

EV2672A-D-00A Rev. 1.0 MonolithicPower.com

12/2/2020 MPS Proprietary Information. Patent Protected. Unauthorized Photocopy and Duplication Prohibited.



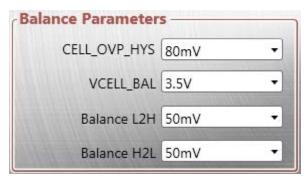


Figure 6: Balance Parameters

5. Monitor the registers to obtain the MP2672A's operation status and fault report (see Figure 7).

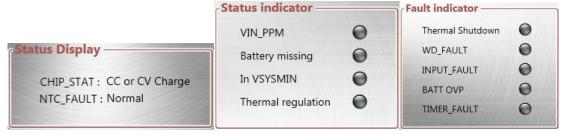


Figure 7: Status and Fault Report for the MP2672A

6. To select the I²C watchdog timer limit, click "Watchdog Auto Reset" to enable watchdog control and run the program automatically (see Figure 8).



Figure 8: Setting the Watchdog Timer Limit

7. The resistor auto-monitor can also be set using this program (see Figure 9).



Figure 9: Resistor Auto-Monitor



EVALUATION BOARD SCHEMATIC

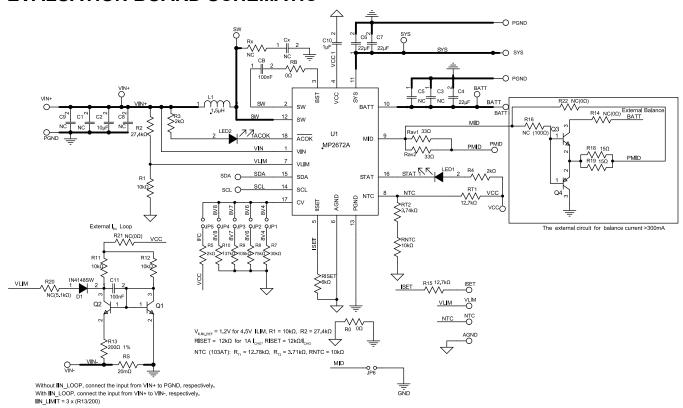


Figure 10: Evaluation Board Schematic (1)(2)(3)

Notes:

- 1) Follow the steps below to enable the cell balance function:
 - a) Connect PMID to the middle pin of the 2-cell battery pack to enable the cell balance function.
 - b) External cell balancing is active if R16 = 100Ω , and R12 = R14 = 0Ω .
 - c) Connect PMID to GND to disable the cell balance function.
- 2) Follow the steps below to enable the external input current limit loop:
 - a) Set R20 = $5.1k\Omega$, and set R21 = 0Ω .
 - b) Connect the cathode of the input power to VIN-.
- 3) Table 1 and Table 2 on page 3 show how the jumper connections can alter the device.

8



EV2672A-D-00A BILL OF MATERIALS

Qty	Ref	Value	Description	Package	Manufacturer	Manufacturer P/N
1	C1	NC	Capacitor, 16V, X7R	0805	Murata	GRM21BR61C106KE15
1	C2	10µF	Capacitor, 16V, X7R	0805	Murata	GRM21BR61C106KE15
2	C3, C5	NC	Capacitor, 16V, X5R	0805	Murata	GRM21BR61E226ME44L
3	C4, C6, C7	22µF	Capacitor, 16V, X5R	0805	Murata	GRM21BR61E226ME44L
3	C8, C9, Cx	NC	Capacitor, 16V, X7R	0603	Any	
1	C10	1µF	Ceramic capacitor, 6.3V, X7R	0603	Murata	GRM188R71C105KA12D
2	C11, CB	100nF	Ceramic capacitor, 25V, X7R	0603	Murata	GCJ188R71H104KA12D
1	D1	IN4148W	75V, 0.15A	SOD-123	Diodes Inc.	IN4148W
1	L1	1.5µH	Inductor, 1.5μH, 10mΩ, 14A	SMD	Wurth	744311150
1	LED2	BL-HUF35A- TRB	Red light LED	0805	Hongbai	BL-HUF35A-TRB
1	LED1	BL-HGE35A- AV-TRB	Blue light LED	0805	Hongbai	BL-HGE35A-AV-TRB
3	Q1, Q2, Q3	S8050	Transistor, 25V, 0.5A	SOT-23	Fairchild	S8050
1	Q4	S8050	Transistor, PNP, 40V, 200mA	SOT-23	Fairchild	S8550
3	R0, RB, R21	0Ω	Film resistor, 5%	0603	Yageo	RTT03000JTP
4	R1, R11, R12, RNTC	10kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-0710KL
1	R2	27.4kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-0727K4L
3	R3, R4, R5	2kΩ	Film Resistor, 1%	0603	Yageo	RC0603FR-072KL
1	R7	30kΩ	Resistor, 1%	0603	Yageo	RC0603FR-0730KL
1	R8	75kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-0775KL
1	R9	105kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-07105KL
1	R10	137kΩ	Film resistor;1%	0603	Yageo	RC0603FR-07137KL
2	R13	200Ω	Film resistor, 1%	0603	Yageo	RC0603FR-07200RL
2	R15, RT1	12.7kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-0712K7L
2	R18, R19	20Ω	Film resistor, 1%	1206	Yageo	RC1206FR-0720RL
2	Rav1, Rav2	20Ω	Resistor, 1%	1206	Yageo	RC1206FR-0720RL
1	RISET	6.04kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-076K04L
1	RS	20mΩ	Film resistor, 1%, 1W	2512	Yageo	RL2512FK-070R02L
1	RT2	3.74kΩ	Film resistor, 1%	0603	Yageo	RC0603FR-073K74L
1	Rx	NC	Film resistor, 5%	0603	Any	
1	R16	NC	Film resistor, 5%, 100Ω	0603	Any	




EV2672A-D-00A BILL OF MATERIALS (continued)


Qty	Ref	Value	Description	Package	Manufacturer	Manufacturer P/N
2	R14, R22	NC	Film resistor, 1%, 0Ω	0603	Any	
1	R20	NC	Film resistor, 1%, 5.1kΩ	0603	Any	
1	U1	MP2672AGD- 0000	2-cell switching NVDC boost charger with cell balance function	QFN-18 (2mmx 3mm)	MPS	MP2672AGD-xxxx
7	BATT, GND, VIN+, GND, VIN-, SYS, GND	2.0mm	Connector		Any	
4	BATT, VIN+, SYS, SW,	1.0mm	Test point		Any	
6	PMID, VLIM, AGND, ISET, NTC, VCC	2.54mm	Test point		Any	
6	JP1, JP2, JP3, JP4, JP5, JP6	2.54mm	Connector		Any	
2	JP5, JP6	2.54mm	Shorter		Any	
1	EV2672A - D-00A		PCB evaluation board			




EVB TEST RESULTS

Performance curves and waveforms are tested on the evaluation board. $V_{IN} = 5V$ (5A), $V_{IN_MIN} = 4.5V$, $V_{BATT_PRE} = 6.5V$, $I_{CC} = 2A$, $I_{SYS} = 0A$, $V_{BATT} = 0V$ to 8.4V, $C_{IN} = 10\mu F$, $C_{SYS} = 44\mu F$, $C_{BATT} = 22\mu F$, $f_{SW} = 1200kHz$, $T_A = 25^{\circ}C$, unless otherwise noted.

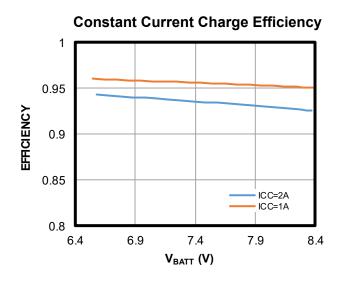

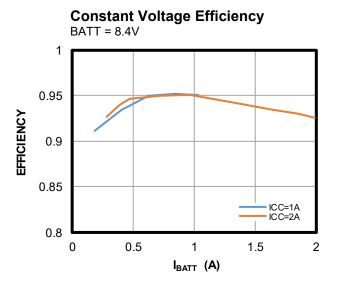


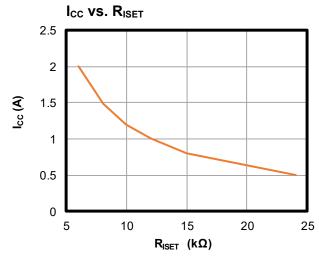



EVB TEST RESULTS (continued)

Performance curves and waveforms are tested on the evaluation board. $V_{IN} = 5V$ (5A), $V_{IN_MIN} = 4.5V$, $V_{BATT_PRE} = 6.5V$, $I_{CC} = 2A$, $I_{SYS} = 0A$, $V_{BATT} = 0V$ to 8.4V, $C_{IN} = 10\mu F$, $C_{SYS} = 44\mu F$, $C_{BATT} = 22\mu F$, $f_{SW} = 1200kHz$, $T_A = 25^{\circ}C$, unless otherwise noted.

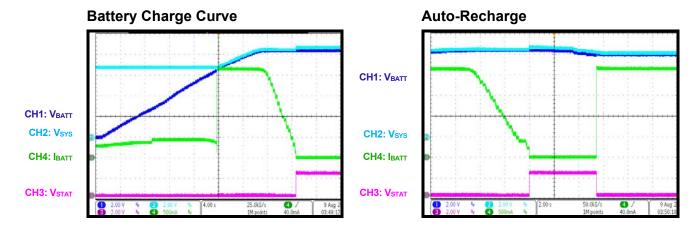

CH1: V_{SYS} CH4: I_{SYS}

CH3: IBATT

CH2: V_{SW}

CH3: IBATT


CH1: V_{SYS}

CH4: I_{SYS}

CH2: Vsw




 $V_{BATT} = 5V$, $I_{SYS} = 1A$

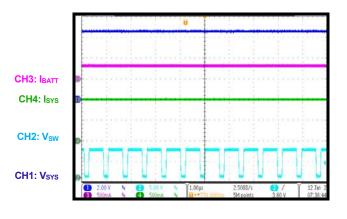


Constant Current Charge Steady State

 $V_{BATT} = 7.4V$, $I_{SYS} = 0A$

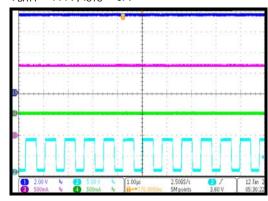


Constant Current Charge Steady State

 $V_{BATT} = 7.4V$, $I_{SYS} = 2A$

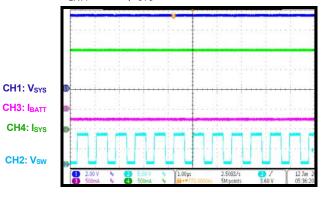

Constant Current Charge Steady State

 $V_{BATT} = 8.4V/0.5A$, $I_{SYS} = 1A$

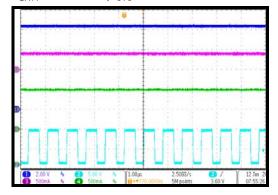




CH4: I_{BATT}

EVB TEST RESULTS (continued)

Performance curves and waveforms are tested on the evaluation board. $V_{IN} = 5V$ (5A), $V_{IN_MIN} = 4.5V$, $V_{BATT_PRE} = 6.5V$, $I_{CC} = 2A$, $I_{SYS} = 0A$, $V_{BATT} = 0V$ to 8.4V, $C_{IN} = 10\mu F$, $C_{SYS} = 44\mu F$, $C_{BATT} = 22\mu F$, $f_{SW} = 1200kHz$, $T_A = 25^{\circ}C$, unless otherwise noted.

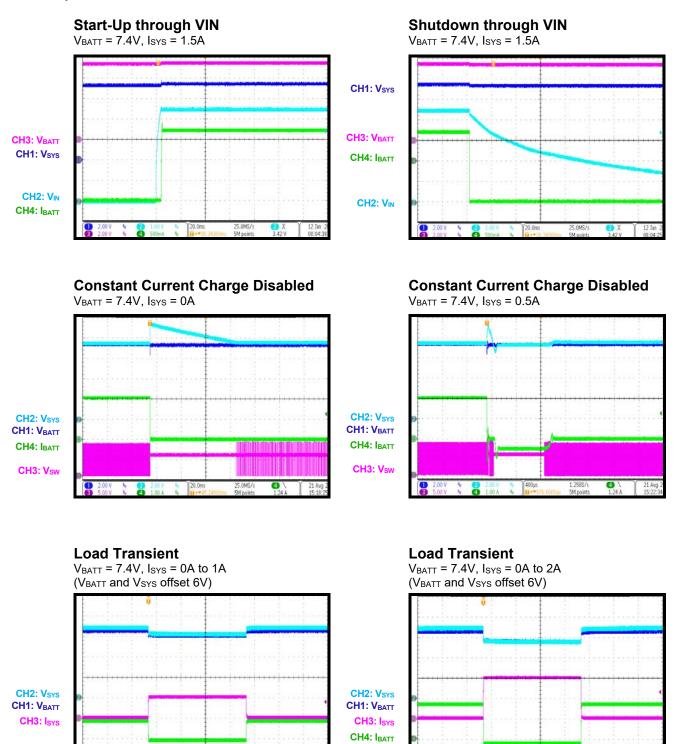



PCB LAYOUT

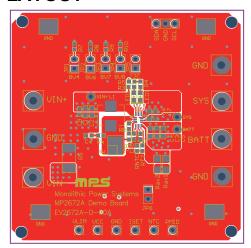


Figure 11: Top Layer

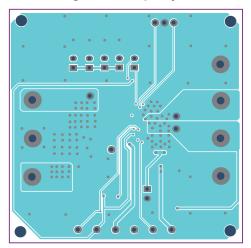


Figure 13: Mid-Layer 2

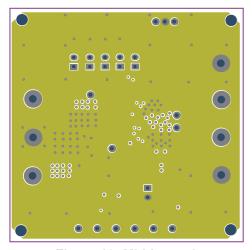


Figure 12: Mid-Layer 1

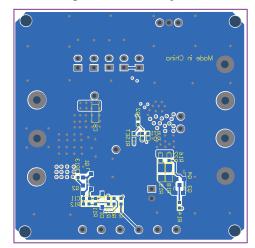


Figure 14: Bottom Layer



Revision History

Revision #	Revision Date	Description	Pages Updated
1.0	12/2/2020	Initial Release	-

Notice: The information in this document is subject to change without notice. Users should warrant and guarantee that third-party Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Power Management IC Development Tools category:

Click to view products by Monolithic Power Systems manufacturer:

Other Similar products are found below:

EVB-EP5348UI BQ25010EVM ISLUSBI2CKITIZ ISL8002AEVAL1Z ISL91108IIA-EVZ ISL28022EVKITIZ STEVAL-ISA008V1

DRI0043 NCP10671B05GEVB EVB-EN6337QA SAMPLEBOXILD8150TOBO1 AP63300WU-EVM AP61100Z6-EVM

KITA2GTC387MOTORCTRTOBO1 AEK-MOT-TK200G1 EVLONE65W STEVAL-ILH006V1 STEVAL-IPE008V2 STEVAL-IPP001V2

STEVAL-ISA013V1 STEVAL-ISA067V1 STEVAL-ISQ002V1 TPS2306EVM-001 TPS2330EVM-185 TPS40001EVM-001 SECO-HVDCDC1362-15W-GEVB BTS7030-2EPA LTC3308AIV#WTRPBF TLT807B0EPV BTS71033-6ESA EV13N91A EV55W64A

Si8285_86v2-KIT NCP-NCV51752D2PAK3LGEVB ISL81807EVAL1Z EVALM7HVIGBTPFCINV4TOBO1 903-0300-000 902-0173-000 903-0301-000 ROA1286023/1 REFSHA35IMD111TSYSTOBO1 150037482 TDINV3000W50B-KIT NCP1681CCM1KWGEVB I7C08A-CC3-EVK-P2 I7C12A-CC3-EVK-P2 i7C20A-CC3-EVK-P2 APEK89303KET-01-T NCP1681MM500WGEVB SI83401BAA-KIT