



# T210·T245·T470 SOLDERING HANDPIECES

# T210-T245-T470 / SOLDERING HANDPIECES

**T210-A** Green grip Micro Handpiece (1,5m cable) **T210-PA** Blue grip Micro handpiece

Use C210 cartridge range

### ESD Safe

Connectable to CD, DI, DD, DDR, DM and RM

**T245-A** Green grip Handpiece (1,5m cable) **T245-PA** Blue grip Handpiece

Use C245 cartridge range

### ESD Safe

Connectable to CD, DI, DD, DDR, DM, RM, HD and HDR

T245-NA Nitrogen Handpiece (Green Grip) with set screw (1,5m cable)

Use C245 cartridge range

KN Nitrogen Kit is needed

### ESD Safe

Connectable to DI, DD, DDR, DM, RM.

T470-A Soft Touch Handpiece (Green grip) with set screw (1,5m cable)

T470-SA Soft Touch Handpiece (Green grip) with set screw (3m cable)

Use C245 and C470 cartridge range

### ESD Safe

Connectable to CD, DI, DD, DDR, DM, RM, HD and HDR

**T470-FA** Foamed Comfort Handpiece (Green grip) with set screw (1,5m cable)

T470-MA Foamed Comfort Handpiece (Green grip) with set crew (3m cable)

Use C245 and C470 cartridge range


# Not ESD Safe

Connectable to CD, DI, DD, DDR, DM, RM, HD and HDR

# CHANGING THE HANDPIECE'S CARTRIDGE



- 1. Place the handpiece in the extractor and remove the cartridge.
- 2. Place the handpiece on top of the new cartridge, press it slightly down and remove the handpiece from the extractor.




Press the cartridge into the opening A, B or C:

- A. For straight C210 cartridges.
- **B**. For curved C210 cartridges.
- C. For C245 cartridges.



# CHANGING THE HANDPIECE'S CARTRIDGE

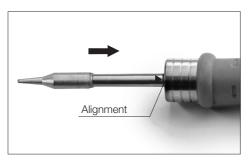

# Important.

It is essential to insert the cartridge till the end for a good connection. Use the mark as reference.



Untigh the screw before changing the cartridge and tight again once the cartridge is properly inserted. **T470** and **T245-NA** with set screw.

**WARNING:** It is esential to tighten this screw for the tool to function.

# **ACCESSORIES**

# **Fume extractor**

Specially designed for the JBC Series T210, T245 and T470 handpieces. Easily clips onto the handpiece and can be quickly removed for easy maintenance.



# **MAINTENANCE**

We recomend periodic cleaning of the metal ring and handpiece support using a solvent.

Due to the nature of its use, the handpiece has a limited life and may require replacing.





# **TECHNICAL SPECIFICATIONS**

### **HANDPIECES**

- T210-A Micro Handpiece.

For high precision work, SMD, etc.

- T210-PA Blue grip Micro Handpiece.

For accuracy soldering work and leaded jobs .

- T245-A Handpiece.

For general soldering work.

- T245-PA Blue handpiece.

For general soldering work and leaded jobs.

- T470-A / T470-SA Handpiece.

For heavy duty soldering applications.

- T470-FA / T470-MA Comfort Handpiece.

Thermally insulated for high thermal demand and prolonged heavy duty soldering applications.



This product should not be thrown in the garbage.



### WARRANTY

JBC's 2 years warranty guarantees this equipment against all manufacturing defects, covering the replacement of defective parts and all necessary labour.

Warranty does not cover product wear due to use or mis-use.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this fully filled in, sheet.

SERIAL Nº		
STAMP OF DEALER		
DATE OF PURCHASE		

# **X-ON Electronics**

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Soldering & Desoldering Stations category:

Click to view products by JBC Tools manufacturer:

Other Similar products are found below:

T0058768747 CA0201 WXD2N 145-2000-ESDN T0058758721N 0051514699N 0051512199N TS2300D WELPB102 0552406 5SS-554-H 5SS-553-H 209202 MFR-2240 DDSE-2QD SRWS-2SC DMPSE-2QB T245-GA 0ICV2005A MX-570 108ESD DS2500D LS30 T0052923699 0IC2205VC MS-GT-Y050 CDN-2QF ZD-154-1C JNA-2B 0IC1105A T0053451699 TESE-2B CVC-9CH0050S ST802 0016268 ZD-154-1A ZD-11L QUICK 959D+ CHB-B 0IC1135A 0IC1305 DMSE-2QB JTSE-2QB 0ICV2005AC HCT-910-21 T0058748850N NH-A MFR-1140 GALE07D-A T0053452699