

TPMS

Tire Pressure Monitoring Sensor

SP37

High integrated single-chip TPMS sensor with a low power embedded micro-controller and wireless FSK/ASK UHF transmitter

SP370 Version A5

900kPa

Datasheet

Revision 1.1, 2012-08-03

Sense & Control

Edition 2012-08-03

Published by Infineon Technologies AG 81726 Munich, Germany © 2012 Infineon Technologies AG All Rights Reserved.

Legal Disclaimer

The information given in this document shall in no event be regarded as a guarantee of conditions or characteristics. With respect to any examples or hints given herein, any typical values stated herein and/or any information regarding the application of the device, Infineon Technologies hereby disclaims any and all warranties and liabilities of any kind, including without limitation, warranties of non-infringement of intellectual property rights of any third party.

Information

For further information on technology, delivery terms and conditions and prices, please contact the nearest Infineon Technologies Office (www.infineon.com).

Warnings

Due to technical requirements, components may contain dangerous substances. For information on the types in question, please contact the nearest Infineon Technologies Office.

Infineon Technologies components may be used in life-support devices or systems only with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.




SP37 High integrated single-chip TPMS sensor with a low power embedded micro-controller and wireless FSK/ASK UHF transmitter

Revision History: 2012-08-03, Revision 1.1

Previous Revision: Revision 1.0			
Page	Subjects (major changes since last revision)		
Page 149	Update Pressure Measurement Error		

We Listen to Your Comments

Any information within this document that you feel is wrong, unclear or missing at all? Your feedback will help us to continuously improve the quality of this document. Please send your proposal (including a reference to this document) to:

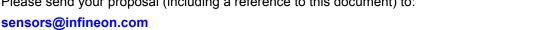



Trademarks of Infineon Technologies AG

AURIX $^{\text{TM}}$, C166 $^{\text{TM}}$, Canpak $^{\text{TM}}$, CIPOS $^{\text{TM}}$, CIPURSE $^{\text{TM}}$, EconoPack $^{\text{TM}}$, CoolMos $^{\text{TM}}$, CoolSet $^{\text{TM}}$, CORECONTROL $^{\text{TM}}$, CROSSAVE $^{\text{TM}}$, DAVE $^{\text{TM}}$, EasyPIM $^{\text{TM}}$, EconoBRIDGE $^{\text{TM}}$, EconoDUAL $^{\text{TM}}$, EconoPIM $^{\text{TM}}$, EiceDRIVER $^{\text{TM}}$, eupec $^{\text{TM}}$, FCOS $^{\text{TM}}$, HITFET $^{\text{TM}}$, HybridPack $^{\text{TM}}$, ISOFACE $^{\text{TM}}$, IsoPack $^{\text{TM}}$, MiPaQ $^{\text{TM}}$, ModSTACK $^{\text{TM}}$, my-d $^{\text{TM}}$, NovalithIC $^{\text{TM}}$, OptiMoS $^{\text{TM}}$, ORIGA $^{\text{TM}}$, PRIMARION $^{\text{TM}}$, PrimePack $^{\text{TM}}$, PrimeSTACK $^{\text{TM}}$, PROFET $^{\text{TM}}$, RASIC $^{\text{TM}}$, ReverSave $^{\text{TM}}$, Satric $^{\text{TM}}$, Sieget $^{\text{TM}}$, Sindrion $^{\text{TM}}$, SipMos $^{\text{TM}}$, SmartLewis $^{\text{TM}}$, Solid Flash $^{\text{TM}}$, Tempfet $^{\text{TM}}$, thinQ! $^{\text{TM}}$, Trenchstop $^{\text{TM}}$, TriCore $^{\text{TM}}$.

Other Trademarks

Advance Design System™ (ADS) of Agilent Technologies, AMBA™, ARM™, MULTI-ICE™, KEIL™, PRIMECELL™, REALVIEW™, THUMB™, µVision™ of ARM Limited, UK. AUTOSAR™ is licensed by AUTOSAR development partnership. Bluetooth™ of Bluetooth SIG Inc. CAT-iq™ of DECT Forum. COLOSSUS™, FirstGPS™ of Trimble Navigation Ltd. EMV™ of EMVCo, LLC (Visa Holdings Inc.). EPCOS™ of Epcos AG. FLEXGO™ of Microsoft Corporation. FlexRay™ is licensed by FlexRay Consortium. HYPERTERMINAL™ of Hilgraeve Incorporated. IEC™ of Commission Electrotechnique Internationale. IrDA™ of Infrared Data Association Corporation. ISO™ of INTERNATIONAL ORGANIZATION FOR STANDARDIZATION. MATLAB™ of MathWorks, Inc. MAXIM™ of Maxim Integrated Products, Inc. MICROTEC™, NUCLEUS™ of Mentor Graphics Corporation. Mifare™ of NXP. MIPI™ of MIPI Alliance, Inc. MIPS™ of MIPS Technologies, Inc., USA. muRata™ of MURATA MANUFACTURING CO., MICROWAVE OFFICE™ (MWO) of Applied Wave Research Inc., OmniVision™ of OmniVision Technologies, Inc. Openwave™ Openwave Systems Inc. RED HAT™ Red Hat, Inc. RFMD™ RF Micro Devices, Inc. SIRIUS™ of Sirius Satellite Radio Inc. SOLARIS™ of Sun Microsystems, Inc. SPANSION™ of Spansion LLC Ltd. Symbian™ of Symbian Software Limited. TAIYO YUDEN™ of Taiyo Yuden Co. TEAKLITE™ of CEVA, Inc. TEKTRONIX™ of Tektronix Inc. TOKO™ of TOKO KABUSHIKI KAISHA TA. UNIX™ of X/Open Company Limited. VERILOG™, PALLADIUM™ of Cadence Design Systems, Inc. VLYNQ™ of Texas Instruments Incorporated. VXWORKS™, WIND RIVER™ of WIND RIVER SYSTEMS, INC. ZETEX™ of Diodes Zetex Limited.

Last Trademarks Update 2011-02-24



Table of Contents

Table of Contents

	Table of Contents	4
	List of Figures	7
	List of Tables	9
1	Introduction	11
1.1	Overview	11
1.2	Features	12
2	Functional Description	13
	General	
	Pin Configuration	
	Pin Description	
	Block Diagram	
	Operating Modes and States	
2.5.1	Operating Modes	
2.5.2	Resets and Operating Mode Selection	
2.5.3	NORMAL Mode Operation	20
2.5.3.1	INIT State	20
2.5.3.2	RUN State	20
2.5.3.3	IDLE State	20
2.5.3.4	POWER DOWN State	20
2.5.3.5	THERMAL SHUTDOWN State	21
2.5.3.6	State Transitions	21
2.5.3.7	Status of SP370 Blocks in Different States	21
2.6	Fault Protection	23
2.6.1	Watchdog Timer	
2.6.2	VMIN Detector	
2.6.3	ADC Measurement Overflow & Underflow	
2.6.4	ADC Selftest	
2.6.5	Bond Wire Surveillance	
2.6.6	Sensor Integrity Check	
2.6.7	TMAX Detector	
	Functional Block Description	
2.7.1	Sensors and Data Acquisition	
2.7.1.1	Pressure Sensor	
2.7.1.2	Acceleration Sensor	
2.7.1.3	Temperature Sensor	
2.7.1.4	Battery Voltage Sensor	
2.7.1.5	Data Acquisition	
2.7.2	Memory Organization	
2.7.2.1	ROM	
2.7.2.1.1	ROM Library Functions and Reset/Wakeup Handlers	
2.7.2.1.2	ROM Protections	
2.7.2.2	FLASH	
2.7.2.2.1	FLASH Organization	
2.7.2.2.2	FLASH Protection	
2.7.2.3	RAM	
	Special Function Registers	
3.1	Microcontroller	34





Table of Contents

3.2	General Purpose Registers	38				
3.3	System Configuration Registers	40				
3.4	System Controller	45				
	Interval Timer					
3.6	Interval Timer Precounter / Calibration	52				
	Clock Controller					
	Crystal Pulling					
	RF 315/434 MHz FSK/ASK Transmitter					
	Manchester/BiPhase Encoder					
	LF Receiver					
	LF Receiver Analog Front End					
	LF Attenuator (AGC)					
	LF Carrier Detector					
	LF Receiver On/Off Timer					
	LF Receiver Baseband					
	Wakeup Pattern Detector					
	LF Receiver Data Interface					
	16 Bit CRC (Cyclic Redundancy Check) Generator/Checker					
	Pseudo Random Number Generator					
	Timer Unit					
	General Purpose Input/Output (GPIO)					
	I ² C Interface					
3.23.1	Programming mode Operation					
3.23.1.1	FLASH Write Line					
3.23.1.2	FLASH Erase					
3.23.1.3	FLASH Check Erase Status					
3.23.1.4	FLASH Read Line					
3.23.1.5	Read Status					
3.23.1.6	FLASH Check CRC					
3.23.1.7	FLASH Set User Configuration Sector Lock					
3.23.1.8	Measure Pressure					
3.23.1.9	Measure Acceleration					
3.23.1.10	The state of the s					
3.23.1.11	Measure Supply Voltage					
3.23.2	DEBUG Mode Operation					
3.23.2.1	Debug Special Function Register					
3.23.2.2	Debugging Functionality					
3.23.2.3	Debugger Commands					
3.23.2.3.1						
3.23.2.3.2						
3.23.2.3.3						
3.23.2.3.4						
3.23.2.3.5	· · · · · · · · · · · · · · · · · · ·					
3.23.2.3.6	· · · · · · · · · · · · · · · · · · ·					
3.23.2.3.7						
3.23.2.3.8	·					
3.23.2.3.9	Run to Next Breakpoint	141				
1	Specification	142				
	Test Board					
1.1.1	SP370 Test Board Schematics					
1.1.2	SP370 Test Board Layout					
	-					





Table of Contents

4.1.3	SP370 Test Board Placement	143
4.1.4	SP370 Test Board Bill of Material	144
4.2	Absolute Maximum Ratings	145
4.3	Operating Range	147
4.4	Characteristics	148
4.4.1	Pressure Sensor (900kPa variant)	149
4.4.2	z-axis Acceleration Sensor	151
4.4.3	Temperature Sensor	152
4.4.4	Battery Sensor	152
4.4.5	Supply Currents	153
4.4.6	RF Transmitter	155
4.4.7	LF Receiver	157
4.4.8	LF Test Cases	161
4.4.9	Crystal Oscillator	162
4.4.10	12 MHz RC HF Oscillator	163
4.4.11	2 kHz RC LP Oscillator	
4.4.12	Interval Timer & LF On/Off Timer	
4.4.13	Voltage Regulator	
4.4.14	Power On Reset / Brown Out Reset	166
4.4.15	VMIN Detector	
4.4.16	FLASH Memory	
4.4.17	TMAX Detector	167
4.4.18	Watchdog Timer	
4.4.19	Digital I/O pins	
4.4.20	I ² C Interface	168
5	Package Information	169
5.1	Package Outline	169
5.2	Identification Code	170
5.2.1	Identification Code Definition	170
	Poforoncos	171



List of Figures

List of Figures

Figure 1	Pin Configuration PG-DSOSP-14-6 (Top View, Figure not to Scale)	. 13
Figure 2	SP370 Block Diagram	
Figure 3	Available Operating Modes if Lockbyte 2 is not Set	. 18
Figure 4	Available Operating Modes if Lockbyte 2 is Set	
Figure 5	Power On Reset / Brown Out Reset / Operating Mode Selection	
Figure 6	NORMAL Mode State Diagram	. 20
Figure 7	Device Orientation	. 24
Figure 8	Memory Map	. 26
Figure 9	Interval Timer Block Diagram	. 50
Figure 10	SP370 Clock Concept	. 54
Figure 11	FSK using the internal capacitors	
Figure 12	ASK using the internal capacitor	
Figure 13	FSK using only external capacitors	. 60
Figure 14	ASK using only an external capacitor	. 61
Figure 15	RF Transmitter Block Diagram	
Figure 16	Manchester/BiPhase Encoder	. 67
Figure 17	RF PA Control Logic	. 68
Figure 18	Diagram of the Different RF Encoder Modes	
Figure 19	LF Receiver Block Diagram	. 73
Figure 20	LF Receiver AFE Block Diagram	. 76
Figure 21	AGC Timing diagram	. 78
Figure 22	LF Receiver Carrier Detector Filtering	. 80
Figure 23	LF Carrier Detector Response	. 81
Figure 24	Carrier Detector Threshold Calibration Timing	. 82
Figure 25	LF Receiver Baseband	
Figure 26	LF Receiver Baseband Configurations	. 88
Figure 27	LF Telegram Format	. 89
Figure 28	LF Decoder	. 89
Figure 29	LF Receiver Baseband Telegram Timing	. 90
Figure 30	CRC (Cyclic Redundancy Check) Generator/Checker	
Figure 31	Example for CRC16 usage	
Figure 32	Example for serial CRC generation/checking	. 99
Figure 33	Shift Register Implementation	103
Figure 34	Timer Mode 0	
Figure 35	Timer Mode 1	105
Figure 36	Timer Mode 2	
Figure 37	Timer Mode 3	
Figure 38	Timer mode 4	107
Figure 39	Timer Mode 5	108
Figure 40	Timer Mode 6	
Figure 41	Synchronization Stage & Spike Suppression Examples	
Figure 42	PROGRAMMING Mode State Diagram	
Figure 43	I ² C Legend - PROGRAMMING Mode	125
Figure 44	FLASH Write Line I2C Command	126
Figure 45	FLASH Erase Command	
Figure 46	FLASH Check Erase Status Command	
Figure 47	FLASH Read Line Command	
Figure 48	FLASH Read Status Command	
Figure 49	FLASH Check CRC	130



SP370 Tire Pressure Monitoring Sensor

List of Figures

Figure 50	FLASH Set User Configuration Sector Lock	130
Figure 51	Measure Pressure	131
Figure 52	Measure Acceleration	134
Figure 53	Measure Temperature	136
Figure 54	Measure Supply Voltage	137
Figure 55	I ² C Legend - DEBUG Mode	139
Figure 56	DEBUG SetSFR Command	
Figure 57	DEBUG ReadSFR Command	139
Figure 58	DEBUG SetMemory Command	140
Figure 59	DEBUG ReadMemory Command	140
Figure 60	DEBUG SetPC Command	140
Figure 61	DEBUG ReadPC Command	140
Figure 62	DEBUG SingleStep Command	140
Figure 63	DEBUG Run Interruptible Command	141
Figure 64	DEBUG Run to Next Breakpoint Command	
Figure 65	SP370 Test Circuit / Schematic	142
Figure 66	SP370 Test Board Layout	143
Figure 67	SP370 Test Board Placement	143
Figure 68	LF Receiver Special Function Register Settings for Telegram Mode	158
Figure 69	LF Receiver Special Function Register Settings for Carrier Detection	159
Figure 70	Test Circuit for large LF signal measurements	161
Figure 71	Test Circuit for small LF signal measurements	161
Figure 72	PG-DSOSP-14-6 Package Dimensions	169
Figure 73	PG-DSOSP-14-6 marking	170



List of Tables

List of Tables

Table 1	IPin Description	14
Table 2	SP370 - Operating Modes	17
Table 3	State Transitions in NORMAL Mode	21
Table 4	Status of SP370 Blocks in Different States	22
Table 5	Register Naming Convention Wakeup / Reset Value	30
Table 6	Registers Overview	30
Table 7	Registers Access Types	33
Table 8	Register 0 to F	38
Table 9	Crystal Selection	63
Table 10	GPIO Port Configuration	115
Table 11	External Wakeup Configuration	117
Table 12	I/O Port 1 - Alternative Functionality	117
Table 13	FLASH Write Line Parameters	126
Table 14	FLASH Erase Parameters	126
Table 15	FLASH Check Erase Parameters	127
Table 16	FLASH Check Erase Return values	127
Table 17	FLASH Read Line Parameters	128
Table 18	FLASH Read Line Return values	128
Table 19	FLASH Read Status Return values	129
Table 20	FLASH Check CRC Return values	130
Table 21	Measure Pressure Parameters	132
Table 22	Measure Pressure Return Values	133
Table 23	Measure Acceleration Parameters	
Table 24	Measure Acceleration Return values	135
Table 25	Measure Temperature Return values	
Table 26	Measure Supply Voltage Return values	
Table 27	DEBUG mode SFRs	
Table 28	SP370 Test Board Bill of Material	
Table 29	Absolute Maximum Ratings	
Table 30	Operating Range	
Table 31	Pressure Sensor (100 to 900kPa Automatic Pressure Range), V _{bat} = 2.1 V3.6 V	
Table 32	Pressure Sensor (100 to 550kPa Manual Pressure Range), V _{bat} = 2.1 V3.6 V	
Table 33	Pressure Sensor (100 to 900kPa Manual Pressure Range), V _{bat} = 2.1 V3.6 V	
Table 34	z-axis Acceleration Sensor, V _{bat} = 2.1 V3.6 V	
Table 35	Temperature Sensor, V _{bat} = 2.1 V3.6 V	
Table 36	Battery Sensor, V _{bat} = 2.1 V3.6 V	
Table 37	Supply Currents	
Table 38	RF Transmitter	
Table 39	LF Receiver, V _{bat} = 2.1 V3.6 V	157
Table 40	LF Receiver Telegram, V _{bat} = 2.1 V3.6 V, f _{LF} = 120 kHz130 kHz	
Table 41	LF Receiver Telegram, V_{bat} = 2.1 V3.6 V, T = -20 °C90 °C, f_{LF} = 120 kHz130 kHz	
Table 42	LF Receiver Carrier Detection, V _{bat} = 2.1 V3.6 V, f _{LF} = 120 kHz130 kHz	
Table 43	LF Receiver Carrier Detection, V_{bat} = 2.3 V3.3 V, T = , f_{LF} = 120 kHz130 kHz	
Table 44	Crystal Oscillator, f _{Crystal} = 18 MHz20 MHz	
Table 45	12 MHz RC HF Oscillator	
Table 46	2 kHz RC LP Oscillator	
Table 47	Interval Timer / LF On/Off Timer	
Table 48	Voltage Regulator	
Table 49	Power On Reset / Brown Out Reset	166



SP370 Tire Pressure Monitoring Sensor

List of Tables

Table 50	VMIN Detector	166
Table 51	FLASH Memory	167
	TMAX Detector	
Table 53	Watchdog Timer	168
	Digital I/O pins	
	I ² C Interface	



Tire Pressure Monitoring Sensor

SP370

SP370

1 Introduction

1.1 Overview

The SP370 is a sensor for air pressure measurements designed for TPMS applications. With its microcontroller and integrated peripherals, the SP370 offers a single package solution for TPMS applications. It requires only few external components. The SP370 features

- · Pressure sensor for ambient pressure measurement
- Z-axis acceleration sensor for motion detection
- Temperature and supply voltage sensor
- · 8051 based microcontroller
- Advanced system controller to minimize power consumption
- RF Transmitter
- LF Receiver

Measurements of pressure, acceleration, temperature, and battery voltage are performed under software control, and the data can be formatted and prepared for RF transmission by the microcontroller.

The Auto Pressure Range allows the possibility to use one device, one sensor module assembly, and one set of application software for accurately measuring pressure over a wide range. The Auto Pressure Range determines automatically the appropriate pressure calibration range to use without the need to change the hardware or the software. Using the Auto Pressure Range feature will result in improved accuracy in the lower-end of a wide range pressure sensor.

An intelligent wakeup mechanism is available to reduce power consumption. An Interval Timer controls the timing of measurements and transmissions. The circuitry can be programmed to wakeup at regular intervals or it can be woken up by the integrated LF Receiver, which furthermore enables SP370 to receive data. Additionally, wakeup is possible by an external wakeup source connected to a General Purpose Input/Output (GPIO).


The integrated microcontroller is instruction set compatible to the standard 8051 processor. It is equipped with various peripherals (e.g. a hardware Manchester/BiPhase Encoder/Decoder and CRC Generator/Checker) enabling an easy implementation of customer-specific applications.

The low power consumption RF Transmitter for 315 and 434 MHz contains a fully integrated PLL synthesizer, an ASK/FSK modulator and an efficient power amplifier. Fine tuning of the center frequency can be done either using the on-chip capacitors bank or adding external capacitors.

On-chip FLASH memory is integrated to store:

- · The customer specific application program code
- A unique ID-Number
- The calibration data for the sensors

Product Name	Product Type	Ordering Code	Package
SP370	Tire Pressure Monitoring Sensor	SP370-25-116-0	PG-DSOSP-14-6

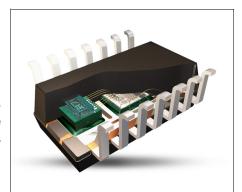



Introduction

Additional on-chip ROM memory is available that holds the ROM library functions (developed by Infineon) which covers standard tasks used by the application. The available ROM Library functions are described in a separate document (see [1]).

1.2 Features

Main features:

- Supply voltage range from 1.9 V up to 3.6 V
- Operating temperature range -40 to +125 °C
- Low supply current
- Pressure sensor for 500/900 kPa range
- · Z-axis acceleration sensor for motion detection
- Temperature sensor
- THERMAL SHUTDOWN mode for device protection at high temperatures
- · Battery voltage sensor
- Integrated RF Transmitter for ISM Band 315/434 MHz
- Selectable output power 5 or 8 dBm (transformed into 50 Ohm load)
- Configurable RF transmission data rates up to 20 kbit/s Manchester coded (40 kchips/s)
- ASK/FSK modulation capability
- Frequency deviation up to 50 kHz in FSK mode
- Fully integrated VCO and PLL Synthesizer
- · On chip crystal oscillator tuning
- LF Receiver with very high input sensitivity
- · LF Receiver data rate 3.9 kbit/s
- 8051 instruction set compatible microcontroller (cycle-optimized)
- 6 kByte FLASH memory (for application code)
- 16 kByte ROM (for ROM library functions)
- 256 Bytes RAM
- Wakeup from POWER DOWN state using the Interval Timer, the LF Receiver or an external wakeup source connected via a GPIO pin
- I²C programming/debugging interface
- · Hardware Manchester/BiPhase Encoder for RF Transmitter
- Hardware Manchester Decoder for LF Receiver
- 16 Bit Hardware CRC generator
- 8 Bit Pseudo Random Number Generator
- Watchdog timer
- 3 bidirectional GPIO pins



2 Functional Description

2.1 General

2.2 Pin Configuration

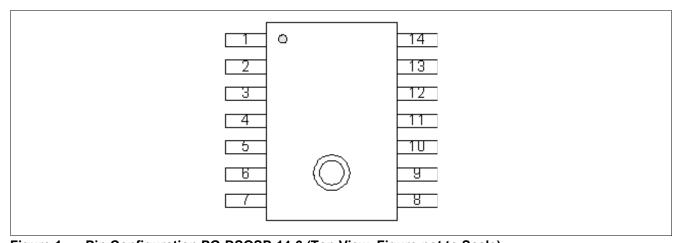


Figure 1 Pin Configuration PG-DSOSP-14-6 (Top View, Figure not to Scale)



2.3 Pin Description

Pin No.	Name	Pin Type	Buffer Type	Function
1	PP0	Digital I/0	VBat Pullup Pulldown Pulldown	GPIO PP0 / I2C Clock / OpMode0 Note: Internal pull-up/pull-down switchable
2	PP1	Digital I/0	Pulling Resistor GND VBat	GPIO PP1 / I2C Data / OpMode1 Note: Internal pull-up/pull-down switchable
3	PP2	Digital I/0	PPx Data Data Tristate P1Dir Tristate P1Out P1In	GPIO PP2 / TxData Note: Internal pull-up/pull-down switchable
4	PA	Analog	PA 10 S C R PGND PGND	RF Transmitter Output
5	PGND	Supply	PGND	RF Transmitter Ground
7	GND	Supply		Ground
8	GND	Supply	$\frac{1}{\sqrt{1}}$	Ground
12	XGND	Supply	GND -	Crystal Oscillator Ground
			XGND	



Pin No.	Name	Pin Type	Buffer Type	Function
6	VBAT	Supply		Battery Supply Voltage
9	VREG	Supply	VReg Voltage Regulator	Internal voltage regulator output Note: Connect to decoupling capacitor (CBCAP=100nF)
10	LF	Analog		Differential LF Receiver Input 1
11	XLF	Analog	(X)LF 50 15k	Differential LF Receiver Input 2
13	XTAL	Analog	VReg VReg VReg VReg VReg XGND XGND XGND XGND XGND	Crystal Oscillator Input
14	XTALCAP	Analog	XTALCAP	Crystal Oscillator Load Capacitance



2.4 Block Diagram

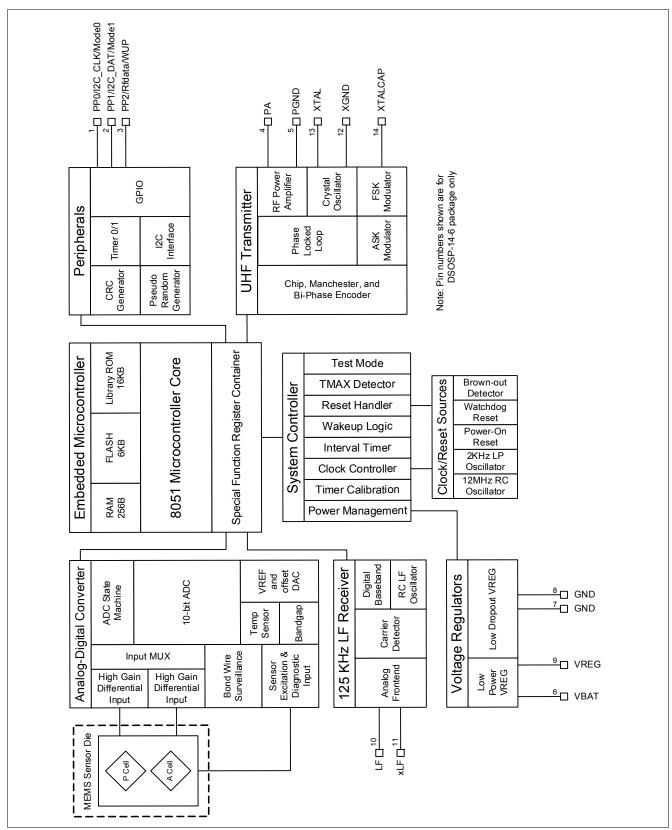


Figure 2 SP370 Block Diagram



2.5 Operating Modes and States

The SP370 can be operated in four different operating modes.

- NORMAL mode
- PROGRAMMING mode
- DEBUG mode
- (internal production TEST mode)

The operating mode selection is done at Power On Reset by setting the GPIO pins PP0 and PP1 according to the following table:

Table 2 SP370 - Operating Modes

PP0	PP1	Operating mode	Device controlled by
1	1	NORMAL mode	FLASH Program at 4000 _H
0	1	PROGRAMMING mode	ROM firmware / external I ² C Master
1	0	DEBUG mode	ROM firmware / external I ² C Master
0	0	Internal production test mode ¹⁾	ROM firmware / external I ² C Master

¹⁾ IMPORTANT: Do not enter this mode since unpredictable behavior of the device might result

Note: Since PP0 and PP1 have their internal pull-up resistors enabled at Power On Reset, the default startup mode is NORMAL mode if the PP0 and PP1 pins are left unconnected.

2.5.1 Operating Modes

The operating modes depend on the setting of Lockbyte 2, which protects the FLASH Sector 0 (Code Sector) against overwriting, erasing and read-out to prevent reverse engineering of the application code. **Figure 3** shows the mode diagram if the Lockbyte 2 is not set.

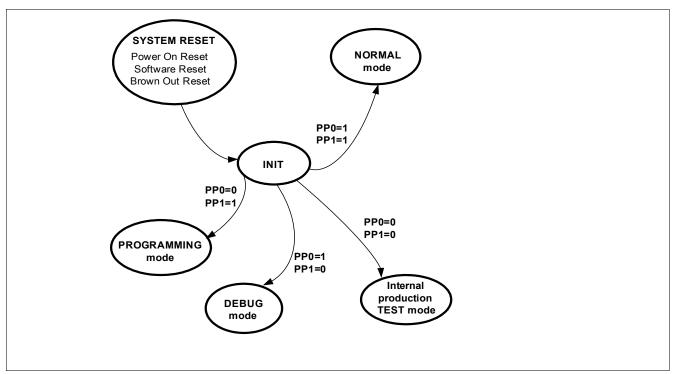


Figure 3 Available Operating Modes if Lockbyte 2 is not Set

For security reasons some operating modes are not accessible anymore after the Lockbyte 2 (see "FLASH" on Page 28) is set. Figure 4 shows the behavior of the SP370 once the Lockbyte 2 is set. All mode selections (except the internal production TEST mode) lead to NORMAL mode.

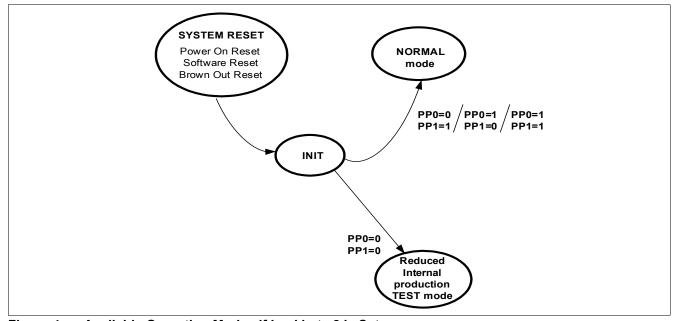


Figure 4 Available Operating Modes if Lockbyte 2 is Set



2.5.2 Resets and Operating Mode Selection

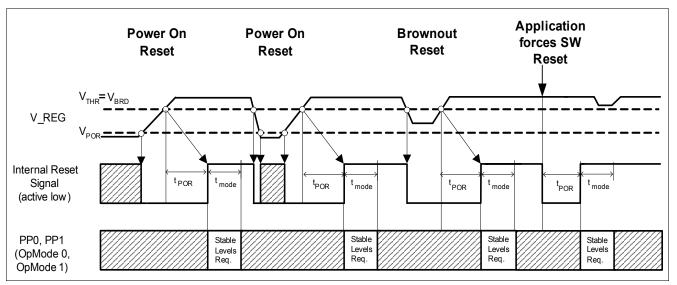


Figure 5 Power On Reset / Brown Out Reset / Operating Mode Selection

Three kinds of resets can occur which cause an operating mode selection:

- The Power On Reset circuit is activated if V_{REG} rises above V_{POR} . The internal blocks are held in RESET state until V_{REG} has risen above V_{THR} .
- The Brown Out Reset circuit is activated if V_{REG} drops below V_{BRD} . The internal blocks are held in RESET state until V_{REG} has risen above V_{BRD} again.
- The SP370's Software Reset can be forced by SP370 setting SRF bit CFG2.0[RESET].

When the Internal Reset state is released (after t_{POR} is elapsed), a further period t_{MODE} is required for reading the states applied to PP0 and PP1 to determine the operation mode of the device according to **Table 2 "SP370 - Operating Modes" on Page 17**. The levels on these pins must be stable during the whole t_{MODE} period. After t_{MODE} has elapsed, the device starts operation in the selected mode.

The Watchdog Reset is a special case and it does not result in a mode selection. The Watchdog Reset affects only the CPU core and forces a program restart.



2.5.3 NORMAL Mode Operation

After a startup in NORMAL mode the system controller handles the different states as shown in the state transition diagram below.

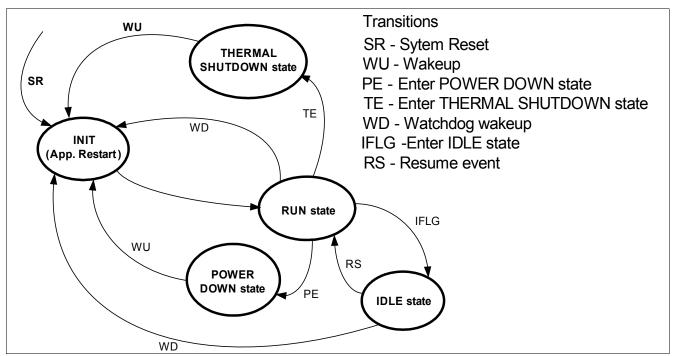


Figure 6 NORMAL Mode State Diagram

2.5.3.1 INIT State

The INIT state is entered after every System Reset (either Power On Reset, Brown Out Reset or Software Reset) to determine the desired operation mode (see "Operating Modes" on Page 18) and to initialize the SP370. The INIT state is entered as well if a wakeup or watchdog timeout occurs, but no operation mode selection is done after a wakeup and RUN state is entered immediately.

2.5.3.2 RUN State

In RUN state, the microcontroller is executing the application program from the FLASH. In this state the watchdog is active to prevent software-deadlocks. The microcontroller (CPU) clock source is always based on the 12MHz RC HF Oscillator.

2.5.3.3 IDLE State

In IDLE state the microcontroller clock is stopped to reduce the current consumption, while the peripherals Timer 0, ADC, RF Transmitter and LF Receiver can continue normal operation.

After a resume event is triggered by one of the enabled peripherals, the microcontroller continues the operation where it was interrupted. The resume event source can be identified by reading SFR REF (see "Resume Event Flag Register" on Page 49).

2.5.3.4 POWER DOWN State

In POWER DOWN state, the system controller takes control of the SP370 microcontroller and most peripherals are switched off.



In POWER DOWN state the active peripherals (Interval Timer, LF On/Off timer,...) are clocked by the 2kHz RC LP Oscillator.

After a wakeup occurred, the wakeup source can be identified by reading SFR WUF (see "Wakeup Flag Register" on Page 47).

2.5.3.5 THERMAL SHUTDOWN State

The application can enter THERMAL SHUTDOWN state if the temperature is above the TMAX threshold temperature. Once the device is in THERMAL SHUTDOWN state, only the TMAX circuit can provide a wakeup event. All other wakeup sources are disabled. The device will remain in this state until the temperature falls below the $T_{\rm REL}$ threshold (see "TMAX Detector" on Page 23 for details).

2.5.3.6 State Transitions

With reference to Figure 6 "NORMAL Mode State Diagram" on Page 20, the following state transitions can occur:

Table 3 State Transitions in NORMAL Mode

State transition	Description
RUN state => IDLE state	The application program can set SFR bit CFG0.5 [IDLE] to enter IDLE state. (see "Configuration Register 0" on Page 40) Note: If no peripheral that can create a RESUME event is active, IDLE state will not be entered and the application will continue uninterrupted.
IDLE state => RUN state	A peripheral unit (Timer 0, ADC, RF Transmitter, LF Receiver) creates a resume event. The application automatically resumes where it was interrupted when entering IDLE state (see "Resume Event Flag Register" on Page 49)
IDLE state => INIT state RUN state => INIT state	Overflow of the watchdog timer. The application will restart. The watchdog wakeup is indicated in the SFR WUF. "Wakeup Flag Register" on Page 47
RUN state => THERMAL SHUDOWN state	The application program can call a ROM Library function to enter THERMAL SHUTDOWN state.
RUN state => POWER DOWN state	The application program can call a ROM Library function to enter POWER DOWN state.
POWER DOWN state => RUN state THERMAL SHUTDOWN state => RUN state	A wakeup event will restart the application, and set the SFR WUF accordingly. (see "Wakeup Flag Register" on Page 47)
INIT state => RUN state	This state change is initiated automatically by the system controller as soon as the initialization is finished.

2.5.3.7 Status of SP370 Blocks in Different States

Depending on the current state in NORMAL mode the internal blocks of the SP370 are active, inactive or are not supplied with supply voltage to minimize the current consumption. The following table gives an overview over of the individual blocks in the different states.



Table 4 Status of SP370 Blocks in Different States

Unit	Run state	IDLE state	POWER DOWN state	THERMAL SHUT- DOWN state	
Power On Reset	Active ¹⁾	Active	Active	Active	
Brown Out Detector	Active	Active	Inactive	Inactive	
TMAX Detector	Handled by ROM Library functions ²⁾	Inactive ³⁾	Inactive	Active	
$\overline{\text{Voltage Regulator }(V_{\text{REG}})}$	Active	Active	Active	Active	
System controller	Active	Active	Active	Active	
Microcontroller Active		Inactive	No supply ⁴⁾	No supply	
Manchester/ Active BiPhase encoder, Timer		Active	No supply	No supply	
Peripheral modules CRC, I2C, Pseudo Random Number Generator Selectable inactive		Inactive	No supply	No supply	
Watchdog timer Active		Active No supply		No supply	
Upper 128Bytes RAM Active		Inactive	No supply	No supply	
Lower 128Bytes RAM Active		Inactive	Selectable No supply or inactive	Selectable No supply or inactive	
FLASH	Active	Inactive	No supply	No supply	
ROM	Active	Inactive	No supply	No supply	
Crystal oscillator	Selectable inactive or active	Selectable inactive or active	No supply	No supply	
2kHz RC LP Oscillator	Active	Active	Active	Inactive	
12MHz RC HF Oscillator	Active	Active	No supply	No supply	
Interval Timer	Active	Active	Active	Inactive	
LF Receiver Selectable inactive or active		Selectable inactive or active	Selectable inactive or active	Inactive	
RF Transmitter Selectable inactive or active		Selectable inactive or active	Inactive	Inactive	
Sensor	Handled by ROM Library functions	Handled by ROM Library functions	No supply	No supply	

¹⁾ Active: block is powered, active and keeps its register contents.

²⁾ The ADC, the Sensor and VMIN Detector are controlled by ROM Library functions described in [1].

³⁾ Inactive: block is powered, cannot be used, but keeps its register contents.

⁴⁾ No supply: block is not powered, cannot be used and all register content is lost.



2.6 Fault Protection

The SP370 features multiple fault protections which prevent the application from unexpected behavior and deadlocks. This chapter gives a brief overview of the available fault protections. Detailed explanation of the usage can be found later in this document and in [1].

2.6.1 Watchdog Timer

For operation security a watchdog timer is available to avoid application software deadlocks. The watchdog timer is only active in NORMAL mode and DEBUG mode and must be reset periodically by the application, otherwise the timer generates a wakeup and forces a restart of SP370 application program. Setting SFR bit CFG2.1[WDRES] resets the watchdog timer (see "Configuration Register 2" on Page 42)

The watchdog timeout period is fixed (see **Table 53 "Watchdog Timer" on Page 168**). The accuracy depends on the accuracy of the 2kHz RC LP Oscillator which is used to clock the watchdog timer.

Upon wakeup the watchdog timer is automatically reset. The watchdog timer is not, however, automatically reset upon entry into IDLE state. Therefore care must be taken so that the application does not remain in IDLE state longer than the minimum watchdog timeout period.

2.6.2 VMIN Detector

This circuit will detect if the supply voltage is very close to the minimum required value. The ROM library functions which perform measurements will return the VMIN status in a status byte with the measurement result (see [1]).

2.6.3 ADC Measurement Overflow & Underflow

The ROM Library functions which perform measurements will return the over/underflow status in a status byte with the measurement result. (see [1])

2.6.4 ADC Selftest

A dedicated ROM Library function is able to perform a selftest of the ADC (see [1]).

2.6.5 Bond Wire Surveillance

The continuity of the bond wire connection between the ASIC die and the sensor die is checked as part of every pressure and acceleration measurement. The ROM library routines which perform the measurements will return the bond wire status in a status byte with the measurement result (see [1]).

2.6.6 Sensor Integrity Check

An integrity check of the acceleration sensor is performed as part of every measurement. The ROM library routine which performs acceleration measurements will return the integrity status in the status byte with the measurement result (see [1]).

2.6.7 TMAX Detector

The TMAX detector is used to wakeup the SP370 from THERMAL SHUTDOWN state if the ambient temperature falls below the release trigger level $T_{\rm REL}$.

Entering THERMAL SHUTDOWN state is initiated by a ROM Library function described in [1].



2.7 Functional Block Description

2.7.1 Sensors and Data Acquisition

The SP370 has four sensors to acquire environmental data:

2.7.1.1 Pressure Sensor

The pressure sensor consists of a single-crystal silicon, bulk micro machined membrane with an integrated full Wheatstone piezo-resistive bridge. The piezo-resistors are placed inside a vacuum reference chamber, whilst the pressure media to be measured in the application is applied to the opposite side of the membrane. This gives good long-term properties as the measurement bridge is protected from the environment. Pressure measurement is performed by a dedicated ROM library function (see [1]).

2.7.1.2 Acceleration Sensor

The acceleration sensor consists of a single-crystal silicon, bulk micro machined beam and mass with an integrated full Wheatstone piezo-resistive bridge. The whole beam and mass are placed inside a hermetically sealed chamber and are therefore well protected from the environment. A diagnostic resistor is integrated along the edge of the beam to be used to check the mechanical integrity of the beam. Acceleration measurement is performed by a dedicated library ROM library function (see [1]). Figure 7 shows the direction of the sensitive axis for the accelerometer. If the SP370 is mounted on the wheel as shown in Figure 7, it will measure a positive acceleration when the wheel rotates.

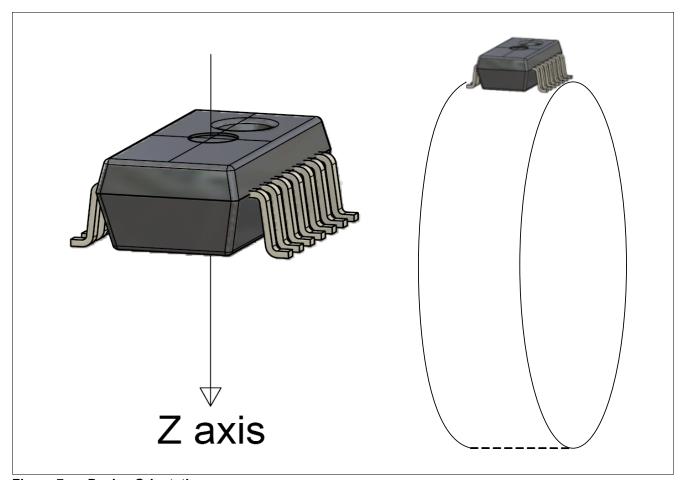


Figure 7 Device Orientation

Datasheet 24 Revision 1.1, 2012-08-03



2.7.1.3 Temperature Sensor

The temperature sensor is placed on the ASIC. This is read by the ADC referenced to a fixed (band gap) voltage. Temperature measurement is performed by a dedicated ROM library function (see [1]).

2.7.1.4 Battery Voltage Sensor

The battery voltage sensor is a circuit which provides a signal proportional to the supply voltage. The voltage is read by the ADC referenced to a fixed (band gap) voltage. Supply Voltage measurement is performed by a dedicated ROM library function (see [1]).

2.7.1.5 Data Acquisition

The analog data is acquired and digitized by the internal 10 Bit ADC.

Measurement routines for acquiring the environmental data are available within the ROM library functions that are described in [1].

Characteristic of the individual sensors can be found in "Characteristics" on Page 148.



2.7.2 Memory Organization

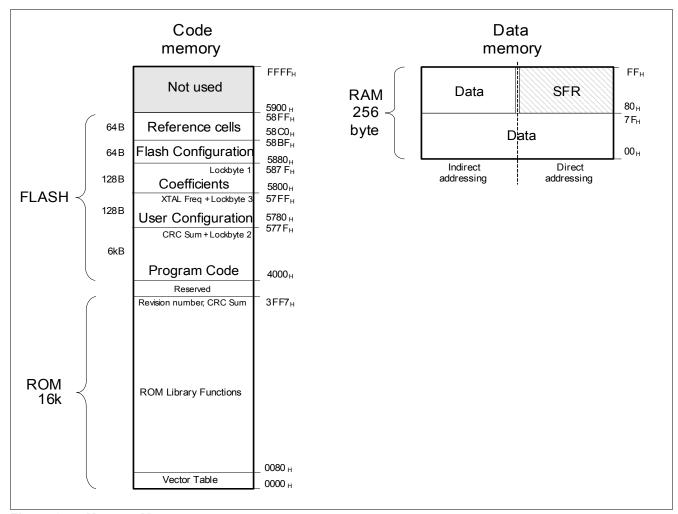


Figure 8 Memory Map

The following memory blocks are implemented:

- 16 kByte ROM memory
- 6 kByte FLASH memory
- 256 Byte RAM memory
- 128 Byte SFR register



2.7.2.1 ROM

A 16 kB ROM memory is located in the address range $0000_{\rm H}$ to $3{\rm FF7}_{\rm H}$.

2.7.2.1.1 ROM Library Functions and Reset/Wakeup Handlers

The ROM contains the reset handler, operation mode handler, wakeup handler, internal test and debug routines and the ROM Library functions (see in [1]).

2.7.2.1.2 ROM Protections

To protect the ROM code against readout a hardware mechanism is implemented, thus no read operations can be performed on the ROM.

Direct jumping into the ROM area is prevented by a hardware mechanism, thus access to the ROM library functions is granted only via a vector table at the bottom of the ROM address space.



2.7.2.2 FLASH

2.7.2.2.1 FLASH Organization

The FLASH is divided into five sectors. Each sector can be erased and written individually.

Sectors 0 and 1 are accessible for customer usage.

Sectors 2, 3 and 4 are written in the Infineon production site and cannot be erased or re-written by the customer.

- 4000_H -- 577F_H (6016 Bytes) Code sector (0): The code sector contains the application software including a CRC16 Checksum (to be written to 577D_H -- 577E_H) and the Lockbyte 2 (to be written to 577F_H).
- 5780_H -- 57FF_H (128 Bytes) User Configuration sector (1): The User Configuration sector can store individual device configuration data. It also contains the crystal frequency which is needed as a timebase for ROM Library functions (to be written to 57FA_H -- 57FC_H) and the Lockbyte 3 (to be written to 57FF_H).
- 5800_H -- 587F_H (128 Bytes) Coefficients sector (2): This sector is written during the sensor calibration process and contains calibration coefficients, the unique Sensor ID and Lockbyte 1 (to be written to 587F_H).
- 5880_H -- 58BF_H (64 Bytes) FLASH Configuration sector (3): This sector contains the FLASH driver parameters and other device configuration parameters.
- 58C0_H -- 58FF_H (64 Bytes) Reference Cell sector (4): This sector contains the reference cells for FLASH reading.

2.7.2.2.2 FLASH Protection

To protect the FLASH against unauthorized access three FLASH Lockbytes are available.

Note: The Lockbytes are set, if the value in the appropriate FLASH address is programmed to D1_H. Setting the Lockbyte to 00_H will result in a unlocked FLASH area. Any other value must not be written to these locations. After programming a Lockbyte, the SP370 has to be reset before the FLASH lock takes effect.

Lockbyte 1 (587F_H)

This Lockbyte protects the FLASH sectors 2, 3 and 4 against overwriting and erasing. This Lockbyte is programmed at the Infineon production site.

Lockbyte 2 (577F_H)

This Lockbyte protects the FLASH sector 0 (Code Sector) against overwriting, erasing (except reduced internal production test mode) and read-out to prevent reverse engineering of the application code.

This Lockbyte has to be set at the end of the programming sequence of the Code Sector via the I²C Interface (when writing the highest FLASH Line starting at 5760_H). Once it is set, the available operating modes are reduced according to Figure 4 "Available Operating Modes if Lockbyte 2 is Set" on Page 18.

Lockbyte 3 (57FF_H)

This Lockbyte protects the FLASH sector 1 (User Configuration Sector) against overwriting and erasing (except reduced internal production test mode).

The Lockbyte can be set either via I²C in PROGRAMMING mode in the same programming sequence as Lockbyte 2 is set, or by using a dedicated ROM Library function in NORMAL mode by the application software (see [1]).



2.7.2.3 RAM

The RAM is available as volatile data storage for the application program. Some RAM locations are required by the ROM Library Functions and therefore not freely available for use by the application program. For more details please refer to the ROM Library function guide [1].

The upper 128 bytes of RAM are switched off in POWER DOWN state and THERMAL SHUTDOWN state and lose their contents.

The lower 128 bytes of RAM can be powered during POWER DOWN state and THERMAL SHUTDOWN state. This is selectable using SFR bit CFG2.4[PDLMB].

If not powered in these states, this RAM loses the content, otherwise it can be used as battery buffered storage like the General Purpose Registers (see "General Purpose Registers" on Page 38).

Note: The RAM is not reset at a System Reset or watchdog timeout.

After a Brown Out Reset this feature may be used to possibly recover data.

After Power On Reset the application has to initialize the RAM if needed.



3 Special Function Registers

Special Function Registers (SFR) are used to control and monitor the state of the SP370 and its peripherals. The following table shows the naming convention for the SFR descriptions that are used throughout this document

Table 5 Register Naming Convention Wakeup / Reset Value

State	Symbol	Description
Low	0	Register value is 0 _B
High	1	Register value is 1 _B
Undefined	X	Register value is undefined
Unchanged	U	Register value is unchanged

Table 6 provides links within this document to detailed description of the application relevant SFRs. In addition to register names and offset addresses, this table indicates how each SFR behaves after wakeup and reset events. The Wakeup Value column applies in the case of a wakeup event, which includes a watchdog timeout. The Reset Value column applies in the case of a Power On Reset, Brownout Reset or Software Reset event.

Table 6 Registers Overview

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
Microcontroller		'	'	
ACC	Accumulator	E0 _H	00 _H	00 _H
В	Register B	F0 _H	00 _H	00 _H
DPH	Data Pointer (high)	83 _H	00 _H	00 _H
DPL	Data Pointer (low)	82 _H	00 _H	00 _H
PSW	Program Status Word	D0 _H	00 _H	00 _H
SP	Stack Pointer	81 _H	07 _H	07 _H
General Purpose	Registers ¹⁾	'	'	
GPR0	General Purpose Register 0	B8 _H	UU _H	XX _H
GPR1	General Purpose Register 1	B0 _H	UU _H	XX _H
GPR2	General Purpose Register 2	A8 _H	UU _H	XX _H
GPR3	General Purpose Register 3	F1 _H	UU _H	XX _H
GPR4	General Purpose Register 4	F2 _H	UU _H	XX _H
GPR5	General Purpose Register 5	F3 _H	UU _H	XX_H
GPR6	General Purpose Register 6	F5 _H	UU _H	XX _H
GPR7	General Purpose Register 7	F6 _H	UU _H	XX _H
GPR8	General Purpose Register 8	F7 _H	UU _H	XX _H
GPR9	General Purpose Register 9	F9 _H	UU _H	XX_H
GPRA	General Purpose Register 10	FA _H	UU _H	XX_H
GPRB	General Purpose Register 11	FB _H	UU _H	XX _H



Table 6 Registers Overview (cont'd)

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
GPRC	General Purpose Register 12	FC _H	UU _H	XX _H
GPRD	General Purpose Register 13	FD _H	UU _H	XX _H
GPRE	General Purpose Register 14	FE _H	UU _H	XX _H
GPRF	General Purpose Register 15	FF _H	UU _H	XX _H
System Configuration	n Registers			
CFG0	Configuration Register 0	F8 _H	0000U000 _B	00 _H
CFG1	Configuration Register 1	E8 _H	000U000U _B	00 _H
CFG2	Configuration Register 2	D8 _H	000U1000 _B	18 _H
DSR	Diagnosis and Status Register	D9 _H	0XUU00XU _B	0XXX0000 _B
System Controller				
WUF	Wakeup Flag Register	C0 _H	XX _H	00 _H
WUM	Wakeup Mask Register	C1 _H	UU _H	FF _H
REF	Resume Event Flag Register	D1 _H	00 _H	00 _H
Interval Timer				
ITPR	Interval Timer Period Register	BC _H	UU _H	01 _H
Interval Timer Preco	unter / Calibration			,
ITPH	Interval Timer Precounter Register (High Byte)	BB _H	0000UUUU _B	03 _H
ITPL	Interval Timer Precounter Register (Low Byte)	BA _H	UU _H	E8 _H
Clock Controller		ı		
DIVIC	Internal Clock Divider	B9 _H	000000UU _B	00 _H
Crystal Pulling				
XTAL0	XTAL Frequency Register (FSKLOW)	C4 _H	UU _H	FF _H
XTAL1	XTAL Frequency Register (FSKHIGH/ASK)	C3 _H	UU _H	FF _H
RF 315/434 MHz FSK	(/ASK Transmitter			
RFC	RF-Transmitter Control Register	C8 _H	00 _H	00 _H
RFTX	RF-Transmitter Configuration Register	AE _H	UUU0UUUU _B	87 _H
Manchester/BiPhase	Encoder			
RFENC	RF-Encoder Tx Control Register	CA _H	E0 _H	E0 _H
RFD	RF-Encoder Tx Data Register	C9 _H	00 _H	00 _H
RFS	RF-Encoder Tx Status Register	CB _H	02 _H	02 _H
LF Receiver				
LFRXC	LF Receiver Control Register	98 _H	0UUUUU00 _B	00 _H
LF Receiver Analog	Front End			
LFRX0	LF Receiver Configuration Register 0	B7 _H	UU _H	38 _H
LF Attenuator (AGC)				
LFRX1	LF Receiver Configuration Register 1	B6 _H	UU _H	00 _H



Table 6 Registers Overview (cont'd)

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
LFRX2	LF Receiver Configuration Register 2	AF _H	UU _H	77 _H
LF Carrier Detector				
LFCDFLT	LF Carrier Detect Filtering	B2 _H	UU _H	00 _H
LFCDM0	LF Carrier Detector Mode Register 0	B5 _H	UUUUUUU0 _B	00 _H
LF Receiver On/Off	Timer			
LFOOT	LF On/Off Timer Configuration Register	C6 _H	UU _H	00 _H
LFOOTP	LF OnOff Timer Precounter	C5 _H	UU _H	64 _H
LF Receiver Baseba	nd			
LFDIV	LF Bitrate Divider Factor	B4 _H	00UUUUUU _B	17 _H
Wakeup Pattern Det	ector			
LFPCFG	LF Pattern Detection Configuration Register	C7 _H	00UU00UU _B	00 _H
LFP0H	LF Pattern 0 Detector Sequence Data MSB	CD _H	UU _H	FF _H
LFP0L	LF Pattern 0 Detector Sequence Data LSB	CC _H	UU _H	FF _H
LFP1H	LF Pattern 1 Detector Sequence Data MSB	CF _H	UU _H	FF _H
LFP1L	LF Pattern 1 Detector Sequence Data LSB	CE _H	UU _H	FF _H
LF Receiver Data Int	erface			
LFRXD	LF Receiver Data Register	A5 _H	UU _H	00 _H
LFRXS	LF Receiver Status Register	A4 _H	XUXUUUUU _B	X0X00000 _B
16 Bit CRC (Cyclic R	edundancy Check) Generator/Checker			
CRCC	CRC Control Register	A9 _H	02 _H	02 _H
CRCD	CRC Data Register	AA_H	00 _H	00 _H
CRC0	CRC Preload/Result Register 0 (low byte)	AC _H	00 _H	00 _H
CRC1	CRC Preload/Result Register 1 (high byte)	AD_H	00 _H	00 _H
Pseudo Random Nu	mber Generator			
RNGD	Random Number Generator Data Register	AB _H	UU _H	55 _H
Timer Unit				
TCON	Timer Control Register	88 _H	00 _H	00 _H
TMOD	Timer Mode Register	89 _H	00 _H	00 _H
TH0	Timer 0 Register High Byte	8C _H	00 _H	00 _H
TL0	Timer 0 Register Low Byte	8A _H	00 _H	00 _H
TH1	Timer 1 Register High Byte	8D _H	00 _H	00 _H
TL1	Timer 1 Register Low Byte	8B _H	00 _H	00 _H
General Purpose Inp	out/Output (GPIO)			
P1DIR	IO-Port 1 Direction Register	91 _H	UU _H	FF _H
P1IN	IO-Port 1 Data In Register	92 _H	00000XXX _B	00000XXX _B
P1OUT	IO-Port 1 Data Out Register	90 _H	UU _H	FF _H
P1SENS	IO-Port 1 Sensitivity Register	93 _H	00000UUU _B	00 _H
I2C Interface				



Table 6 Registers Overview (cont'd)

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
I2CD	I2C Data Register	9A _H	00 _H	00 _H
I2CS	I2C Status Register	9B _H	00 _H	00 _H
Debug Special Fu	nction Register			
DBCH0	Debug Compare Register 0 (high byte)	95 _H	00 _H	00 _H
DBCL0	Debug Compare Register 0 (low byte)	94 _H	00 _H	00 _H
DBCH1	Debug Compare Register 1 (high byte)	9D _H	00 _H	00 _H
DBCL1	Debug Compare Register 1 (low byte)	9C _H	00 _H	00 _H
DBTH0	Debug Target Register 0 (high byte)	97 _H	00 _H	00 _H
DBTL0	Debug Target Register 0 (low byte)	96 _H	00 _H	00 _H
DBTH1	Debug Target Register 1 (high byte)	9F _H	00 _H	00 _H
DBTL1	Debug Target Register 1 (low byte)	9E _H	00 _H	00 _H

¹⁾ Reset Value for GRP0 - GPRF is typically undefined (X) except in the case of Software Reset, which leaves the GPR content unchanged (U).

The register is addressed bytewise.

Table 7 Registers Access Types

Mode	Symbol	Description Hardware (HW)	Description Software (SW)
Basic Access	Types		
write/read	wr	Register is used as input for the HW	Register is read and writable by SW
read only	r	Register is written by HW	Value written by SW is ignored by HW; that is, SW may write any value to this field without affecting HW behavior
write only	w	Register is written by software and affects hardware behavior with every write by software.	Register is writable by SW. When read, the register does not return the value that has been written previously, but the reset value instead.
UNUSED	-	Register is not used by HW.	Value written by SW is ignored by HW; that is, SW may write any value to this field without affecting HW behavior.
Reserved		Register is used as input for internal HW; Access Type is not documented.	Value must be kept by SW. SW read or write any value to this field affecting HW behavior
Special Acces	ss Types ¹⁾	1	,
Read self clearing	rc	Register is used as input for the HW, the register will be cleared due to a HW mechanism.	Reading from the register generates a strobe signal for the HW. Register is readable by SW.
Write self clearing	wc	Register is used as input for the HW, the register will be cleared due to a HW mechanism.	Writing to the register generates a strobe signal for the HW. Register is writable by SW.

Optional types



3.1 Microcontroller

The SP370 incorporates an 8051 instruction set compatible microcontroller. It offers an 8-bit data path, several addressing modes (direct, register, register indirect, immediate, index), and accesses the built-in peripherals through SFRs. To handle the sequential nature of TPMS applications efficiently, wakeup and resume mechanisms are implemented instead of an interrupt controller.

The microcontroller incorporates the following basic SFRs: Accumulator (ACC), Register B (B) and Program Status Word (PSW) are bit addressable registers used to perform arithmetical and logical operations. The Stack Pointer (SP) and Data Pointer (DPTR) are included to allow basic programming structures. The Data Pointer (DPTR) is determined by SFR DPH and SFR DPL.

SFR PSW holds the status of basic arithmetic operations.

Accumulator

ACC Accumulator			ffset E0 _H	Wakeup Va 00 _H	lue	Reset Value 00 _H
7						0
		AC	cc			
	I	W	/r			

Field	Bits	Туре	Description
ACC	7:0	wr	Accumulator
			Reset: 00 _H

Register B


B Register B		Offset F0 _H	Wakeup \ 00 _H	/alue	Reset Value 00 _H
7					0
		В	·	·	
	l	wr	I	l	

Field	Bits	Туре	Description
В	7:0	wr	Register B 7-0 Reset: 00 _H

Data Pointer (high)


SP370 Tire Pressure Monitoring Sensor

Special Function Registers

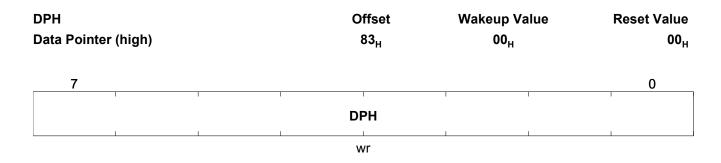

Field	Bits	Туре	Description
DPH	7:0	wr	Data Pointer (high) Reset: 00 _H

Data Pointer (low)

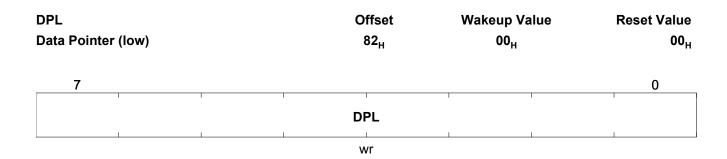

Field	Bits	Type	Description
DPL	7:0	wr	Data Pointer (low) Reset: 00 _H



Program Status Word

PSW Program Status Word				Offset D0 _H		Wakeup Value 00 _H	
7	6	5	4	3	2	1	0
CY	AC	F0	R	6	ov	F1	Р
wr	wr	wr	W	ſ	wr	wr	r

Field	Bits	Type	Description			
CY	7	wr	Carry Reset: 0 _H			
AC	6	wr	Auxiliary Carry Carry-out for BCD operations Reset: 0 _H			
F0	5	wr	Flag 0 Available for general purpose use. Reset: 0 _H			
RS	4:3	wr	Register Bank Select $00_{\rm B}$ Bank 0 ($00_{\rm H}$ - $07_{\rm H}$) $01_{\rm B}$ Bank $1(08_{\rm H}$ - $0F_{\rm H}$) $10_{\rm B}$ Bank $2(10_{\rm H}$ - $17_{\rm H}$) $11_{\rm B}$ Bank $3(18_{\rm H}$ - $1F_{\rm H}$) Reset: $0_{\rm H}$			
OV	2	wr	Overflow Reset: 0 _H			
F1	1	wr	Flag 1 Available for general purpose use. Reset: 0 _H			
P	0	r	Parity Set or cleared each instruction cycle to indicate an odd or even number of 1 bits in the accumulator Reset: 0 _H			



Stack Pointer

SP	Offset	Wakeup Value	Reset Value
Stack Pointer	81 _H	07 _H	07 _H
7			0
	SP		'
	wr		


Field	Bits	Туре	Description
SP	7:0	wr	Stack Pointer (SP) SP is incremented before data is pushed and decremented after data is popped. SP always points to the last valid stack byte. Reset: 07 _H



3.2 General Purpose Registers

The SP370 incorporates 16 general purpose registers that can be used by the application to store data beyond a POWER DOWN state / THERMAL SHUTDOWN state period. The GPR Registers are not cleared after a System Reset. After a Power On Reset, the GPR contents will be undefined.

General Purpose Register 0

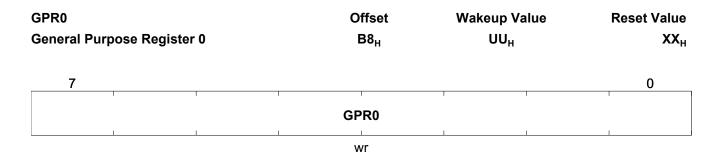

Field	Bits	Туре	Description
GPR0	7:0	wr	General Purpose
			Reset: XX _H

General Purpose Registers 0 - F are freely available for application program use. GPR0, GPR1, GPR2 are located at Offset Addresses that make them well suited for bit manipulation. Placing bit variables in these GPRs will result in more efficient CPU operation.

Table 8 Register 0 to F¹⁾

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
GPR0	General Purpose Register 0	B8 _H	UU _H	XX _H
GPR1	General Purpose Register 1	B0 _H	UU _H	XX _H
GPR2	General Purpose Register 2	A8 _H	UU _H	XX _H
GPR3	General Purpose Register 3	F1 _H	UU _H	XX _H
GPR4	General Purpose Register 4	F2 _H	UU _H	XX _H
GPR5	General Purpose Register 5	F3 _H	UU _H	XX _H
GPR6	General Purpose Register 6	F5 _H	UU _H	XX _H
GPR7	General Purpose Register 7	F6 _H	UU _H	XX _H
GPR8	General Purpose Register 8	F7 _H	UU _H	XX _H
GPR9	General Purpose Register 9	F9 _H	UU _H	XX _H
GPRA	General Purpose Register 10	FA _H	UU _H	XX _H
GPRB	General Purpose Register 11	FB _H	UU _H	XX _H
GPRC	General Purpose Register 12	FC _H	UU _H	XX _H
GPRD	General Purpose Register 13	FD _H	UU _H	XX _H



Table 8 Register 0 to F¹⁾ (cont'd)

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
GPRE	General Purpose Register 14	FE _H	UU _H	XX _H
GPRF	General Purpose Register 15	FF _H	UU _H	XX _H

¹⁾ Reset Value for GRP0 - GPRF is typically undefined (X) except in the case of Software Reset, which leaves the GPR content unchanged (U).



3.3 System Configuration Registers

The system configuration registers can be used for:

- Initiating state transitions (SFR CFG0)
- Enabling or disabling peripherals (SFR CFG1 and SFR CFG2)
- Monitoring the operation mode, the system state and peripherals (SFR DSR)

Configuration Register 0

CFG0 Configuration Register 0				Offset F8 _H		Wakeup Value 0000U000 _B		Reset Value 00 _H	
	7	6	5	4	3	2	1	0	
	PDWN	TSHDWN	IDLE	ENXOSC	FTM	Res	UNUSED	Res	
	wr	wr	wr	wr	wr		_		

Field	Bits	Туре	Description				
PDWN	7	wr	Enter POWER DOWN State If set to 1 by software the POWER DOWN state is entered; This bit is automatically reset to 0 by the system controller after a wakeup. Enterin POWER DOWN state is handled by a ROM Library function. It is not recommended to set this bit manually. Reset: 0 _H				
TSHDWN	6	wr	Enter THERMAL SHUTDOWN State If set to 1 by software the THERMAL SHUTDOWN state is entered; This bit is automatically reset to 0 by the system controller after wakeup. Entering THERMAL SHUTDOWN state is handled by a ROM Library function. It is not recommended to set this bit manually. Reset: 0 _H				
IDLE	5	wr	Enter IDLE State If set to 1 by software the IDLE state is entered; This bit is automatically reset to 0 by the system controller after a resume event occurs. Reset: 0 _H				
ENXOSC	4	wr	Enable XTAL Oscillator Control of XTAL oscillator enable is handled by a ROM Library function. It is not recommended to change this bit manually. 0_B XTAL oscillator disable 1_B XTAL oscillator enable Reset: 0_H				
FTM	3	wr	Enable Functional Test Mode This mode is used only during internal device testing. 0 _B FTM disabled 1 _B FTM enable Reset: 0 _H				



Field	Bits	Type	Description
Res	2		Reserved
			This bit must be set to 0 _B .
			Reset: 0 _H
UNUSED	1	-	UNUSED
			Reset: 0 _H
Res	0		Reserved
			This bit must be set to 0 _B .
			Reset: 0 _H

Configuration Register 1

CFG1 Configuration Register 1				Offset E8 _H		Wakeup Value 000U000U _B		Reset Value 00 _H	
	7	6	5	4	3	2	1	0	
	Res	I2CEN	RNGEN	RFTXPEN	Res	ITRD	ITINIT	ITEN	
		wr	WC	wr		wr	r	wr	

Field	Bits	Type	Description
Res	7		
I2CEN	6	wr	I2C Enable 0 _B Standard I/O Port functionality 1 _B I2C functionality on Pins PP0/SCL and PP1/SDA Reset: 0 _H
RNGEN	5	wc	Random Number Generator Enable 0 _B Cleared automatically after random number is generated 1 _B Initiates generation of a new pseudo random number Reset: 0 _H
RFTXPEN	4	wr	Transmitter Data Port Output Enable If this bit is set the RF transmission baseband data is made available on PP2, and the RF Manchester/BiPhase Encoder does not turn on the PA. If RF transmission in parallel with PP2 mirroring is desired , the PA must be enabled by the application prior to RF transmission (RFC.0 = 1). 0_B Standard I/O Port functionality 1_B Echoes RF transmission baseband data on port PP2/TXData Reset: 0_H
Res	3		Reserved This bit must be set to 0 _B . Reset: 0 _H



Field	Bits	Туре	Description			
ITRD	2	wr	Interval Timer Read Enable To safely read SFR ITPR, this bit should be set to 1 prior to reading ITPR. After the ITPR contents are read, this bit should be checked. 0 _B SFR ITPR read result is not valid 1 _B SFR ITPR read result is valid Reset: 0 _H			
ITINIT	1	r	Interval Timer Initialization When the wakeup interval is changed by programming ITPR, ITPL or ITPH with a new value, this bit is set to 1 until the new value has taken effect. The application should not leave RUN state while this bit is 1 otherwise the ITPR setting does not take effect. This bit is automatically cleared after initialization is complete. 0 _B Interval Timer Initialization complete 1 _B Interval Timer Initialization in progress Reset: 0 _H			
ITEN	0	wr	Interval Timer Enable Interval Timer is always enabled in NORMAL mode, setting or clearing ITEN bit has no effect. 0 _B Disable Interval Timer (TEST/DEBUG mode only) 1 _B Enable Interval Timer Reset: 0 _H			

Configuration Register 2

CFG2 Configuration Register 2				Offset D8 _H		Wakeup Value 000U1000 _B		Reset Value 18 _H	
	7	6	5	4	3	2	1	0	
	UNUSED	I2CGCEN	UNUSED	PDLMB	Res	UNUSED	WDRES	RESET	
	-	wr	-	wr		-	WC	wc	

Field	Bits	Type	Description
UNUSED	7	-	UNUSED Reset: 0 _H
I2CGCEN	6	wr	I2C General Call Enable 0 _B Disabled 1 _B Enabled Reset: 0 _H
UNUSED	5	-	UNUSED Reset: 0 _H



Field	Bits	Туре	Description				
PDLMB	4	wr	Lower RAM Memory Block (00 _H -7F _H) Power Control 0 _B Lower RAM retains power in POWER DOWN and THERMAL SHUTDOWN states 1 _B Lower RAM is not powered in POWER DOWN and THERMAL SHUTDOWN states Reset: 1 _H				
Res	3		Reserved This bit must be set to 1 _B . Reset: 1 _H				
UNUSED	2	-	UNUSED Reset: 0 _H				
WDRES	1	wc	Reset Watchdog Counter 0 _B Cleared automatically after reset of watchdog counter 1 _B Watchdog counter is reset Reset: 0 _H				
RESET	0	wc	System Reset 0 _B Cleared automatically after software reset is performed 1 _B A software reset is performed Reset: 0 _H				



Diagnosis and Status Register

DSR Diagnosis and Status Register				Offset D9 _H	Wakeup Va 0XUU00X		Reset Value 0XXX0000 _B
7	6	5	4	3	2	1	0
Res	TGOOD	OPM	IODE	F	Res	WUPEND	Res
	r	•	r			r	

Field	Bits	Type	Description
Res	7		Reserved This bit must be set to 0_B . Reset: 0_H
TGOOD	6	r	TMAX Detector Status Entering THERMAL SHUTDOWN state is handled by a ROM Library function. 0 _B Temperature > TMAX 1 _B Temperature < TMAX Reset: X _B
OPMODE	5:4	r	Operating Mode 00 _B TEST Mode 01 _B DEBUG Mode 10 _B PROGRAMMING Mode 11 _B NORMAL Mode Reset: XX _B
Res	3:2		Reserved These bits must be set to 00 _B . Reset: 0 _H
WUPEND	1	r	Wakeup Pending in SFR WUF 0 _B SFR WUF contents have not changed since the last read 1 _B SFR WUF contents have changed since the last read Reset: 0 _H
Res	0		Reserved This bit must be set to 0_B . Reset: 0_H



3.4 System Controller

While the microcontroller controls the SP370 in RUN state, the system controller takes over control in POWER DOWN state, IDLE state and THERMAL SHUTDOWN state.

The system controller handles wakeup / resume events and system resets. It is clocked by the 2kHz RC LP Oscillator.

Difference between System Reset and Wakeup:

- System Reset The digital circuit is reset. Program execution starts at address 0000_H to perform reset initialization routines (including operation mode selection) and will jump to the FLASH at address 4000_H to execute the application program.
- Wakeup Only the program counter of the microcontroller and its peripheral units are reset. Program
 Execution starts at address 0000_H to perform wakeup initialization routines and jumps to the FLASH at 4000_H to execute the application program.

Wakeup Event Handling

Whenever a wakeup occurs, the SP370 leaves POWER DOWN state and enters RUN state to execute the application program. This transition can be initiated from various sources. The wakeup source can be identified by reading SFR WUF.

The wakeup sources can be enabled or disabled by setting the appropriate bits in SFR WUM. The bits WDOG, TMAX and ITIM are always enabled. Setting these bits have no effect in NORMAL/DEBUG modes.

The bits in SFR WUF are cleared upon read (read-clear). If subsequent wakeup source activity is detected, the SFR DSR.WUPEND bit and the corresponding SFR WUF bit(s) will be set. Note that wakeup sources that have a mask bit set (disabled) in SFR WUM will always be cleared (inactive) in SFR WUF.

The SFR WUF is not automatically cleared when entering the POWER DOWN state. For this reason it is a good practice to have the application software read WUF and handle any pending wakeup events before entering POWER DOWN. Otherwise, any flags in SFR WUF will remain marked as pending upon the next device wakeup. Note that only new wakeup source activity, occurring after entering POWER DOWN, will cause a device wakeup to occur.

Watchdog Wakeup

A watchdog wakeup occurs after the watchdog timer has elapsed.

See "Watchdog Timer" on Page 23 for details about the watchdog timer.

TMAX Wakeup

A TMAX wakeup occurs only if the device was in THERMAL SHUTDOWN state and the temperature falls below the threshold release temperature $T_{\rm REL}$.

See "TMAX Detector" on Page 23 for details about the TMAX wakeup.

LF Receiver Wakeup Event

The LF Receiver wakeup can be enabled by setting one of following bits:

- SFR bit WUM.5 [LFCD] or
- SFR bit WUM.4 [LFSY] or
- SFR bit WUM.3[LFPM1] and/or SFR bitWUM.2 [LFPM0]

The wakeup source can be read in the SFR WUF.

The LF Receiver has to be configured appropriate for the particular wakeup modes. See "LF Receiver" on Page 73 for details.



External PP2 Wakeup Event

I/O Port PP2 can be configured to wakeup the SP370 from POWER DOWN state by an external source. PP2 has to be configured according to "External Wakeup on PP2" on Page 117 for this feature.

Interval Timer Wakeup Event

When the Interval Timer elapses, a wakeup event is generated and POWER DOWN state is left. The wakeup can be identified by the application software reading SFR bit WUF.0[ITIM].

The Interval Timer is reloaded automatically with the actual value from SFR ITPR and immediately restarted. The Interval Timer is also counting during RUN state which leads to accurate wakeup intervals even if RUN state periods vary in execution time.



Wakeup Flag Register

WUF Wakeup Flag	Register			ffset C0 _H	Wakeup Va XX _H	llue	Reset Value 00 _H
7	6	5	4	3	2	1	0
WDOG_FL AG	TMAX_FL AG	LFCD_FL AG	LFSY_FL AG	LFPM1_F LAG	LFPM0_F LAG	EXT_FLA G	ITIM_FL AG
rc	rc	rc	rc	rc	rc	rc	rc

Field	Bits	Туре	Description
WDOG_FLAG	7	rc	Watchdog Wakeup Reset: 0 _H
TMAX_FLAG	6	rc	Thermal Shutdown (TMAX) Release Wakeup Reset: 0 _H
LFCD_FLAG	5	rc	LF Carrier Wakeup Reset: 0 _H
LFSY_FLAG	4	rc	LF Sync Match Wakeup Reset: 0 _H
LFPM1_FLAG	3	rc	LF Pattern 1 Match Wakeup Reset: 0 _H
LFPM0_FLAG	2	rc	LF Pattern 0 Match Wakeup Reset: 0 _H
EXT_FLAG	1	rc	I/O-Port PP2 External Wakeup Reset: 0 _H
ITIM_FLAG	0	rc	Interval Timer Wakeup Reset: 0 _H



Wakeup Mask Register

WUM Wakeup Mas	k Register			ffset C1 _H	Wakeup Va UU _H	llue	Reset Value FF _H
7	6	5	4	3	2	1	0
WDOG_MA SK	TMAX_MA SK	LFCD_MA SK	LFSY_MA SK	LFPM1_M ASK	LFPM0_M ASK	EXT_MAS K	ITIM_MA SK
wr	wr	wr	wr	wr	wr	wr	wr

Field	Bits	Type	Description			
WDOG_MASK	7	wr	Disable Watchdog Reset Watchdog is always enabled, setting this bit has no effect in NORMAL/DEBUG modes. Reset: 1 _H			
TMAX_MASK	6	wr	Disable Thermal Shutdown (TMAX) Release Wakeup TMAX Wakeup is handled by ROM Library Functions, setting this bit has no effect in NORMAL/DEBUG modes. Reset: 1 _H			
LFCD_MASK	5	wr	Disable LF Carrier Wakeup 0 _B Enable LF Carrier wakeup 1 _B Disable LF Carrier wakeup Reset: 1 _H			
LFSY_MASK	4	wr	Disable LF Sync Match Wakeup 0 _B Enable LF Sync Match wakeup 1 _B Disable LF Sync Match wakeup Reset: 1 _H			
LFPM1_MASK	3	wr	Disable LF Pattern 1 Match Wakeup 0 _B Enable LF Pattern 1 Match wakeup 1 _B Disable LF Pattern 1 Match wakeup Reset: 1 _H			
LFPM0_MASK	2	wr	Disable LF Pattern 0 Match Wakeup 0 _B Enable LF Pattern 0 Match wakeup 1 _B Disable LF Pattern 0 Match wakeup Reset: 1 _H			
EXT_MASK	1	wr	Disable I/O-Port PP2 External Wakeup 0 _B Enable I/O-Port PP2 wakeup 1 _B Disable I/O-Port PP2 wakeup Reset: 1 _H			
ITIM_MASK	0	wr	Disable Interval Timer Wakeup Interval Timer Wakeup is always enabled in NORMAL mode, setting bit has no effect in NORMAL/DEBUG modes. Reset: 1 _H			



Resume Event Flag Register

Note: SFR DIVIC must be 00b in order to reliably read SFR REF

REF Resume Event Flag Register			Offset D1 _H		Wakeup Value 00 _H		Reset Value 00 _H	
Γ	7	6	5	4	3	2	1	0
	UNU	JSED	READC	RELFO	RERFF	RERFU	UNUSED	RET0
_		-	rc	rc	rc	rc	-	rc

Field	Bits	Туре	Description			
UNUSED	7:6	-	UNUSED Reset: 0 _H			
READC	5	rc	A/D Conversion complete This bit is for use by ROM Library functions. Reset: 0 _H			
RELFO	4	rc	LF Receive Buffer full Data can be read by the application software. Reset: 0 _H			
RERFF	3	rc	RF Transmission complete All bits in the transmitter shift register have been transmitted. Reset: 0 _H			
RERFU	2	rc	RF Transmit Buffer empty Next byte to be transmitted may be loaded to SFR RFD. Reset: 0 _H			
UNUSED	1	-	UNUSED Reset: 0 _H			
RET0	0	rc	Timer 0 Underflow Reset: 0 _H			

3.5 Interval Timer

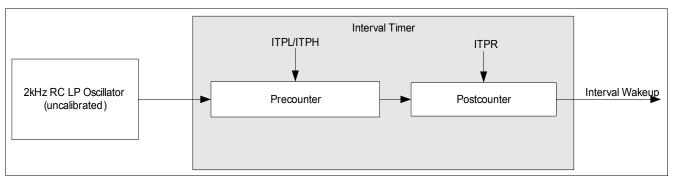


Figure 9 Interval Timer Block Diagram

The Interval Timer is responsible to wakeup the SP370 from the POWER DOWN state after a predefined time interval. It is clocked by the 2kHz RC LP Oscillator and incorporates two dividers:

- Precounter: can be calibrated and represents the timebase; please refer to "Interval Timer Precounter / Calibration" on Page 52
- Postcounter: configures the Interval Timer duration in multiples of the timebase.

The Precounter (ITPH/L) is a 16 bit register with 12 significant bits. The precounter values 0001_{H} up to $0FFF_{H}$ corresponds to 1_{dec} up to 4095_{dec} . The maximum precounter value 0000_{H} corresponds to 4096_{D} .

To increase the timer accuracy, it is recommended to use a ROM library function which calibrates the precounter dependent on the actual frequency of the 2kHz RC LP Oscillator. See [1] for details.

The Postcounter (ITPR) is an 8 bit register. 01_{H} up to FF_{H} corresponds to a multiplication of the timebase with 1_{dec} up to 255_{dec} . The maximum postcounter value 00_{H} corresponds to 256_{D} .

The Interval Timer duration is determined by the SFR ITPR. The desired value can be calculated by using the following equation

$$Interval time rperiod[s] = time base[s] \bullet postcounter[ITPR]$$
(1)

$$timebase[s] = \frac{precounter[ITPL/H]}{f_{2kHzRCLPOscillator}\left[\frac{l}{s}\right]}$$
(2)

Writing to the Postcounter (ITPR) establishes the counter reload value.

Reading from the Postcounter (ITPR) returns the counter value, not the counter reload value. The Interval Timer is asynchronous from the CPU, so care must be taken when reading its contents. To safely read the ITPR, the SFR CFG1 ITRd bit should be set to one prior to reading ITPR. After the ITPR contents are read, the SFR CFG1 ITRd bit should be checked: If the ITPR read result is valid, the SFR CFG ITRd bit will still be set. If the SFR CFG1 ITRd bit is cleared during ITPR read, the ITPR read result is not valid.



Interval Timer Period Register

ITPR	Offset	Wakeup Value	Reset Value 01 _H	
Interval Timer Period Register	BC _H	UU _H		
7			0	
	ITPR	1	ı	
	wr			

Field	Bits	Type	Description
ITPR	7:0	wr	Interval Timer Period Register To safely read ITPR, SFR CFG1.2 should be set to 1 prior to reading ITPR. If the ITPR read was successful, SFR CFG1.2 will remain set to 1. Reset: 01 _H



3.6 Interval Timer Precounter / Calibration

Calibration is done by counting clock cycles from the crystal oscillator during one 2kHz RC LP Oscillator period. In the case that the crystal oscillator is not available (not running), the 12 MHz RC HF Oscillator is used instead. The calibration is performed automatically by a ROM library function (see [1]).

Notes

- 1. SFR ITPL and SFR ITPH can be modified manually for using other (uncalibrated) precounter values than the ones determined by the ROM Library function.
- 2. After writing SFR ITPR, SFR ITPL or SFR ITPH some time is needed to activate the new setting. SFR bit CFG1.1[ITInit] is cleared automatically when the new setting takes effect.
- 3. Reading SFR ITPL or SFR ITPH returns the low byte or the high byte of the Precounter reload value, respectively.


Interval Timer Precounter Register (High Byte)

I	TPH nterval Time 3yte)	Offset Wakeup Value Reset Fimer Precounter Register (High BB _H 0000UUUU _B			Reset Value 03 _H		
	7	Γ	Γ	4	3	T	0
		UNU	SED			ITPH	
_			-			wr	

Field	Bits	Type	Description	
UNUSED	7:4	-	UNUSED	
			Reset: 0 _H	
ITPH	3:0	wr	Interval Timer Precounter Register (High Byte) Reset: 3 _H	



Interval Timer Precounter Register (Low Byte)

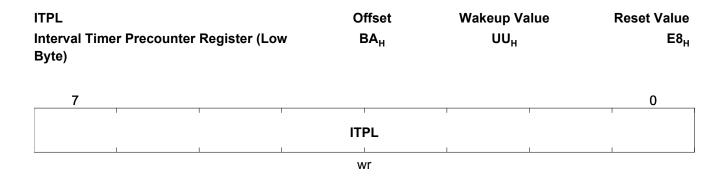

Field	Bits	Туре	Description
ITPL	7:0	wr	Interval Timer Precounter Register (Low Byte); Reset: E8 _H



3.7 Clock Controller

The Clock Controller for internal clock management is part of the system controller.

In SP370 the microcontroller (CPU) clock source is always based on the 12 MHz RC HF Oscillator (system clock). to provide minimum current consumption. The internal clock divider (SFR DIVIC) may be used to slow down the speed of the microcontroller and to reduce the current consumption further. The crystal is used as clock source for the RF Transmitter and for the Timer Unit (e.g. for oscillator calibrations). The start up of the crystal (e.g. for RF Transmission) can be performed automatically by a ROM library function (see [1]). Figure 10 shows the clocking scheme for the different SP370 blocks.

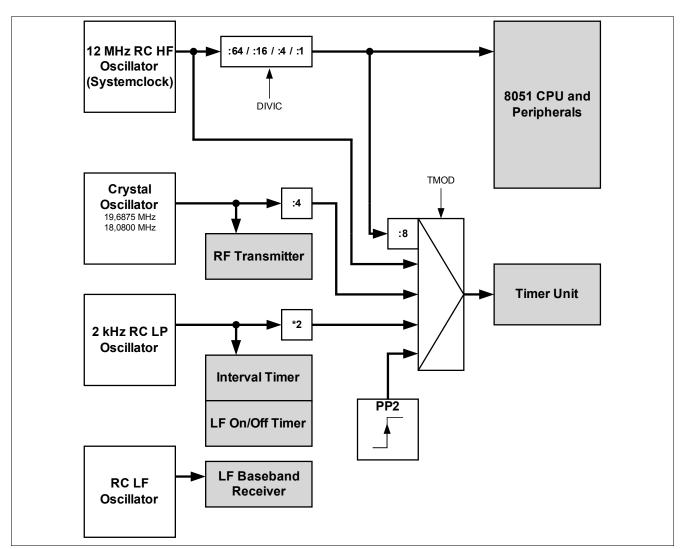


Figure 10 SP370 Clock Concept

2kHz RC LP Oscillator (Low Power)

The 2 kHz RC LP Oscillator stays active throughout all operating states except THERMAL SHUTDOWN state. The typical oscillator frequency is 2kHz. Characteristics can be found in **Table 46 "2 kHz RC LP Oscillator" on Page 163**.

12MHz RC HF Oscillator (High Frequency)

The 12 MHz RC HF Oscillator runs at typical 12 MHz and is used as system clock for the SP370 in RUN state. Characteristics can be found in **Table 45 "12 MHz RC HF Oscillator" on Page 163**.



Crystal Oscillator


The crystal oscillator is a Negative Impedance Converter (NIC) oscillator with a crystal operating in series resonance. Characteristics can be found in Table 44 "Crystal Oscillator, fCrystal = 18 MHz...20 MHz" on Page 162.

RC LF Oscillator

The RC LF Oscillator is part of the LF Receiver and only used as clock for the LF Receiver Baseband.



Internal Clock Divider

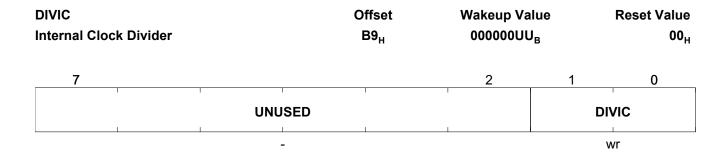

Field	Bits	Туре	Description
UNUSED	7:2	-	UNUSED Reset: 00 _H
DIVIC	1:0	WΓ	SystemClock Divider 00 _B Divide by 1 01 _B Divide by 4 10 _B Divide by 16 11 _B Divide by 64 Reset: 0 _H



3.8 Crystal Pulling

To achieve FSK transmission, the reference frequency of the NIC crystal oscillator is detuned by switching between two different capacitances (one for the low and one for the high FSK frequency). These capacitance values are achieved with embedded switchable capacitors and/or with external capacitors, mounted in series to the crystal. For ASK transmission, the capacitance can be used to tune the center frequency.

The SP370 offers the possibility to use either internal capacitors and/or external capacitors for pulling the crystal frequency. This is determined by the SFR bit RFTX.FSKSWITCH.

Note: $C_{parasitic}$ used in **Figure 11**, **Figure 13** and **Figure 14** is the overall parasitic capacitance between the pins XGND an XCAP (switch, bond wires, pad parasitics,...). The formulas for calculating the resulting capacitance for ASK/FSK (C_{ASK} , $C_{FSKHIGH}$, C_{FSKLOW}) only take into account the dominating factor of $C_{Switch, OFF}$.. Specification for the parasitic capacitance can be found in **Table 44** "**Crystal Oscillator**, **fCrystal = 18 MHz...20 MHz" on Page 162**.

The following pages show the configurations for ASK/FSK using internal or external capacitors.



FSK with internal capacitors

- In the configuration shown in Figure 11 the internal capacitors are used. The desired capacitor values must be selected by using SFR XTAL1 and SFR XTAL0. The exact values used should be verified by module level testing.
- During FSK transmission the output of the Manchester/Biphase Encoder determines which capacitor value is used. The capacitor value in SFR XTAL0 is applied when the output of the Manchester/Bi-phase Encoder is 0; SFR XTAL1 is applied when the output is 1.

Note: SFR bit RFTX.FSKSWITCH must be set to 0 for this configuration

$$C_{FSKHIGH} \cong C_{XTAL1} + C_{Switch,OFF} \tag{3}$$

$$C_{FSKLOW} \cong C_{XTAL0} + C_{Switch,OFF} \tag{4}$$

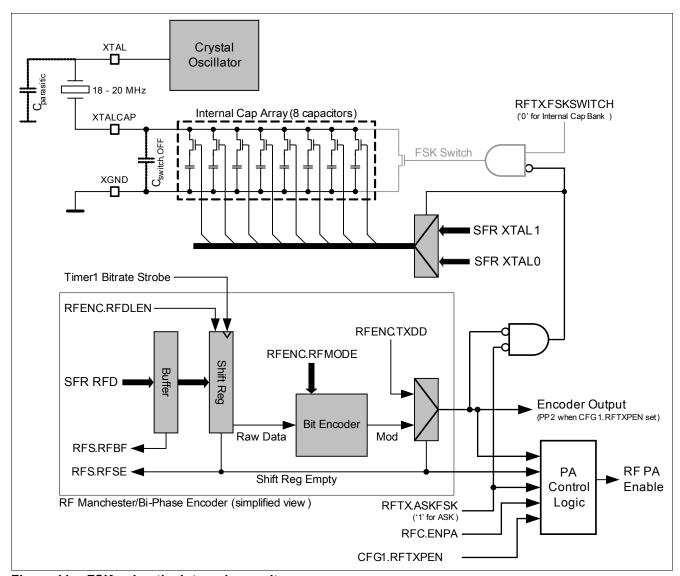


Figure 11 FSK using the internal capacitors

ASK with internal capacitor

- In the configuration shown in Figure 12 the internal capacitor array is used. The desired capacitor value must
 be selected by using SFR XTAL1 to establish the RF carrier frequency. The exact value used should be
 verified by module level testing.
- During ASK transmission the output of the Manchester/Biphase Encoder controls the RF Power Amplifier. The PA is enabled when the output of the Manchester/Bi-phase Encoder is 1; disabled when the output is 0.

$$C_{ASK} \cong C_{XTAL1} + C_{Switch,OFF} \tag{5}$$

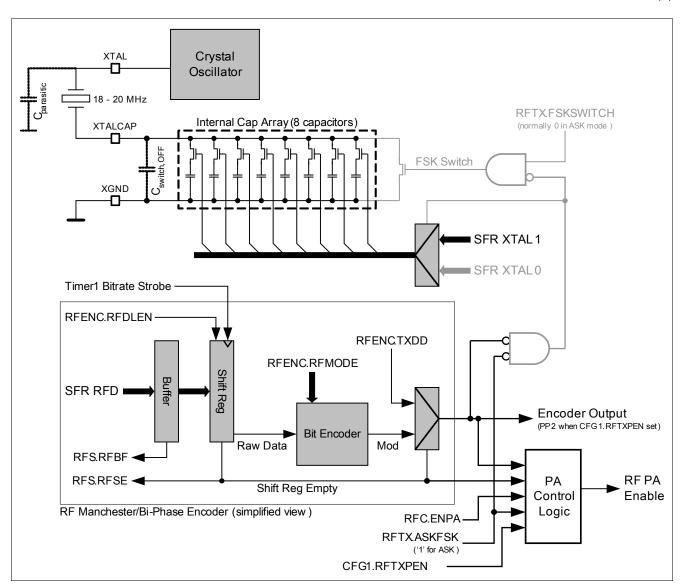


Figure 12 ASK using the internal capacitor



FSK with external capacitors

- In the configuration shown in Figure 13 the FSK switch is used in conjunction with external capacitors.
 Guidelines for determining the external capacitor values are Equation (6) and Equation (7). The exact values used should be verified by module level testing.
- During FSK transmission the output of the Manchester/Biphase Encoder opens and closes the FSK switch.
 The FSK switch is closed when the output of the Manchester/Bi-phase Encoder is 0; opened when the output is 1.

Note: SFR bit RFTX.FSKSWITCH must be set to 1 for this configuration

$$C_{FSKHIGH} \cong \frac{C_1 \cdot \left(C_2 + C_{Switch,OFF}\right)}{C_1 + \left(C_2 + C_{Switch,OFF}\right)}$$

$$\tag{6}$$

$$C_{FSKLOW} \cong C_1 \tag{7}$$

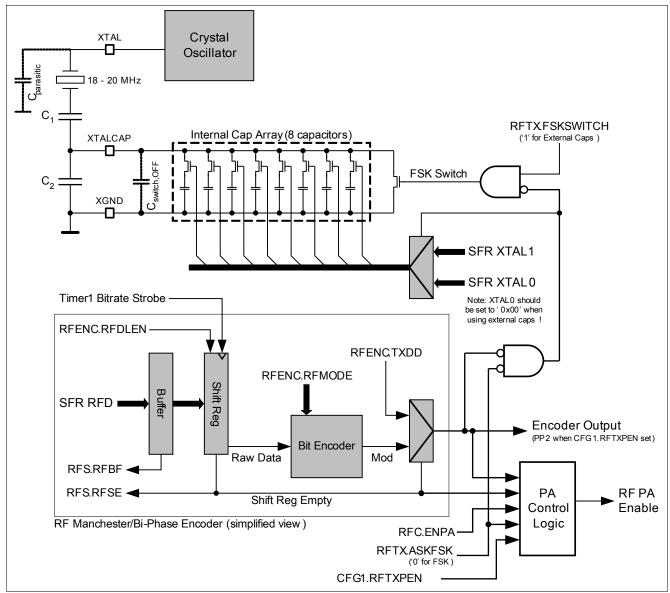


Figure 13 FSK using only external capacitors



ASK with external capacitor

- In the configuration shown in Figure 14 an external capacitor is used to establish the RF carrier frequency. A
 guideline for determining the external capacitor value is Equation (8). The exact value used should be verified
 by module level testing.
- During ASK transmission the output of the Manchester/Biphase Encoder controls the RF Power Amplifier. The PA is enabled when the output of the Manchester/Bi-phase Encoder is 1; disabled when the output is 0.

Note: SFR XTAL1 is typically set to 00_H for this configuration.

$$C_{ASK} \cong C_{XTAL1} + C_{Switch,OFF} + C_1 \tag{8}$$


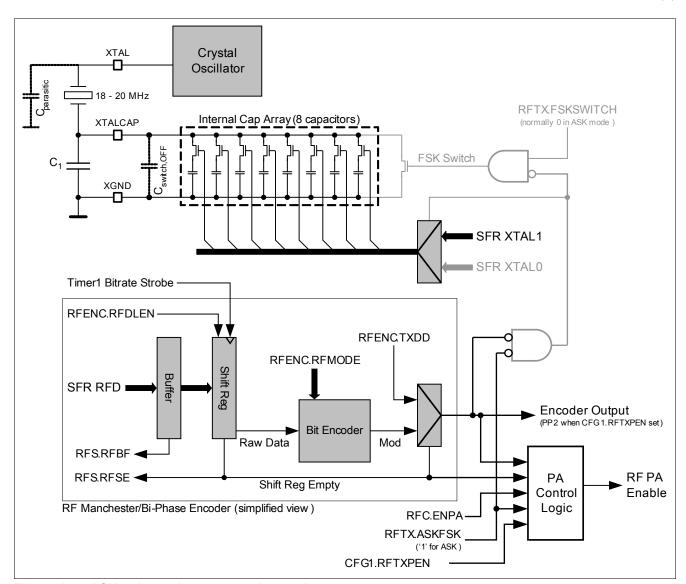


Figure 14 ASK using only an external capacitor



XTAL Frequency Register (FSKLOW)

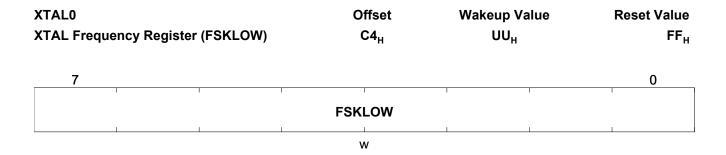

Field	Bits	Туре	Description
FSKLOW	7:0	w	FSK Low Frequency Pulling/Trimming capacitor select for lower FSK modulation frequency. The capacitor array is binary weighted from 00000001 _B : 156fF 00000010 _B : 312fF
			 11111111 _B : 40pF Reset: FF _H

XTAL Frequency Register (FSKHIGH/ASK)

XTAL1				Offset	Wakeup Value	Reset Value	
>	TAL Frequ	ency Register	(FSKHIGH/ASK)	C3 _H	UU _H	FF _H	
	7					0	
Г	/	Т	Т	Т	ı	0	
				FSKHASK			
L				\ \ \		I	

Field	Bits	Туре	Description
FSKHASK	7:0	w	FSK High Frequency / ASK Center Frequency Pulling/Trimming capacitor select for upper FSK modulation frequency and ASK center frequency. The capacitor array is binary weighted from 00000001 _B : 156fF 00000010 _B : 312fF
			 11111111 _B : 40pF Reset: FF _H



3.9 RF 315/434 MHz FSK/ASK Transmitter

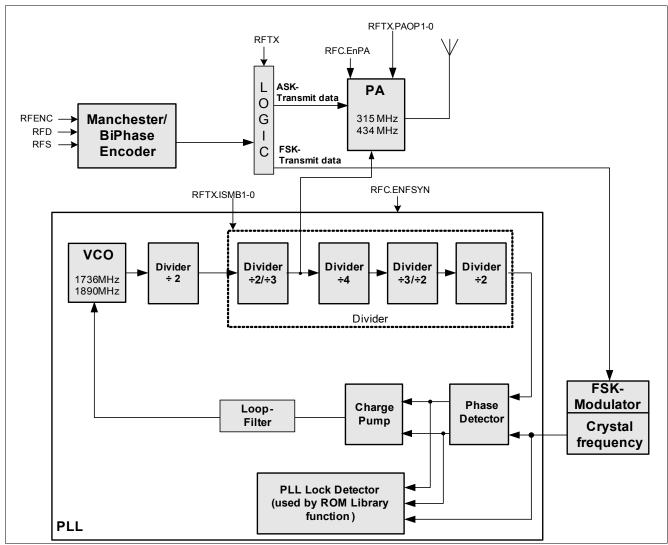


Figure 15 RF Transmitter Block Diagram

The RF-Transmitter can be configured for the 315/434 MHz ISM-Band frequencies by setting SFR bits RFTX.3-2[ISMB1-0] and choosing the proper crystal according to **Table 9** below.

Table 9 Crystal Selection

Center Frequency [MHz]	PLL Divider Factor	Required XTAL Frequency [MHz]	
433.92	24	18.0800	
315.00	16	19.6875	



Voltage Controlled Oscillator (VCO)

The VCO uses on-chip inductors and varactors for tuning. The tuning range VCO is split up into 16 frequency ranges.

A ROM library function (see [1]) is available which selects the tuning curve automatically dependent on environmental conditions ($T_{ambient}$, V_{bat}).

Note: Re-calibration of the tuning curve is necessary when V_{bat} changes by more than 800mV or $T_{ambient}$ changes by more than 70°C.

Power Amplifier PA

In a typical application, the highly efficient power amplifier is automatically turned on by the Manchester/BiPhase encoder as soon as data is written to the SFR RFD. After the last bit is transmitted and the shift register is empty the PA is turned off again. If, however, the automatic control of the PA is not desired, then manual control is possible when SFR bit RFC.0[ENPA] is set.

The nominal output power levels are specified in **Table 38 "RF Transmitter" on Page 155**. The output power is determined by SFR bits RFTX.1-0[PAOP1-0] and the matching network (see also "**Test Board" on Page 142** for details on the matching network).

Note: For test purpose the PLL synthesizer and the power amplifier can be enabled separately by using the SFR RFC control register. The power amplifier should be switched on with a delay of at least 100µs after enabling the frequency synthesizer. This delay is needed for the PLL to lock.

PLL Monitoring

In order to avoid unwanted out-of-band emissions in case the PLL goes out-of-lock, the SP370 includes a PLL Monitoring feature . This feature can be enabled via SFR bit RFC.7[ENPLLMON]. If PLL Monitoring is enabled and the PLL becomes unlocked, the RF Power Amplifier is automatically disabled and SFR bit RFS.7[PADIS] bit is set. The application program can verify that a transmission was successful by checking PADIS - if PADIS is clear, the PLL remained locked throughout the transmission.

Note: The Manchester/BiPhase Encoder state machine continues executing transmission even though PA is off.



RF-Transmitter Control Register

RFC RF-Transmit	ter Control Re	egister		ffset C8 _H	Wakeup Va 00 _H	lue	Reset Value 00 _H
7	6				2	1	0
ENPLLMO N		1	UNUSED			ENPLL	ENPA
wr			-			wr	wr

Field	Bits	Туре	Description
ENPLLMON	7	wr	Enables PLL Monitoring PLL Monitoring will automatically disable the PA during RF transmission if the PLL goes out of lock. 0 _B Disable 1 _B Enable Reset: 0 _H
UNUSED	6:2	-	UNUSED Reset: 00 _H
ENPLL	1	wr	Enable RF Frequency Synthesizer (PLL) The ROM Library Function VCO-Tuning should be used to enable the PLL. After RF transmission is complete this bit may be used to disable the PLL. 0 _B Disable 1 _B Enable Reset: 0 _H
ENPA	0	wr	Enable RF Power Amplifier (PA) This bit is normally cleared to allow the Manchester/Bi-Phase Encoder to control the RF PA during transmission. (see SFR CFG1 RFTXPEN for exceptional case) 0 _B PA controlled automatically by Manchester/Bi-Phase Encoder 1 _B PA controlled manually Reset: 0 _H



RF-Transmitter Configuration Register

RFTX RF-Transmitte	er Configura	tion Register		ffset AE _H	Wakeup Va UUU0UUU		Reset Value 87 _H
7	6	5	4	3	2	1	0
FSKSWIT CH	ITXD	ASKFSK	UNUSED	IS	MB	P	AOP
wr	wr	wr	_	\	wr	•	wr

Field	Bits	Type	Description
FSKSWITCH	7	wr	FSK modulation switch 0 _B Switch is always open (disabled) - to be used with internal pulling capacitors 1 _B Switch is controlled by RF Encoder when ASKFSK = 0 _B to be used with external capacitors The FSK Switch is open when the RF Encoder output is 1. The FSK Switch is closed when the RF Encoder output is 0. Switch is closed when ASKFSK = 1 _B . Reset: 1 _H
ITXD	6	wr	Invert Transmit Data 0 _B Data not inverted 1 _B Data inverted Reset: 0 _H
ASKFSK	5	wr	ASK/FSK Modulation Select 0 _B FSK modulation (Frequency Shift Keying) 1 _B ASK modulation (Amplitude Shift Keying) Reset: 0 _H
UNUSED	4	-	UNUSED Reset: 0 _H
ISMB	3:2	wr	RF Frequency Band Select 00 _B 300MHz - 320MHz 01 _B 433MHz - 450MHz 10 _B Reserved 11 _B Reserved Reset: 1 _H
PAOP	1:0	Wr	RF Power Amplifier Output Stage Select 00 _B 1 PA output stage enabled 01 _B 2 PA output stages enabled 10 _B 2 PA output stages enabled 11 _B 3 PA output stages enabled Reset: 3 _H



3.10 Manchester/BiPhase Encoder

The SP370 offers a Hardware Manchester/BiPhase encoder which uses Timer 1 (see "Timer Unit" on Page 104) to configure the bitrate for the encoder. The application software needs to configure the timer and can subsequently send the raw uncoded data to the Manchester/BiPhase Encoder which takes care about encoding and the RF transmission itself (controlling the Power Amplifier). Using the Hardware encoder allows that the CPU to be operated at a reduced clock rate thereby reducing the peak current consumption during RF transmission. The reduced CPU clock rate also reduces the possibility of clock noise artifacts in the RF signal (see "Internal Clock Divider" on Page 56). Furthermore, the encoder creates a resume event after sending each byte so that the application can enter IDLE state while sending each databyte (see "Resume Event Flag Register" on Page 49). It is recommended to use both reduced clock rate and IDLE mode for best performance during RF transmission.

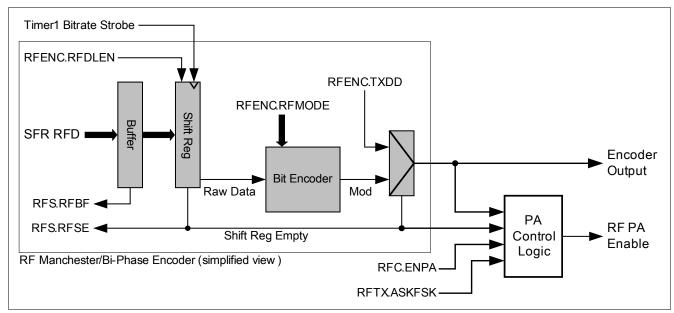


Figure 16 Manchester/BiPhase Encoder

The encoder mode, transmit buffer length, and RF carrier idle state are all controlled by SFR RFENC. The RFENC settings for encoder mode and transmit buffer length take effect upon transfer of the data from SFR RFD to the internal shift register, not at the time of writing to SFR RFENC.

The RF Power Amplifier (RF PA) is controlled by the PA Control Logic. In most cases the control logic enables and disables the RF PA according to the table in **Figure 17**. Cases in which the behavior differs from this table include usage of SFR bit **RFTXPEN** and the **PLL Monitoring** features.

By enabling the RF Encoder Data Output alternate port functionality of PP2 via the SFR bit RFTXPEN in CFG1, the SFR bit ENPA in SFR RFC must be set in order to allow the RF Encoder output to properly modulate the RF PA. It is recommended that the RF Encoder Data Output functionality of PP2 is used only during software development debugging or device testing. Another exception to the behavior in **Figure 17** is when the PLL Monitoring feature is enabled. See "PLL Monitoring" on Page 64 for more details."



RFC.ENPA	RFS.RFSE	RFTXASKFSK	Encoder Output	RF PA Enable
X	0	0	Mod	ON
X	0	1	Mod	Mod
0	1	X	TXDD	OFF
1	1	0	TXDD	ON
1	1	1	TXDD	TXDD

Figure 17 RF PA Control Logic

By default the transmission takes place byte-aligned (SFR bits RFENC.7-5[RFDLEN2-0]= 111b. If less than 8 Bits should be transmitted, SFR bits RFENC.7-5[RFDLEN2-0] can be set to any value between 110b...000b to transmit only 7...1 MSBs of the transmit buffer SFR RFD. In this case the unused LSBs are disregarded.

In addition to Manchester/BiPhase encoding, it is also possible to send data with a user-defined encoding scheme, e.g. for sending a preamble. This can be achieved by the chipmode (SFR bits RFENC.2-0[RFMOD2-0] = 101b). In chipmode the encoder sends each bit in SFR RFD without any encoding.

The following figure shows the timing diagrams for the different encoding schemes:

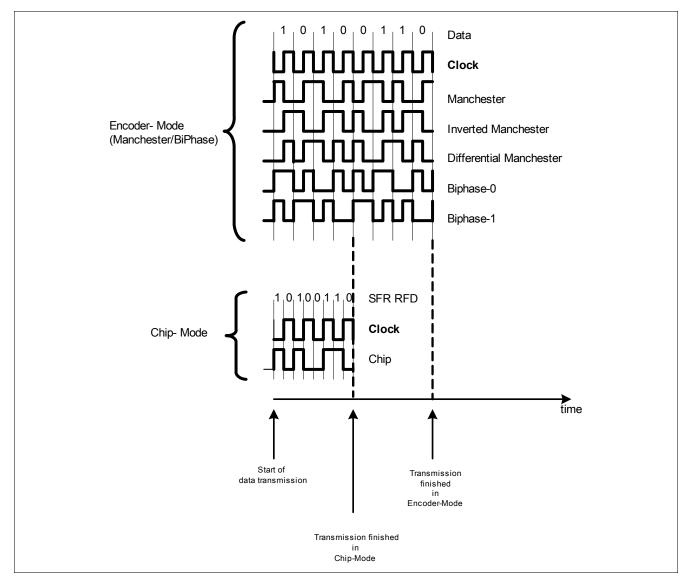


Figure 18 Diagram of the Different RF Encoder Modes



As shown in Figure 16 "Manchester/BiPhase Encoder" on Page 67 Timer 1 (see "Timer Unit" on Page 104) is used as bitrate generator and has to be configured according to the desired bitrate. The required timer clock source is the crystal oscillator. The required timer value can be calculated with the following formula:

$$timervalue = \left(\frac{f_{timerclock source}[Hz]}{8 \cdot Baudrate\left[\frac{1}{s}\right]}\right) - 1$$
(9)

This timer value has to be written to the timer registers (see "Timer 1 Register High Byte" on Page 114 and "Timer 1 Register Low Byte" on Page 114).

RF Encoder Status

SFR RFS represents the status of the RF Encoder.

After writing a databyte to SFR RFD, the SFR bit RFS.0[RFBF] is set by the encoder hardware. It is cleared automatically when the databyte in SFR RFD is transferred to the shift register and the buffer is ready to be filled with the next databyte.

Since the encoder creates a resume event (see "Resume Event Flag Register" on Page 49) when the SFR bit RFS.0[RFBF] is cleared, the application can enter IDLE state between sending two consecutive databytes.

Note: It is necessary to provide the RF encoder with a continuous data stream to prevent the RF receiver from losing synchronization.

SFR bit RFS.1[RFSE] is cleared as long as the shift register still contains data that has to be transmitted and is set if there is no more data available in the shift register (this indicates the end of a data transmission) and automatically turns off the RF Power Amplifier.

If PLL Monitoring is enabled and the PLL becomes unlocked, the RF Power Amplifier is automatically disabled and SFR bit RFS.7[PADIS] bit is set. The application program can verify that a transmission was successful by checking PADIS - if PADIS is clear, the PLL remained locked throughout the transmission.

Note: The Manchester/BiPhase Encoder state machine continues executing transmission even though PA is off.



RF-Encoder Tx Control Register

RFENC RF-Encoder Tx Control Register				ffset CA _H	Wakeup Va E0 _H	alue	Reset Value E0 _H	
	7	T	5	4	3	2	T	0
		RFDLEN		UNUSED	TXDD		RFMODE	
		wr		_	wr		wr	

Field	Bits	Туре	Description
RFDLEN	7:5	wr	RF Data Length Number of bits to be transmitted from SFR RFD. 000_{B} Transmit RFD MSB only 001_{B} Transmit RFD two MSBs 010_{B} 011_{B} 100_{B} 110_{B} 111_{B} Transmit all bits of RFD Reset: 7 _H
UNUSED	4	-	UNUSED Reset: 0 _H
TXDD	3	wr	RF Encoder Idle state Determines the state of the RF Transmitter when the RF Shift Register is empty and the SFR bit RFC.0[ENPA] is set. 0 _B FSK Carrier low / ASK Carrier off 1 _B FSK Carrier high / ASK Carrier on Reset: 0 _H
RFMODE	2:0	wr	RF Encoder Mode Refer to Diagram of different RF Encoder modes figure. 000 _B Manchester 001 _B Inverted Manchester 010 _B Differential Manchester 011 _B Biphase 0 100 _B Biphase 1 101 _B Chip Mode (NRZ) 110 _B Reserved 111 _B Reserved Reset: 0 _H



RF-Encoder Tx Data Register

RFD	Offset	Wakeup Value	Reset Value
RF-Encoder Tx Data Register	C9 _H	00 _H	00 _H
7			0
	RFD		
	W		

Field	Bits	Type	Description
RFD	7:0	w	RF Data Transmit Byte Reset: 00 _H



RF-Encoder Tx Status Register

RFS RF-Encoder Tx Status Register		gister		ffset CB _H	Wakeup Value 02 _H		Reset Value 02 _H	
	7	6				2	1	0
	PADIS		1	UNUSED	1	ı	RFSE	RFBF
	wr			_			r	r

Field	Bits	Type	Description
PADIS	7	wr	PLL Monitoring PA Status If the PLL Monitoring is enabled (RFC.ENPLLMON is set) and during RF transmission the PLL goes out of lock, this bit is set and the PA is automatically disabled. The PA remains disabled until this bit is cleared by CPU. This bit can be cleared only when the content of the RF shift register is cleared. Writing a logical '1' to this bit has no effect. 0 _B PA is enabled 1 _B PLL Monitoring has disabled the PA Reset: 0 _H
UNUSED	6:2	-	UNUSED Reset: 00 _H
RFSE	1	r	RF Encoder Shift Register Empty Flag Automatically set by hardware if no further bits are available in RF Shift Register. When RF Shift Register becomes empty, the state of the RF Transmitter is determined by SFR RFENC.3 [TXDD]. 0 _B Data transmission in progress 1 _B Data transmission complete Reset: 1 _H
RFBF	0	r	RF Encoder Buffer Full Automatically set by hardware on write to SFR RFD and cleared when data in SFR RFD is transferred to RF Shift Register. 0 _B Buffer empty, SFR RFD ready for new data 1 _B Buffer full, do not write to SFR RFD Reset: 0 _H



3.11 LF Receiver

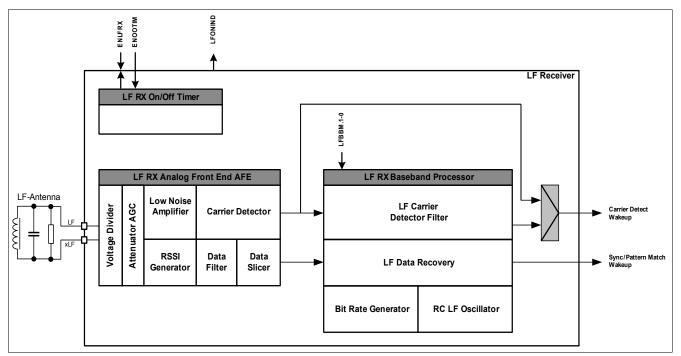


Figure 19 LF Receiver Block Diagram

The LF Receiver is used for wireless data transmission towards the SP370 and for waking up the device from POWER DOWN state.

It can generate a wakeup directly by the carrier detector if the carrier amplitude is above a predefined threshold, or it can decode the received data and wake up the microcontroller only if a sync match pattern or sync match pattern/wakeup pattern is detected in the data stream.

Data recovery using a synchronizer and a decoder is available for Manchester coded data. The synchronizer can also handle Manchester code violations. Other coding scheme can be handled by the microcontroller at the chip level, thus no limitations on data coding schemes apply.

An LF On/Off Timer is implemented to generate periodical On/Off switching (polling) of the LF Receiver in POWER DOWN state to minimize the current consumption.



LF Receiver Control Register

LFRXC LF Receiver	Control Regis	ter		Offset 98 _H	Wakeup Va 0UUUUU0		Reset Value 00 _H
7	6	5	4	3	2	1	0
CDRECAL	DISAGC	LFBBM		ENOOTIM	ENLFRX	SYNCIND	LFONIND
wc	wr	V	vr	wr	wr	r	r

Field	Bits	Туре	Description			
CDRECAL	7	wc	Restart Carrier Detect Recalibration Calibration is automatically performed each time the LFRx is powered on. This bit forces manual Recalibration when set. This bit is automatically cleared after Recalibration has started 0 _B Cleared automatically after Recalibration has started 1 _B Start Carrier Detect Recalibration Reset: 0 _H			
DISAGC	6	wr	Disable Automatic Gain Control (AGC) 0 _B Enable 1 _B Disable Reset: 0 _H			
LFBBM	5:4	wr	LF Baseband Processor Mode It is recommended to first disable the LF Receiver (ENLFRX = 0) prior changing the LF Baseband Processor Mode. O0 _B Disabled, only Carrier Detect function remains Note: Carrier Detector Filter may be enabled separately O1 _B Mode 1: LF baseband is enabled while LF Receiver is on 10 _B Mode 2: LF baseband is enabled only after carrier detection 11 _B Not used Reset: O _H			
ENOOTIM	3	wr	Enable On/Off Timer This bit controls the LF On/Off Timer. This bit has to be stable for at least 1 LP RC clock (2 kHz) period in order to take effect. When the LF On/Off Timer is disabled the LF Receiver is controlled by ENLFRX. This bit is automatically cleared if sync or pattern match wakeup occurs. O _B Disable On/Off Timer 1 _B Enable On/Off Timer Reset: O _H			
ENLFRX	2	Wr	Enable LF Receiver This bit controls power to LF Receiver and has priority over ENOOTIM. O _B LF Receiver disabled 1 _B LF Receiver state is determined by On/Off Timer Reset: O _H			



SP370 Tire Pressure Monitoring Sensor

Special Function Registers

Field	Bits	Туре	Description
SYNCIND	1	r	Synchronization Indicator This bit is set upon Sync Match and remains set as long as valid Manchester data is detected. When invalid Manchester bit is detected this bit is cleared and SFR bit LFRXS.DECERR is set.(e.g. Figure 29) 0 _B No Synchronization 1 _B Synchronization achieved Reset: 0 _H
LFONIND	0	r	LF ON/OFF Indicator Indicates if the LF Analog Frontend is turned on or off. This bit may be used to observe the LF On/Off Timer period and duty cycle. 0 _B LF Analog Frontend power is off 1 _B LF Analog Frontend power is on Reset: 0 _H



3.12 LF Receiver Analog Front End

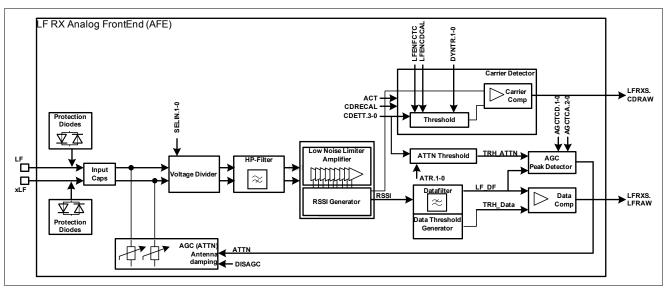


Figure 20 LF Receiver AFE Block Diagram

The LF Receiver Analog Frontend has two input pins LF and xLF. An antenna coil in parallel resonance to a capacitor and resistor are externally connected to them in the application. The LF input pins are protected against overvoltage with antiparallel ESD-Diodes. The "Differential Input Capacitance" on Page 157 needs to be considered for the calculation of the parallel resonance frequency of the antenna.

A Voltage Divider with three divider factors is available to attenuate the LF input signal. The attenuation is determined by the SFR bits LFRX0.1-0[SELIN1-0].

The LF input signal is amplified with a Low Noise Limiter Amplifier and the signal strength is indicated by the RSSI Generator. The internal RSSI signal is used as input for the Carrier detector and the ASK demodulator.


The Carrier Detector has an adjustable threshold which is determined by SFR bits LFRX0.7-4[CDETT3-0]. An LF input signal above the Carrier Detector threshold level may trigger a device wakeup from POWER DOWN state. The Carrier Detector Raw (CDRAW) signal is used as input for the LF Baseband.

The ASK demodulator consists of a datafilter together with a data threshold generator and the dataslicer. The demodulated output signal (LFRAW) is used as input for the LF Baseband.

To cover a high dynamic range of the LF input signal an input attenuator with an Automatic Gain Control (AGC) is implemented. In the event that AGC is not desired, it can be disabled by setting SFR bit LFRXC.6[DISAGC].



LF Receiver Configuration Register 0

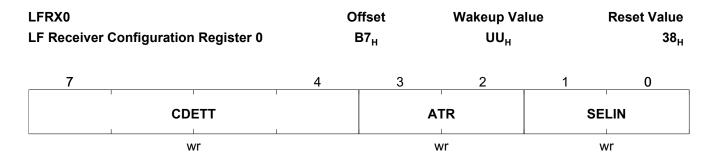

Field	Bits	Type	Description
CDETT	7:4	wr	Carrier Detector Threshold Level 0000 _B : Lowest threshold 1111 _B : Highest threshold Reset: 3 _H
ATR	3:2	wr	AGC Threshold These bits must be set to 11 _B . Reset: 2 _H
SELIN	1:0	wr	LF-Receiver Input Select 00 _B Antenna voltage divider factor Level 1: typical value 1 01 _B Antenna voltage divider factor Level 2: typical value 5 10 _B Antenna voltage divider factor Level 3: typical value 22 11 _B Do not use Reset: 0 _H



3.13 LF Attenuator (AGC)

An input attenuator is provided to limit strong signals and interferers across the differential input. An automatic gain control block (fast attack, slow decay) is implemented to cover a high dynamic range of the LF input signal. The AGC threshold is determined by the SFR bits LFRX0.3-2[ATR1-0] and the carrier detector settings in SFR bits LFRX0.7-4[CDETT3-0]. The attenuator attack time is controlled via the SFR bits LFRX2.2-0[AGCTCA2-0]. The decay slew rate can be adjusted by SFR bits LFRX1.7-6[AGCTCD1-0]. Please refer to the register description for the proper setting of the AGC SFR bits.


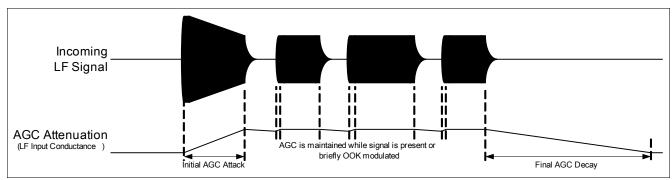


Figure 21 AGC Timing diagram

LF Receiver Configuration Register 1



Field	Bits	Type	Description	
AGCTCD	7:6	wr	AGC Decay Time Constant Recommended setting 00 _B Reset: 0 _H	
ACT	5:4	wr	Autocalibration Time Recommended setting for LF Telegram detection 10 _B Recommended setting for carrier detection 01 _B Reset: 0 _H	
Res	3:0		Reserved These bits must be set to 0000 _B . Reset: 0 _H	

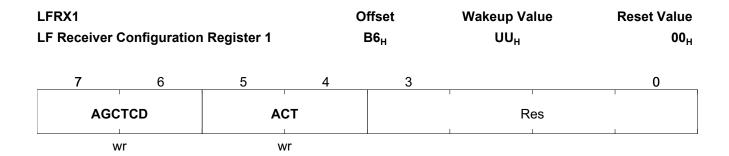

LF Receiver Configuration Register 2

LFRX2 LF Receiver Configuration Register 2					fset F _H	Wakeup Value UU _H		Reset Value 77 _H	
	7	T			3	2		0	
			Res				AGCTCA		
				I			wr		

Field	Bits	Type	Description
Res	7:3		Reserved These bits must be set to $01110_{\rm B}$. Reset: $0E_{\rm H}$
AGCTCA	2:0	wr	AGC Attack Time Constant Selection Recommended setting 111 _B Reset: 7 _H

3.14 LF Carrier Detector

A level detection circuit is implemented to determine if the carrier amplitude is above a predetermined level. An LF input signal above the Carrier Detector threshold level may cause a device wakeup from POWER DOWN state.

Three different Carrier Detector thresholds can be chosen by the application. In order to achieve LF sensitivity as specified in Table 42 "LF Receiver Carrier Detection, Vbat = 2.1 V...3.6 V, fLF = 120 kHz...130 kHz" on Page 159 an appropriate Voltage Divider setting (SFR bits LFRX0.1-0[SELIN1-0]) is used in conjunction with the adjustable threshold level (SFR bits LFRX0.7-4[CDETT3-0]). During the testing and calibration process at the factory, individually calibrated CDETT values are programmed into each device. The CDETT calibration information for each device may vary, and so the application software must retrieve the calibrated CDETT values from the appropriate Flash address and apply it in conjunction with the predefined SELIN setting. The complete proper setting for SFR LFRX0 (CDETT[7:4], ATR[3:2], SELIN[1:0]) for the according Carrier Detector Threshold Level must be read by the application from the following Flash addresses and be written into SFR LFRX0:

- Carrier Detector Threshold 1: Flash address 5810_H
- Carrier Detector Threshold 2: Flash address 580F_H
- Carrier Detector Threshold 3: Flash address 580E_H

Carrier Detector Filtering

To prevent the device from undesired carrier detect wakeups, an LF Carrier Detector Filter is implemented. SFR LFCDFLT is used to determine the Filtering Time. The LF Carrier Detector Filter is enabled/disabled according to LFCDFLT.CDFT[6-0]. The following figure shows the behavior of the LF Carrier Detector Filter.

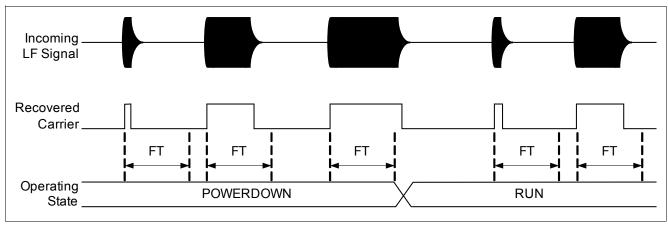


Figure 22 LF Receiver Carrier Detector Filtering

Three different Carrier Detector Filter settings are predefined for the application. In order to achieve LF filter times as specified in Table 42 "LF Receiver Carrier Detection, Vbat = 2.1 V...3.6 V, fLF = 120 kHz...130 kHz" on Page 159 an appropriate Filter Time setting (SFR LFCDFLT.CDFT[6-0]) needs to be applied. During the testing and calibration process at the factory, individually calibrated CDFT values are programmed into each device. The CDFT calibration information for each device may vary, and so the application software must retrieve the calibrated CDFT values from the appropriate Flash address. The proper settings for SFR LFCDFLT are indicated in following list:

- Carrier Detector Filter Time 1: [CDFT.6-0]: Flash address 580D_H
- Carrier Detector Filter Time 2: [CDFT.6-0]: Flash address 580C_H
- Carrier Detector Filter Time 3: [CDFT.6-0]: Flash address 580B_H

Figure 23 summarizes the LF Carrier Detector response versus input signal duration and amplitude.



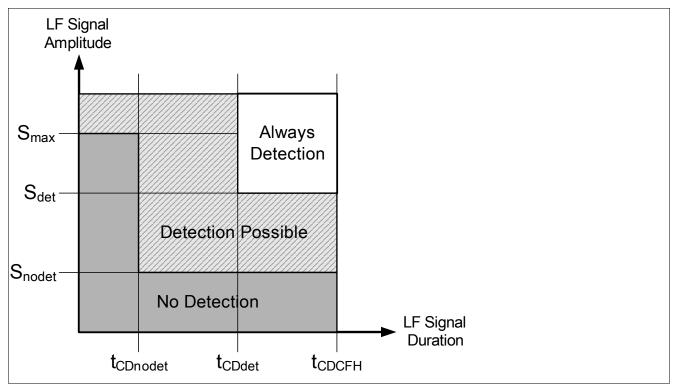


Figure 23 LF Carrier Detector Response

Automatic Carrier Detector Threshold Calibration

To achieve high sensitive thresholds the Carrier Detector has to be calibrated. This auto-calibration is enabled by setting SFR bit LFCDM0.3[LFENCDCAL] and is executed everytime the LF Receiver is turned on (either manually by SFR bit LFRXC.2[ENLFRX] or automatically by the LF On/Off Timer). An auto-calibration sequence can be manually initiated by setting SFR bit LFRXC.7[CDRECAL]. The auto-calibration duration is determined by SFR bits LFRX1.5-4[ATC1-0] and specified in Table 42 "LF Receiver Carrier Detection, Vbat = 2.1 V...3.6 V, fLF = 120 kHz...130 kHz" on Page 159. For the proper setting of the auto-calibration please refer to the register description.

If set, SFR Bit LFCDM0.2[LFENFCTC] "freezes" the threshold level after the calibration is finished. If this bit is not set, the threshold will follow the mean value of the input signal, resulting in a threshold signal that is dependent on the LF signal strength.

Note: If SFR Bit LFCDM0[LFENFCTC] is set, a periodic recalibration is required especially at higher temperatures since the "frozen" threshold level might drift after the Carrier Detector Freeze Hold Time (TCDCFH). The recalibration is achieved automatically by the next Off/On transition of the LF On/Off Timer or by turning off and on the LF Receiver manually by SFR Bit LFRXC.2[ENLFRX]. The Carrier Detector Freeze Hold Time is specified in Table 42 "LF Receiver Carrier Detection, Vbat = 2.1 V...3.6 V, fLF = 120 kHz...130 kHz" on Page 159.

The following figure shows the timing behavior of the calibration.



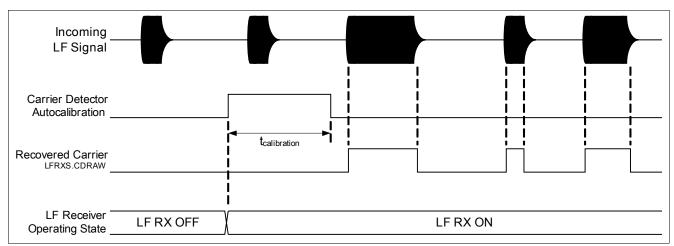


Figure 24 Carrier Detector Threshold Calibration Timing



LF Carrier Detect Filtering

LFCDFLT LF Carrier De		Offset Wakeup Value B2 _H UU _H		lue	Reset Value 00 _H		
7	6						0
CDFM		'	'	CDFT			
wr				wr			

Field	Bits	Туре	Description
CDFM	7	wr	Carrier Detector Filtering Mode For typical applications it is recommended to set this bit to 0 _B . 0 _B Filter enabled 1 _B Filter enabled until Carrier detected Reset: 0 _H
CDFT	6:0	WΓ	Carrier Detector Filtering Time 01 _H -7F _H Enables and adjusts filtering time in steps of 1 LF RC Oscillator period (typ. 11.1 us). 00 _H Disables filtering. Reset: 00 _H



LF Carrier Detector Mode Register 0

LFCDM0 LF Carrier Detector Mode Register 0					Offset B5 _H	Wakeup Va UUUUUUU		Reset Value 00 _H
	7	6	5	4	3	2	1	0
	Res DYNTR		NTR	LFENCDC AL	LFENFCT C	Res	UNUSED	
			V	vr	wr	wr		-

Field	Bits	Type	Description
Res	7:6		
DYNTR	5:4	wr	Carrier Detector Dynamic Threshold Recommended setting 01 _B Reset: 0 _H
LFENCDCAL	3	wr	Enable LF Carrier Detect Calibration 0 _B Disable Calibration 1 _B Calibration occurs each LF Rx power up Reset: 0 _H
LFENFCTC	2	wr	Enable LF Calibration Freeze 0 _B Disable Calibration Freeze 1 _B Hold Calibration threshold Reset: 0 _H
Res	1		Reserved This bit must be set to 0_B . Reset: 0_H
UNUSED	0	-	UNUSED Reset: 0 _H

3.15 LF Receiver On/Off Timer

An On/Off Timer is implemented to reduce the LF Receiver current consumption in POWER DOWN state. It can be enabled by SFR bit LFRXC.3[ENOOTIM]. The LF Analog Frontend will be periodically turned On and Off corresponding to the timer settings. The current state of the LF Receiver (On or Off) can be evaluated using SFR bit LFRXC.0[LFONIND]. The LF Receiver On/Off Timer incorporates a precounter (SFR LFOOTP) as timebase and a postcounter for independently setting the On time and the Off time (SFR LFOOT).

LF Receiver On/Off Timer Calibration

The calibration process is done automatically by a ROM Library function (see [1]) which calibrates the timebase to 50ms.

If any other (uncalibrated) timebase is needed SFR LFOOTP can be configured manually according the following equation:

$$timebase [s] = \frac{LFOOTP + 1}{f_{2kHzRCLPOsc\ ilator}[Hz]}$$
(10)

The On time and the Off time can be configured individually using SFR LFOOT. They can be calculated using the two following two equations:


$$ontime[s] = \frac{(ONTIM + 1) \cdot [Integer((LFOOTP)/4) + 1] \cdot (LFOOTP + 1)}{(LFOOTP + 1) \cdot f_{2kHzRCLPOsailator}[Hz]}$$
(11)

$$ontime [s] = \frac{(ONTIM + 1) \cdot [Integer((LFOOTP)/4) + 1] \cdot timebase[s]}{(LFOOTP + 1)}$$
(12)

$$offtime[s] = \frac{(OFFTIM + 1) \cdot (LFOOTP + 1) \cdot 4}{f_{2kHzRCLPOsėlator}[Hz]} = (OFFTIM + 1) \cdot timebase[s] \cdot 4$$
(13)



LF On/Off Timer Configuration Register

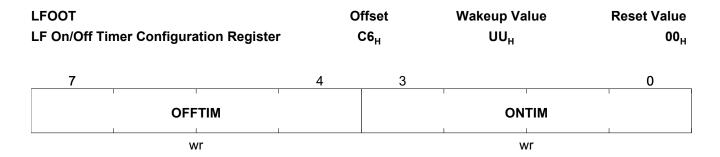

Field	Bits	Туре	Description
OFFTIM	7:4	wr	LF Polling OFF-Time If time base is set to 50 ms (default after calibration) in SFR LFOOTP: 0000 _B : 200 ms 1111 _B : 3.2 s Reset: 0 _H
ONTIM	3:0	wr	LF Polling ON-Time If time base is set to 50 ms (default after calibration) in SFR LFOOTP: 0000 _B : 12.5 ms 1111 _B : 200 ms Reset: 0 _H

LF OnOff Timer Precounter

LFOOTP	Offset	Wakeup Value	Reset Value 64 _H	
LF OnOff Timer Precounter	C5 _H	UU _H		
7	1	T T	0	
	LFOOTP			
	wr			

Field	Bits	Type	Description
LFOOTP	7:0	wr	LF ON/OFF Timer Precounter
			Establishes timebase for the LF-ON/OFF-Timer.
			00 _H : 1 RC-LP-Oscillator (2 kHz) periods
			01 _H : 2 RC-LP-Oscillator (2 kHz) periods
			<u></u>
			FF _H : 256 RC-LP-Oscillator (2 kHz) periods
			Reset: 64 _H

3.16 LF Receiver Baseband

The LF Receiver Baseband circuitry allows reception of ASK modulated LF Telegrams. As in the case of the LF Carrier Detector, the LF Receiver Baseband may be enabled and disabled manually via SFR LFRXC.2[ENLFRX] or automatically by the LF Receiver On/Off Timer. The LF Receiver Baseband may be operated in one of two modes: Mode 1, in which the baseband is fully operational whenever the LF receiver is enabled; and Mode 2, in which the baseband is only operational after the LF Carrier Detector has detected an incoming signal. LF Baseband Mode selection is accomplished by SFR bits LFRXC5:4[LFBBM]. The specified telegram sensitivity is only accomplished in Mode 1 and with the proper SFR register settings(see Table 68 "LF Receiver Special Function Register Settings for Telegram Mode" on Page 158)

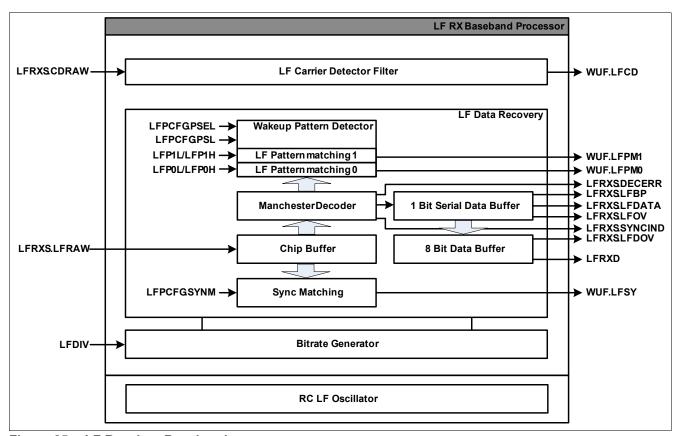


Figure 25 LF Receiver Baseband



LF Telegram Format

The LF Receiver Baseband requires that an LF Telegram contain at least two elements: a Preamble sequence and a Synchronization Pattern. The LF Telegram may also contain a user defined "wakeup ID" field which may be either 8-bits or 16-bits in length. The LF Receiver baseband supports matching against two different wakeup ID patterns, allowing separate "broadcast address" and "unique address" ID patterns to be implemented, for example. Finally, an LF Telegram will typically contain at least one data bit, so the reception of data as individual bits or groups of 8-bit bytes is supported. The CPU must handle the unloading of buffered data bits or bytes to prevent data overflow. The LF Receiver Baseband is configured for a specific LF Telegram format via the SFR LFPCFG. Figure 26 illustrates typical LF Telegram formats and the relationship of the telegram elements.

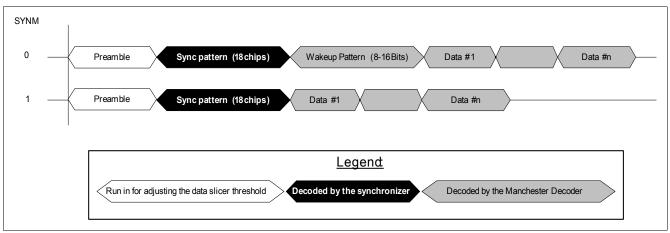


Figure 26 LF Receiver Baseband Configurations

An LF Telegram must begin with a Preamble sequence, which serves to stabilize the LF Data Threshold within the LF Analog Front End. The Preamble typically consists of several Manchester symbols, all of equal value (i.e. all '0' or all '1' bits). A Preamble may consist of mixed value bits, but in this case the duration of the Preamble must be longer than that required for equal value bits. There is no maximum duration for the Preamble. The "raw data" output of the LF Data Comparator may be observed via the SFR bit LFRXS.5[LFRAW].

A Synchronization ("Sync") pattern must follow the Preamble. The Sync pattern is 9.5 bits (18 chips) in duration, and includes non-Manchester symbols so that it is not possible to accidentally encounter the Sync pattern in any other portion of a properly formatted LF Telegram. The Sync Matching circuit within the LF Receiver Baseband is responsible for monitoring the raw data output of the LF Data Comparator and determining when a Sync pattern has been received. Detection of the Sync pattern (a "Sync match") will cause the SFR bit LFRXS.1[SYNCIND] to be set, and may be used as a CPU wakeup event. Figure 27 provides more detail relating to the Preamble sequence and Sync pattern.



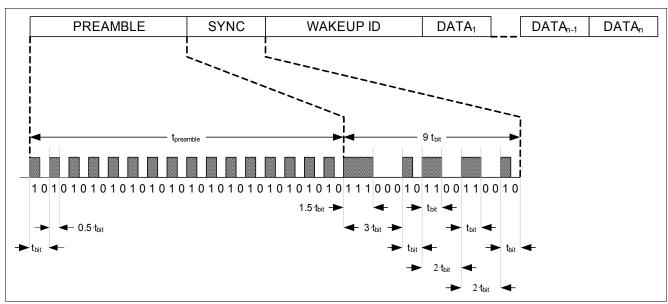


Figure 27 LF Telegram Format

The LF Telegram data payload must follow the synchronization pattern, and may be of any arbitrary length. Figure 28 illustrates the relationship between modulated Manchester symbols and decoded data bits. In the case that the LF Receiver Baseband is configured to detect a Wakeup ID pattern, the first 8 or 16 bits (depending on length of the wakeup ID) will be considered as ID bits rather than as data bits. Detection of a Wakeup ID pattern (a "Pattern Match") may be used as a CPU wakeup event. Decoding and buffering of incoming LF Telegram bits will continue until the Manchester Decoder within the baseband encounters a decoding error (code violation) or until the LF Receiver Baseband is disabled. A decoding error will cause the SFR bit LFRXS.6[DECERR] to be set and SFR bit LFRXC.1[SYNCIND] to be cleared.

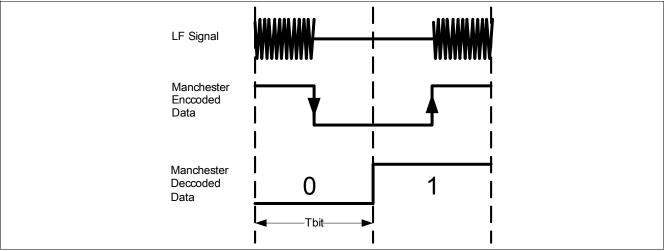


Figure 28 LF Decoder



LF Telegram Mode Settling Time

LF Telegram reception using the LF Receiver Baseband requires some "startup time" to elapse after it is enabled. When the LF Receiver is brought from any other mode (typically "off") into Baseband Mode 1, there is a settling time that must be allowed to elapse before any LF telegram reception may begin.

The sequence of events that take place when Baseband Mode 1 is enabled is shown in Figure 29. When the LF Receiver is brought from any other mode into Baseband Mode 2, the LF Carrier Detector auto-calibration time must be allowed to elapse before any LF telegram reception may begin (in Mode 2 the auto-calibration and telegram mode settling times are coincident. The auto-calibration time is always greater than telegram mode settling time, so only the former needs to be considered for timing purposes). The startup sequence for LF Baseband Mode 2 is similar to that for LF Carrier Detection as shown in Figure 24. When the LF Receiver Baseband is used in conjunction with the LF Receiver On/Off Timer, the result is a self-polling LF data interface. The appropriate startup time requirement ("Settling time" on Page 158 for Mode 1, "Auto-Calibration time" on Page 159 for Mode 2) must be considered and enabled via the SFR bits LFRX1.5:4[ACT]. Furthermore, the startup time must also be included within the LF "On time" duration when configuring the LF Receiver On/Off Timer.

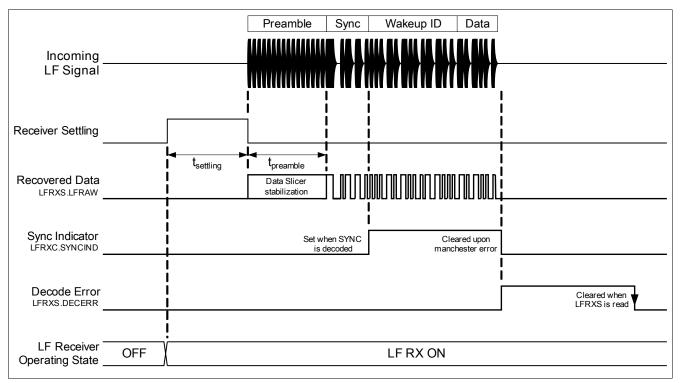


Figure 29 LF Receiver Baseband Telegram Timing



LF Bitrate Generator Calibration

A ROM Library function which automatically configures the bitrate clock divider SFR LFDIV is available. It automatically compensates drift and offset of the RC LF Oscillator.

The ROM Library function compares the current RC LF Oscillator frequency towards the highly accurate crystal oscillator frequency and configures the SFR LFDIV according to frequency of the RC LF Oscillator.

Attention: It is mandatory to call ROM Library function "LF_BaudrateCalibration" at least once before the LF Receiver is used. It is recommended to store the SFR LFDIV value into the FLASH and reprogram SFR LFDIV with such a value anytime the LF Receiver is operated.

The bitrate tolerance is specified in Table 40 "LF Receiver Telegram, Vbat = 2.1 V...3.6 V, fLF = 120 kHz...130 kHz" on Page 158; it can only be achieved with the usage of this ROM Library function and under the specified conditions.

If this calibration is performed regularly by the application, the bitrate tolerance for the transmitted data can be increased compared to this specified value. For details on the ROM Library function see [1].

LF Bitrate Divider Factor

LFDIV LF Bitrate Div	vider Factor		ffset B4 _H	Wakeup Va 00UUUUU	Reset Value 17 _H
7	6	5			0
UNU	SED			.FDIV	
	-			wr	

Field	Bits	Type	Description
UNUSED	7:6	-	UNUSED Reset: 0 _H
LFDIV	5:0	wr	LF Bitrate Divider LF Bitrate generator division factor. The reset value corresponds to an LF baudrate of 3.9 kbit/s Reset: 17 _H



3.17 Wakeup Pattern Detector

Two independent wakeup patterns - each with a length of 8 or 16 bits (SFR bit LFPCFG.1[PSL]) are available (SFR LFP1L/H and SFR LFP0L/H).

SFR bit LFPCFG.0[PSEL] determines on which pattern (pattern 0 only, or either pattern 0 or pattern 1) a wakeup can occur.

Note: The Wakeup must be enabled in addition in the SFR WUM (see **Table "Wakeup Mask Register" on Page 48**) to globally enable the wakeup on LF Patterns.


LF Pattern Detection Configuration Register

LFPCFG LF Pattern Detection Configuration Register					Offset C7 _H	Wakeup Va 00UU00U		Reset Value 00 _H
	7	6	5	4	3	2	1	0
	UNL	JSED	Res	SYNM	UN	USED	PSL	PSEL
		-		wr		_	wr	wr

Field	Bits	Туре	Description
UNUSED	7:6	-	UNUSED Reset: 0 _H
Res	5		Reserved This bit must be set to 0_B . Reset: 0_H
SYNM	4	wr	LF Synchronizer Mode 0 _B Sync and Pattern match 1 _B Sync match only Reset: 0 _H
UNUSED	3:2	-	UNUSED Reset: 0 _H
PSL	1	wr	Pattern Sequence Length 0 _B 8 bit sequence 1 _B 16 bit sequence Reset: 0 _H
PSEL	0	wr	Pattern Select Selects which LF Wakeup Pattern (P0 or P0 and P1) can cause an LF Pattern Match Wakeup. 0 _B LFP0 Pattern Detection Enable 1 _B LFP0 and LFP1 Pattern Detection Enable Reset: 0 _H



LF Pattern 0 Detector Sequence Data MSB

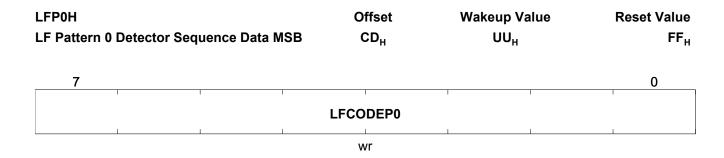

Field	Bits	Туре	Description
LFCODEP0	7:0	wr	LF Pattern 0 Sequence Data MSB High Byte of 16 bit pattern, ignored in case of 8 bit pattern. Reset: FF _H

LF Pattern 0 Detector Sequence Data LSB

LFP0L	Offset	Wakeup Value	Reset Value FF _H	
LF Pattern 0 Detector Sequence Data LSB	CCH	UU _H		
7	1		0	
	LFCODEP0		·	
	wr			

Field	Bits	Туре	Description
LFCODEP0	7:0	wr	LF Pattern 0 Sequence Data LSB Low Byte of 16 bit pattern, or 8 bit pattern. Reset: FF _H



LF Pattern 1 Detector Sequence Data MSB

Note: LFP1H and LFP1L may be used as two additional GPR registers (value maintained during powerdown, but not in event of RESET) if only wakeup on Pattern Match 0 is required.

LFP1H LF Pattern 1 Detector Sequence Data MSB			Offset CF _H	Wakeup Value UU _H	Reset Value FF _H
7	1				0
			LFCODEP1		
			wr		

Field	Bits	Туре	Description
LFCODEP1	7:0	wr	LF Pattern 1 Sequence Data MSB High Byte of 16 bit pattern, ignored in case of 8 bit pattern. Reset: FF _H

LF Pattern 1 Detector Sequence Data LSB

LFP1L		Offset	Wakeup Value	Reset Value FF _H	
LF Pattern 1 D	Detector Sequence Data L	SB CE _H	UU _H		
_					
7	ı	ı	T T	0	
		LFCODEP1			
		wr			

Field	Bits	Туре	Description
LFCODEP1	7:0	wr	LF Pattern 1 Sequence Data LSB Low Byte of 16 bit pattern, or 8 bit pattern. Reset: FF _H



3.18 LF Receiver Data Interface

LF Receiver Data Interface

The received data can be read by the microcontroller using the following different interfaces:

- 8 bit databyte (synchronized, Manchester decoded)
- Serial bitstream data (synchronized, Manchester decoded)
- RAW data (synchronized, chip level)
- RAW Carrier Detect (un-synchronized)

8 Bit databyte

Synchronized and decoded databytes are received using SFR LFRXD.

Decoded bits are shifted into an 8 bit receive buffer, until a byte boundary is reached. The received byte is then shifted into the SFR LFRXD, and a flag SFR bit LFRXS.3[LFDP] is set, while the following byte is shifted into the receive buffer. If the SFR LFRXD is not read before the following byte is received, it will be overwritten, and an overflow flag SFR bit LFRXS.4[LFDOV] is set.

Serial bitstream data

Synchronized and decoded serial data can be received by using SFR bit LFRXS.0[LFDATA].

A flag SFR bit LFRXS.1[LFBP] is set if data is pending, while the following bit is buffered. If the SFR bit LFRXS.0[LFDATA] is not read before the following bit is received, it will be overwritten, and an overflow flag SFR bit LFRXS.2 [LFOV] is set.

RAW data

Synchronized and undecoded serial data can be read by the microcontroller using SFR bit LFRXS.5[LFRAW]. This can be used to handle any other coding scheme than Manchester. This bit is the RAW output after the synchronizer, thus the decoding (including identifying the beginning/end of a bit period) has to be done by the application software.

RAW Carrier Detect

Un-synchronized and undecoded serial data can be read by the microcontroller using SFR bit LFRXS.7 [CDRAW]. This indicates if a Carrier Signal is currently present (SFR bit LFRXS.7[CDRAW]==1) or not (SFR bit LFRXS.7[CDRAW]==0). The application software can perform the LF baseband processing; in order to implement non-standard LF information encoding schemes, for example.



LF Receiver Data Register

LFRXD LF Receiver Data Register				ffset A5 _H	Wakeup Va UU _H	Wakeup Value UU _H	
7							0
			LFF	RXD	'		.
			<u>'</u>	r		1	

Field	Bits	Туре	Description
LFRXD	7:0	r	LF Receiver Data Reset: 00 _H



LF Receiver Status Register

LFRXS LF Receiver Status Register		Offset A4 _H		Wakeup Value XUXUUUUU _B		Reset Value X0X00000 _B	
7	6	5	4	3	2	1	0
CDRAW	DECERR	LFRAW	LFDOV	LFDP	LFOV	LFBP	LFDATA
r	rc	r	rc	r	rc	rc	r

Field	Bits	Type	Description
CDRAW	7	r	Carrier Detector Raw Data Instantaneous value of comparison of LF Carrier versus the LF Carrier Detect Threshold. Reset: X _B
DECERR	6	rc	Manchester Decode Error 0 _B No error detected 1 _B Error detected Reset: 0 _H
LFRAW	5	r	LF Receiver Raw Data Instantaneous output of the LF Data slicer. Reset: X _B
LFDOV	4	rc	LF Data Byte Overwritten This bit will be set if a new LF data byte is received prior to the previous byte being read from SFR LFRXD. Reset: 0 _H
LFDP	3	r	LF Data Byte Pending This bit will be set if a new LF data byte is available in SFR LFRXD. It will be cleared when the LFRXD register is read. Reset: 0 _H
LFOV	2	rc	LF Serial Decoded Data Overwritten This bit will be set if a new LF data bit is received prior to the previous bit being read from LFDATA. Reset: 0 _H
LFBP	1	rc	LF Serial Decoded Data Pending This bit will be set if a new LF data bit is available in LFDATA. Reset: 0 _H
LFDATA	0	r	LF Serial Decoded Data 0 _B Manchester 0 decoded 1 _B Manchester 1 decoded Reset: 0 _H



3.19 16 Bit CRC (Cyclic Redundancy Check) Generator/Checker

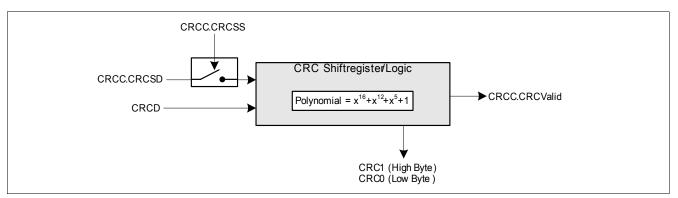


Figure 30 CRC (Cyclic Redundancy Check) Generator/Checker

CRC is a powerful method to detect errors in data packets that have been transmitted over a distorted connection. The CRC Generator/Checker divides each byte of a data packet by a polynomial, leaving the remainder which represents the checksum. The CRC-Generator/Checker is using the 16 Bit CCITT polynomial x16+x12+x5+1. The 16 bit start value is determined by the initial contents of SFR CRC0 and SFR CRC1.

CRC Generation and Checking

Figure 31 shows the basic usage of the CRC16.

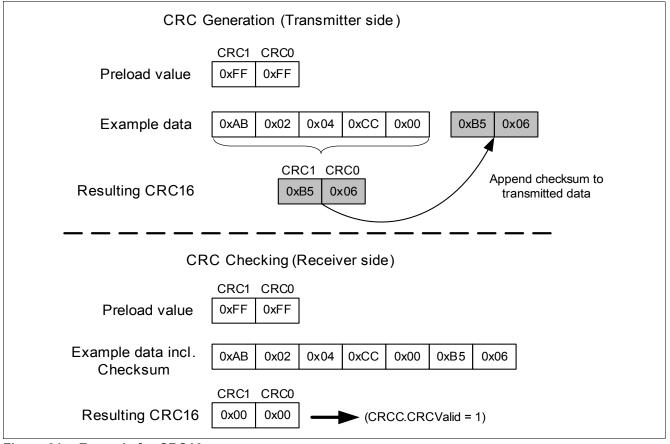


Figure 31 Example for CRC16 usage



Byte aligned CRC Generation

CRC generation is done by executing the following steps:

- The CRC shift register has to be initialized by writing FF_H (or if desired another start value) to both SFR CRC0 and SFR CRC1.
- The databytes which are to be used for the CRC Generation have to be shifted one after the other into the SFR CRCD. The process of CRC Generation is automatically invoked when data bytes are written to the SFR CRCD.

Note: Processing the data in SFR CRCD takes 3 instruction cycles, therefore the application has to assure that there are no consecutive write instructions without one extra instruction cycle between.

 The resulting checksum is available in the CRC Result Register SFR CRC0 and SFR CRC1 after the last data byte has been processed.

Byte aligned CRC Checking

CRC checking is done by executing the following steps:

- The CRC shift register has to be initialized by writing FF_H (or if desired another start value) to both SFR CRC0 and SFR CRC1.
- The databytes which should be checked have to be shifted one after the other into the SFR CRCD. It is
 important that the order (MSB-LSB) is the same as it was during the CRC Generation. In addition to the data
 the CRC16 has to be shifted into SFR CRCD as well (first the high byte then the low byte see also Figure 31).
 The process of CRC Checking is automatically invoked when data bytes are written to the SFR CRCD.

Note: Processing the data in SFR CRCD takes 3 instruction cycles, therefore the application has to assure that there are no consecutive write instructions without one extra instruction cycle between.

Note: One instruction cycle corresponds to 6 system clock cycles.

After the last byte is processed the SFR bit CRCC.1[CRCValid] indicates the correctness of the CRC
calculation after the last data byte has been processed and both - SFR CRC0 and SFR CRC1 are 0.

Serial bitstream CRC Generation/Checking

The CRC Generator/Checker features a serial mechanism to perform CRC generation and checking of non bytealigned data streams. In this case SFR bit CRCC.5[CRCSS] and SFR bit CRCC.6[CRCSD] are used instead of SFR CRCD.

The data stream is written bit by bit into SFR bit CRCC.6[CRCSD]. Each bit is processed by setting the flag SFR bit CRCC.5[CRCSS].

The following figure shows an example for the usage of SFR bit CRCC.5[CRCSS] and SFR bit CRCC.6[CRCSD].

Note: No time limitations apply when using serial data, so the software can shift and strobe without any wait states between processing consecutive bits.

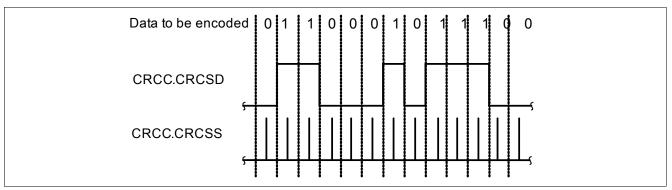


Figure 32 Example for serial CRC generation/checking

Datasheet 99 Revision 1.1, 2012-08-03



Note: The serial and byte-aligned generation/checking mechanism is interchangeable within the same generation/checking process.

Example: If a data packet consists of 18 bits, 16 bits can be processed byte-aligned via SFR CRCD and the two remaining bits can be processed bit-aligned by using SFR bit CRCC.5[CRCSS] and SFR bit CRCC.6[CRCSD].


CRC Control Register

CRCC CRC Control	Register		C	Offset A9 _H	Wakeup Va 02 _H	lue	Reset Value 02 _H
7	6	5	4		2	1	0
UNUSED	CRCSD	CRCSS		UNUSED		CRCVALI D	UNUSED
-	wr	W		-		r	-

Field	Bits	Туре	Description
UNUSED	7	-	UNUSED Reset: 0 _H
CRCSD	6	wr	CRC Serial Data Reset: 0 _H
CRCSS	5	w	CRC Serial Data Strobe By setting this bit the data bit from CRCSD is strobed into CRC generator/checker Reset: 0 _H
UNUSED	4:2	-	UNUSED Reset: 0 _H
CRCVALID	1	r	CRC Valid This bit is set automatically when all CRC result bits are zero. 0 _B CRC check failed 1 _B CRC check successful Reset: 1 _H
UNUSED	0	-	UNUSED Reset: 0 _H



CRC Data Register

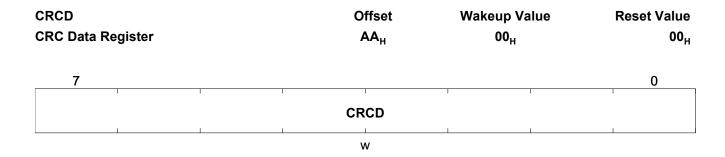

Field	Bits	Туре	Description
CRCD	7:0	w	CRC Data Register Reset: 00 _H

CRC Shift Register 1 (high byte)

CRC1	Offset Wakeup Value			
CRC Preload/Result Register 1 (high byte)	AD_H	00 _H	00 _H	
7			0	
	CRC1		,	
	wr	1		

Field	Bits	Туре	Description
CRC1	7:0		CRC Preload/Result Register 1 (high byte) Reset: 00 _H



CRC Shift Register 0 (low byte)

CRC0 CRC Preload/Result Register 0 (low byte)				ffset \C _H	Wakeup Va 00 _H	lue	Reset Value 00 _H
7	I	ı			T		0
CRC0							
			W	/r			

Field	Bits	Type	Description
CRC0	7:0	wr	CRC Preload/Result Register 0 (low byte) Reset: 00 _H



3.20 Pseudo Random Number Generator

The SP370 offers a Pseudo Random Number Generator. It consists of a Maximum Length Linear Feedback Shift Register (MLFSR) as built in hardware unit which creates a new pseudo random number everytime SFR bit CFG1.5[RNGEn] is set.


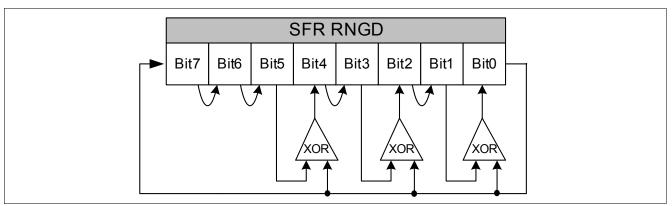


Figure 33 Shift Register Implementation

A user-defined start value (except 00_H) can be written to SFR RNGD. The default value is 55_H.

The generation of a new random number is initiated by setting SFR bit CFG1.5[RNGEn]. The random number generation requires one systemclock cycle, thus the application can read the generated number in the next instruction without any extra wait states.

Random Number Generator Data Register

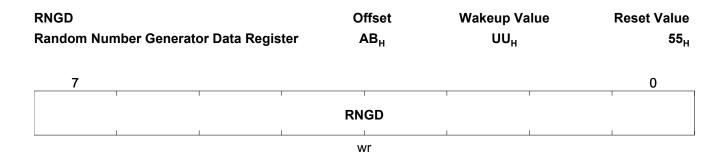

Field	Bits	Type	Description
RNGD	7:0	wr	Random Number Generator Data Register Reset: 55 _H



3.21 Timer Unit

The SP370 comprises two independent 16 bit timers which operate as down counters. Different timer modes are available for extended functionality.

Basic Timer Configuration

Timer 0 and Timer 1 comprise two fully programmable 16-bit timers, which can be used for time measurements as well as generating time delays. The clock source is selectable in order to enlarge the timer runtime. SFR TMOD is used to select the clock source and the desired timer mode.

Setting the SFR bit TCON.0[T0Run] (respectively SFR bit TCON.4[T1Run]) starts Timer 0 (resp. Timer 1). The Timer counts down from the start values SFR TH/L0 (resp. SFR TH/L1) using the selected counter clock (see SFR TMOD) until the timer is elapsed. SFR bit TCON.1[T0Full] (resp. SFR bit TCON.5[T1Full]) is set.

Note: The timer full flag is set when the timer would underflow from $0000_{H} ==> FFFFH$. To count e.g. 10 events with timer 0 SFR TL0 has to be configured to 9H instead of 0AH.

After a timer is elapsed there are two possibilities that can occur (dependant on the selected timer mode):

- Reload: If the selected timer mode uses timer reload, the timer is automatically reloaded and restarted.
- Stop: If the selected timer mode doesn't use timer reload, the timer is stopped and SFR bit TCON.0[T0Run] (resp. SFR bit TCON.4[T1Run]) is cleared.

Timer Modes

Timer mode 0

Comprises:

· 16 bit timer with reload

The timer unit is configured as one 16 bit reloadable timer.

SFR TL0 and SFR TH0 hold the start value.

When SFR bit TCON.0[T0Run] is set, the timer starts counting down.

SFR bit TCON.1[T0Full] is set when the timer is elapsed.

The timer value is reloaded from SFR TL1 and SFR TH1 and the timer is restarted automatically.

SFR bit TCON.1[T0Full] has to be cleared by the application software. It is not cleared automatically on a read-access.

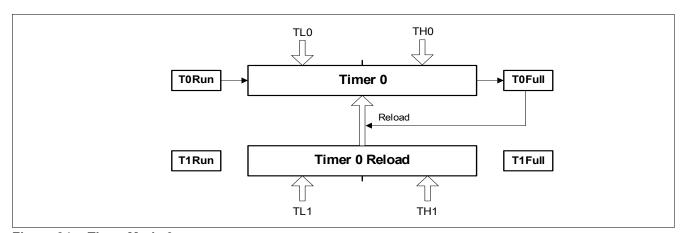


Figure 34 Timer Mode 0

Note: In this mode both SFR bit TCON.4[T1Run] and SFR bit TCON.5[T1Full] are not used.



Timer Mode 1

Comprises:

- · 16 bit timer without reload
- 8 bit timer with reload and bitrate strobe signal for RF Transmitter

Timer 0 operates as a 16 bit timer with the start value in SFR TL0 and SFR TH0, timer run bit SFR bit TCON.0[T0Run] and timer elapsed indicator SFR bit TCON.1[T0Full].

If the timer is elapsed, it is stopped, SFR bit TCON.1[T0Full] is set and the timer run bit SFR bit TCON.0[T0Run] is cleared.

Timer 1 sets up a reloadable 8 bit timer holding the startup value in SFR TL1, timer reload value in SFR TH1, timer run bit in SFR bit TCON.4[T1Run] and timer elapsed indicator in SFR bit TCON.5[T1Full].

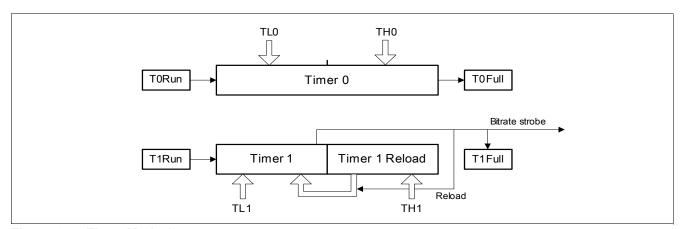


Figure 35 Timer Mode 1

Timer Mode 2

Comprises:

- · 8 bit timer with reload
- 8 bit timer with reload and bitrate strobe signal for RF Transmitter

Timer 0 sets up a reloadable 8 bit timer holding the start value SFR TL0, timer reload value SFR TH0, timer run bit SFR bit TCON.0[T0Run] and timer elapsed indicator SFR bit TCON.1[T0Full].

Timer 1 sets up a reloadable 8 bit timer holding the start value SFR TL1, timer reload value SFR TH1, timer run bit SFR bit TCON.4[T1Run] and timer elapsed indicator SFR bit TCON.5[T1Full].

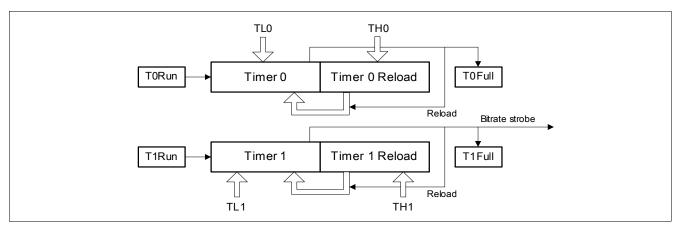


Figure 36 Timer Mode 2



Timer Mode 3

Comprises:

- 8 bit timer without reload (1)
- 8 bit timer without reload (2)
- · 8 bit timer with reload and bitrate strobe signal for RF Transmitter

Timer 0 (1) uses SFR TL0 as start value.

Setting SFR bit TCON.0[T0Run] starts the timer.

SFR bit TCON.1[T0Full] is set when the timer is elapsed.

SFR bit TCON.0[T0Run] is cleared automatically when the timer is elapsed.

Timer 0 (2) uses SFR TH0 as start value.

Setting SFR bit TCON.4[T1Run] starts the timer.

SFR bit TCON.5[T1Full] is set when the timer is elapsed.

SFR bit TCON.4[T1Run] is cleared automatically when the timer is elapsed.

Timer 1 operates as a dedicated 8 bit bitrate timer for the RF Encoder. The timer uses no Run bit or Full flag. It is started automatically when the timer mode is activated.

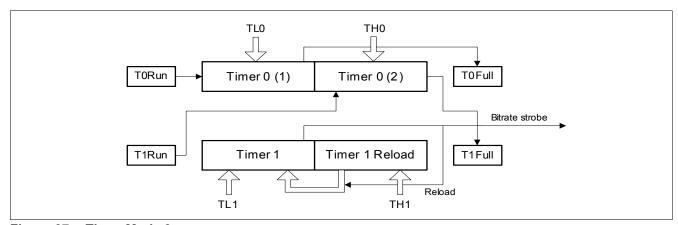


Figure 37 Timer Mode 3



Timer mode 4

Comprises:

· 16 bit timer with reload and bitrate strobe signal for RF Transmitter

The timer unit is configured as one 16 bit reloadable timer.

SFR TL1 and SFR TH1 hold the start value.

If SFR bit TCON.4[T1Run] is set, the timer starts counting.

SFR bit TCON.5[T1Full] is set when the timer is elapsed.

The timer value is reloaded from SFR TL0 and SFR TH0 and the timer is restarted automatically.

SFR bit TCON.5[T1Full] has to be cleared by the application software. It is not cleared on read-access.

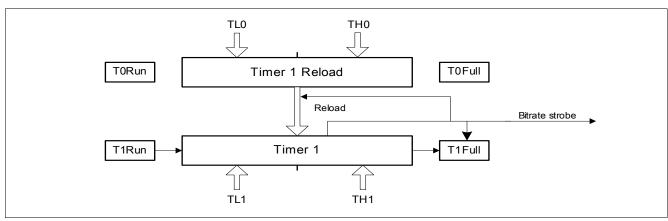


Figure 38 Timer mode 4

Note: In this mode both SFR bit TCON.0[T0Run] and SFR bit TCON.1[T0Full] are not used.



Timer Mode 5

Comprises:

- · 8 bit timer with reload
- 16 bit timer without reload and bitrate strobe signal for RF Transmitter

Timer 0 sets up a reloadable 8 bit timer holding the start value in SFR TL0, timer reload value in SFR TH0, timer run bit SFR bit TCON.0[T0Run] and timer elapsed indicator in SFR bit TCON.1[T0Full].

Timer 1 operates as a 16 bit timer with the start value in SFR TL1 and SFR TH1, timer run bit SFR bit TCON.4[T1Run] and timer elapsed indicator SFR bit TCON.5[T1Full]. If the timer is elapsed the timer is stopped, SFR bit TCON.5[T1Full] is set and the timer run bit SFR bit TCON.4[T1Run] is cleared.

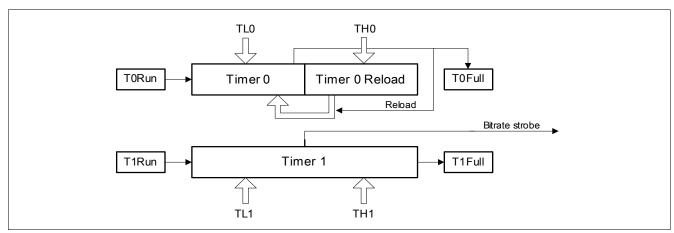


Figure 39 Timer Mode 5



Timer Mode 6

Comprises:

- · 16 bit timer without reload
- 16 bit timer without reload and bitrate strobe signal for RF Transmitter

Timer 0 operates as a 16 bit timer with the start value in SFR TL0 and SFR TH0, timer run bit SFR bit TCON.0[T0Run] and timer elapsed indicator SFR bit TCON.1[T0Full].

If the timer is elapsed the timer is stopped, SFR bit TCON.1[T0Full] is set and the timer run bit SFR bit TCON.0[T0Run] is cleared.

Timer 1 operates as a 16 bit timer with the start value in SFR TL1 and SFR TH1, timer run bit SFR bit TCON.4[T1Run] and timer elapsed indicator SFR bit TCON.5[T1Full].

If the timer is elapsed the timer is stopped, SFR bit TCON.5[T1Full] is set and the timer run bit SFR bit TCON.4[T1Run] is cleared.

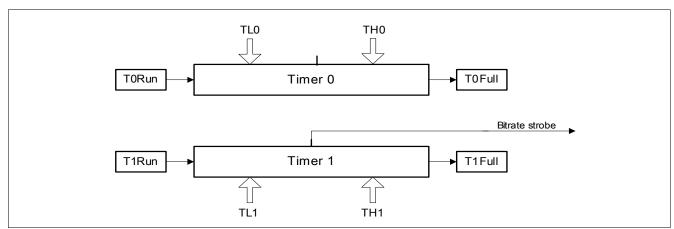


Figure 40 Timer Mode 6

Timer Mode 7

This timer mode is not available for application usage. It is used by the ROM library functions for calibration purpose.



Timer Mode Register

TMOD Timer Mode Register					Offset 89 _H	Wakeup Va 00 _H	lue	Reset Value 00 _H
	7	6	5	4	3	2		0
	T10	CLK	тос	ELK	TCLKM		TM	
	W	/r	w	r	wr		wr	

Field	Bits	Туре	Description
T1CLK	7:6	wr	Timer 1 Clock Source Select 00 _B System clock 01 _B If TCLKM = 0: System clock divided by SFR DIVIC and 8 If TCLKM = 1: Crystal Oscillator divided by 4 10 _B 4kHz (2*2kHz LP RC Oscillator) 11 _B If TCLKM = 0: PP2 event count (rising edge) Reset: 0 _H
TOCLK	5:4	wr	Timer 0 Clock Source Select 00 _B System clock 01 _B If TCLKM = 0: System clock divided by SFR DIVIC and 8 If TCLKM = 1: Crystal Oscillator divided by 4 10 _B 4kHz (2*2kHz LP RC Oscillator) 11 _B If TCLKM = 0: Timer 1 underflow event count Reset: 0 _H
If TCLKN clock so When TO When TO required SFR CFO Note: It is		wr	Timer Unit Crystal Clock Source Enable If TCLKM is set to 1, then Crystal Oscillator is available as T0 and T1 clock source, refer to T0CLK and T1CLK. When TCLKM is set, the Crystal Oscillator is automatically enabled. When TCLKM is cleared, the crystal oscillator will be disabled unless required by other functional blocks (e.g. during RF transmission, or while SFR CFG0.EnXOSC = 1). Note: It is recommend to call StartXtalOsc() ROM library function prior to setting TCLKM.
			0 _B Crystal Oscillator is not available as Timer clock source 1 _B Crystal Oscillator is available as Timer clock source Reset: 0 _H



SP370 Tire Pressure Monitoring Sensor

Special Function Registers

Field	Bits	Type	Description
TM	2:0	wr	Timer Mode
			000 _B Mode 0: 16 bit timer w/ reload and no baudrate strobe
			001 _B Mode 1: 16 bit timer w/o reload and 8 bit timer w/ reload
			010 _B Mode 2: two 8 bit timers w/ reload
			011 _B Mode 3: two 8 bit timers w/o reload and 8 bit timer w/ reload
			100 _B Mode 4: 16 bit timer w/ reload
			101 _B Mode 5: 8 bit timer w/ reload and 16 bit timer w/o reload
			110 _B Mode 6: two 16 bit timer w/o reload
			111 _B Mode 7: Not available for application use
			Reset: 0 _H



Timer Control Register

TCON Timer Control Register					ffset 88 _H	Wakeup Va 00 _H	lue	Reset Value 00 _H
ſ	7	6	5	4	3	2	1	0
	UNU	ISED	T1FULL	T1RUN	UNL	JSED	T0FULL	T0RUN
		-	wr	wr		_	wr	wr

Field	Bits	Type	Description
UNUSED	7:6	-	UNUSED Reset: 0 _H
T1FULL	5	wr	Timer 1 Full Flag Set if a Timer 1 underflow has occurred. Reset: 0 _H
T1RUN	4	wr	Timer 1 Run 0 _B Timer 1 is stopped 1 _B Timer 1 counts downward Reset: 0 _H
UNUSED	3:2	-	UNUSED Reset: 0 _H
TOFULL	1	wr	Timer 0 Full Flag Set if a Timer 0 underflow has occurred. Reset: 0 _H
T0RUN	0	wr	Timer 0 Run 0 _B Timer 0 is stopped 1 _B Timer 0 counts downward Reset: 0 _H



Timer 0 Register High Byte

TH0	Offset	Wakeup Value	Reset Value 00 _H	
Timer 0 Register High Byte	8C _H	00 _H		
7			0	
		I I	'	
	TH0			
	wr			

Field	Bits	Туре	Description
TH0	7:0	wr	Timer 0 High Byte Timer 0 [15:8] Reset: 00 _H

Timer 0 Register Low Byte

TL0			Offset	Wakeup Value	Reset Value	
Timer 0 Reg	ister Low Byte		8A _H	00 _H	00 _H	
7					0	
•	T	Т	ı	1		
			TL0			
			wr			

Field	Bits	Туре	Description
TL0	7:0	wr	Timer 0 Low Byte Timer 0 [7:0] Reset: 00 _H



Timer 1 Register High Byte

TH1	nistor High Ryt		ffset 3D _H	Wakeup Value 00 _H		Reset Value 00 _H	
Timer 1 Register High Byte			•	Ъ	ООН		ООН
7		T	T	T	T	T	0
	1	I	TI	H1	I	I	I
			V	vr			

Field	Bits	Туре	Description
TH1	7:0	wr	Timer 1 High Byte Timer 1 [15:8] Reset: 00 _H

Timer 1 Register Low Byte

TL1	Offset	Wakeup Value	Reset Value	
Timer 1 Register Low Byte	8B _H	00 _H	00 _H	
7			0	
	TL1	1	1	
	l .			
	wr			

Field	Bits	Туре	Description
TL1	7:0	wr	Timer 1 Low Byte Timer 1 [7:0] Reset: 00 _H



3.22 General Purpose Input/Output (GPIO)

The SP370 has three GPIO pins that are used for:

- General purpose by the application software
- Dedicated digital peripherals ("Alternative Port Functionality" on Page 117).
- Operating mode selection ("Resets and Operating Mode Selection" on Page 19)
- If configured for general purpose usage, the GPIO pins can be accessed directly by the CPU. All GPIO pins have selectable pull-up and pull-down resistors.

Note: The GPIO pins are configured as input with the pull-up resistor enabled after reset. In POWER DOWN state and THERMAL SHUTDOWN state the GPIOs keep their configuration.

Peripheral Port Configuration

The following table shows the different possible configurations for the GPIO pins.

The 'x' in the table has to be replaced by either 0,1 or 2 (for PP0, PP1 or PP2).

Table 10 GPIO Port Configuration

P1DIR.x	P1OUT.x	P1SENS.x	I/O	Pull-up/ pull-down	Comment
0	0	-	Output	No	LOW (sink)
0	1	-	Output	No	HIGH (source)
1	0	-	Input	No	high-Z (Tri-State)
1	1	0	Input	Pull-up	Weak-High
1	1	1	Input	Pull-down	Weak-Low

Note: The GPIO pin PP2 can be configured as external wakeup. For the required register settings please refer to "External Wakeup on PP2" on Page 117.

Spike Suppression on Input Pins

To avoid unstability when reading the GPIO pins, a synchronization stage with a two-stage spike filter is included. Due to the synchronization stage the following conditions might occur:

- Signal duration (T_{SIGNAL}) < 1 systemclock¹⁾ period (1 T_{CLK}): Signal is suppressed
- 1 T_{CLK} < T_{SIGNAL} < 2 T_{CLK}: undefined if suppressed or passed
- T_{SIGNAL} > 2 T_{CLK}: Signal appears in SFR P1IN

Figure 41 shows examples of different input signals and how they are processed by the the synchronization stage and the spike filter.

¹⁾ For PP0, PP1 and PP2 the synchronization stage uses the undivided systemclock (SFR DIVIC) as clocksource, so SFR DIVIC has no influence.

The synchronization stage is disabled in POWER DOWN state, so it is not used for an external wakeup (see "External Wakeup on PP2" on Page 117).



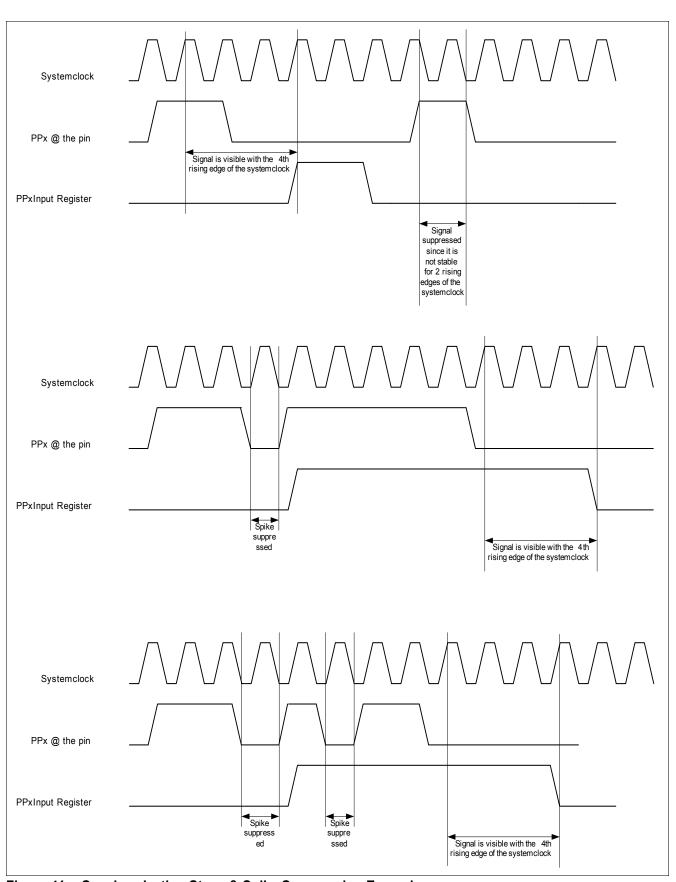


Figure 41 Synchronization Stage & Spike Suppression Examples



External Wakeup on PP2

PP2 can be used as an external wakeup source if enabled by the Wakeup-Mask SFR bit WUM.1[EXT1] and configured as input pin by setting SFR bit P1DIR.2[PPD2].

The internal pull-up/pull-down resistor is enabled if SFR bit P1OUT.2[PPO2] is set. SFR bit P1SENS.2[PPS2] selects the sensitivity (high active/low active):

Table 11 External Wakeup Configuration

SFR Settings	Description
SFR bit P1DIR.2[PPD2] = 1 SFR bit P1OUT.2[PPO2]=1 SFR bitP1SENS.2[PPS2] = 0 SFR bit WUM.1[EXT] = 0	PP2 configured as Input, pull-up enabled, Wakeup occurs if PP2 is forced to LOW externally.
SFR bit P1DIR.2[PPD2] = 1 SFR bit P1OUT.2[PPO2] = 1 SFR bitP1SENS.2[PPS2] = 1 SFR bit WUM.1[EXT] = 0	PP2 configured as Input, pull-down enabled, Wakeup occurs if PP2 is forced to HIGH externally.

Alternative Port Functionality

In Table 12, the alternative port functionality which has higher priority than standard I/O port functionality is shown.

Table 12 I/O Port 1 - Alternative Functionality

Pin	Function	I/O	Description
PP0	I2C-SCL	I	I2C Serial Clock Line Configured to I2C clock pin if SFR bit CFG1.6 [I2CEN] is set. Weak-High has to be provided by an external pull-up resistor or by the I2C master device.
	Port Pin I/O	I/O	Standard I/O port functionality
PP1	I2C-SDA	I/O	I2C Serial Data Configured to I2C data pin if bit CFG1.6 [I2CEN] is set. Weak-High has to be provided either by the internal pull-up resistor, by an external pull-up resistor or by the I2C master device.
	Port Pin I/O	I/O	Standard I/O port functionality
PP2	TX Data Out	0	RF Encoder Data Output If bit CFG1.4[RFTXPEN] is set to one, the Manchester/BiPhase encoded data is delivered serially to PP2.
	Port Pin I/O	I/O	Standard I/O port functionality / External Wakeup



IO-Port 1 Direction Register

P1DIR IO-Port 1 Direction Register				Offset 91 _H	Wakeup Value UU _H		Reset Value FF _H	
	7				3	2	1	0
		1	Res	1	1	PPD2	PPD1	PPD0
		1		1		wr	wr	wr

Field	Bits	Туре	Description
Res	7:3		Reserved These bits must be set to 11111 _B . Reset: 1F _H
PPD2	2	wr	PP2 I/O Port Direction 0 _B Output 1 _B Input Reset: 1 _H
PPD1	1	wr	PP1 I/O Port Direction 0 _B Output 1 _B Input Reset: 1 _H
PPD0	0	wr	PP0 I/O Port Direction 0 _B Output 1 _B Input Reset: 1 _H



IO-Port 1 Data In Register

P1IN IO-Port 1 Data In Register				Offset Wakeup Val 92 _H 00000XXX				
	7				3	2	1	0
		1	UNUSED	1	1	PPI2	PPI1	PPI0
			_		1	r	r	r

Field	Bits	Туре	Description
UNUSED	7:3	-	UNUSED Reset: 00 _H
PPI2	2	r	PP2 I/O-Port Input Data 0 _B LOW Level 1 _B HIGH Level Reset: X _B
PPI1	1	r	PP1 I/O-Port Input Data 0 _B LOW Level 1 _B HIGH Level Reset: X _B
PPI0	0	r	PP0 I/O-Port Input Data 0 _B LOW Level 1 _B HIGH Level Reset: X _B



IO-Port 1 Data Out Register

P1OUT IO-Port 1 Data Out Register					Offset 90 _H		Wakeup Value	
	10-POR 1 Dat	a Out Registe	:1		90 ^H	UU _H		FF _H
	7	1 1		T	3	2	1	0
		1	Res	1	1	PPO2	PPO1	PPO0
						wr	wr	wr

Field	Bits	Туре	Description
Res	7:3		Reserved These bits must be set to 11111 _B . Reset: 1F _H
PPO2	2	wr	PP2 I/O-Port Output Data / Pulling Resistor When SFR P1DIR.PPD2 is clear (output), then PPO2 defines the output port state. When SFR P1DIR.PPD2 is set (input), then PPO2 controls the input pulling resistor. 0 _B Output low / Tristate 1 _B Output high / Pulling Resistor enabled Reset: 1 _H
PPO1	1	wr	PP1 I/O-Port Output Data / Pulling Resistor When SFR P1DIR.PPD1 is clear (output), then PPO1 defines the output port state. When SFR P1DIR.PPD1 is set (input), then PPO1 controls the input pulling resistor. 0 _B Output low / Tristate 1 _B Output high / Pulling Resistor enabled Reset: 1 _H
PPO0	0	wr	PP0 I/O-Port Output Data / Pulling Resistor When SFR P1DIR.PPD0 is clear (output), then PPO0 defines the output port state. When SFR P1DIR.PPD0 is set (input), then PPO0 controls the input pulling resistor. 0 _B Output low / Tristate 1 _B Output high / Pulling Resistor enabled Reset: 1 _H



IO-Port 1 Sensitivity Register

P1SENS IO-Port 1 Sensitivity Register				Offset V 93 _H		Wakeup Value 00000UUU _B		
	7				3	2	1	0
		UNL	JSED	'		PPS2	PPS1	PPS0
			-			wr	wr	wr

Field	Bits	Type	Description
UNUSED	7:3	-	UNUSED Reset: 00 _H
PPS2	2	wr	PP2 I/O-Port Sensitivity Only applies when SFR P1DIR.PPD2 is set (input) and SFR P1OUT.PPO2 is set (enable pulling). 0 _B Pull-up Resistor 1 _B Pull down Resistor Reset: 0 _H
PPS1	1	wr	PP1 I/O-Port Sensitivity Only applies when SFR P1DIR.PPD1 is set (input) and SFR P1OUT.PPO1 is set (enable pulling). 0 _B Pull-up Resistor 1 _B Pull down Resistor Reset: 0 _H
PPS0	0	wr	PP0 I/O-Port Sensitivity Only applies when SFR P1DIR.PPD0 is set (input) and SFR P1OUT.PPO0 is set (enable pulling). 0 _B Pull-up Resistor 1 _B Pull down Resistor Reset: 0 _H



3.23 I²C Interface

For communication between a host and the SP370 a I2C slave interface is implemented.

- PP1 is used as serial data line (SDA)
- PP0 is used as serial clock line (SCL)
- SP370 responds to I²C Address 6C_H or a general call (if enabled) by addressing slave address 00_H. General call can be enabled by setting SFR bit CFG2.6[I2CGCEN].
- The data transfer rate is specified in "I2C Interface" on Page 168.

Note: In PROGRAMMING mode and DEBUG mode the I²C Interface is handled by the mode handlers located in the ROM automatically. Manual access to those registers is only required if the I²C Interface is utilized in NORMAL mode

Using the slave I²C interface in NORMAL mode

To enable the I2C interface the SFR bit CFG1.6[I2CEN] has to be set. Once the I2C interface has been enabled, the SP370 waits for a start condition to occur.

After the SP370 has received a start condition, the following received 8 bits are compared to the device address. If the address matches, the hardware automatically generates an acknowledge, sets SFR bit I2CS.7[AM] and configures SFR bit I2CS.3[RNW] according to the received address which determines if the I²C access is read or write.

Dependant on SFR bit I2CS.3[RNW] the following two actions has to be performed by the application software:

(SFR bit I2CS.3[RnW] == 0) - Receive I2C-data

- If SFR bit I2CS.0[RBF] is set, one byte has been received and can be read by the application software via
 SFR I2CD
 - Each byte is acknowledged automatically as long as no receive buffer overflow (SFR bit I2CS.5[OV]) occurs.
- If SFR bit I2CS.4[S] is set, a stop condition has occurred; the transmission was closed by the I²C master device.
- If SFR bit I2CS.7[AM] is set, a restart condition has been initiated. In case of a write access (SFR bit I2CS.3[RNW] == 1) a branch to the transmit subroutine has to be performed.


(SFR bit I2CS.3[RnW] == 1) - Transmit I2C-data

- Data to be transmitted has to be written to SFR I2CD.
 SFR bit I2CS.1[TBF] cleared when the data written to SFR I2CD is taken over by the shift-register. If the I²C master device requests more data bytes it creates an acknowledge (SFR bit I2CS.2[RACK]) and subsequently new data may be written to SFR I2CD. If no data is provided, the I²C-interface automatically sets line SCL to low until data is written to SFR I2CD (slave device gains access over the I²C clock line).
- If SFR bit I2CS.4[S] is set, the transmission process has been terminated by the I²C master device and the transmission subroutine can be left.

To control I²C slave interface the following registers are implemented:



I2C Data Register

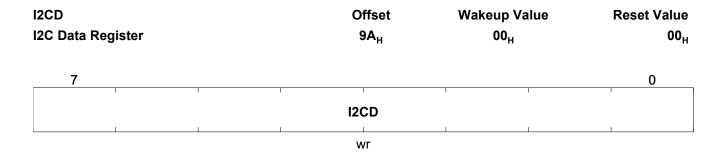

Field	Bits	Туре	Description
I2CD	7:0	wr	I2C Data Register Reset: 00 _H

I2C Status Register

I2CS I2C Status Register			ffset 9B _H	Wakeup Va 00 _H	llue	Reset Value 00 _H		
Г	7	6	5	4	3	2	1	0
	AM	UNUSED	ov	s	RNW	RACK	TBF	RBF
	rc	-	rc	rc	r	r	r	r

Field	Bits	Туре	Description
AM	7	rc	I2C Address Match This bit will be set when the device address or general call matches with received address byte. It is automatically cleared by hardware after I2CS is read. Reset: 0 _H
UNUSED	6	-	UNUSED Reset: 0 _H
OV	5	rc	I2C Overflow This bit will be set when a received byte is not read out before a new byte is received. In this case the old byte value is kept, the new byte is rejected. Overflow also occurs if a new byte is written to register I2CD prior to transmitting the previous byte. In this case the old byte value is overwritten with the new byte. This bit is automatically cleared by hardware after I2CS is read. Reset: 0 _H



Field	Bits	Type	Description
S	4	rc	I2C Stop Condition This bit will be set when a stop condition is detected. It is automatically cleared by hardware after I2CS is read. Reset: 0 _H
RNW	3	r	I2C Read/Write Information RnW reflects the state of the Read/Write bit received within the I2C address byte. 0 _B I2C Write Command 1 _B I2C Read Command Reset: 0 _H
RACK	2	r	I2C Acknowledge 0 _B Not acknowledged 1 _B Acknowledged Reset: 0 _H
TBF	1	r	I2C Transmit Buffer Full Bit is automatically cleared after the data byte is transferred to the shift register. 0 _B Ready to accept new byte 1 _B Byte transmission is pending Reset: 0 _H
RBF	0	r	I2C Receive Buffer Full Bit is automatically cleared by hardware after I2CD is read. 0 _B No new received data 1 _B Received data byte is available Reset: 0 _H



3.23.1 Programming mode Operation

In PROGRAMMING mode the SP370 is only accessible via the I²C Interface.

The device is operating using the internal 12 MHz RC HF Oscillator.

If started up in PROGRAMMING mode (see "Resets and Operating Mode Selection" on Page 19), the SP370 waits until an I²C commands is received.

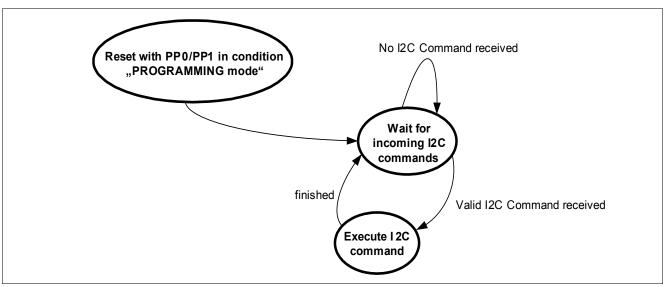


Figure 42 PROGRAMMING Mode State Diagram

Note: To avoid programming failures all PROGRAMMING mode commands are protected by a 16 bit CRC at the end of each command ("16 Bit CRC (Cyclic Redundancy Check) Generator/Checker" on Page 98 shows details about the used CRC polynomial).

The checksum has to be calculated over all bytes in the command excluding the SP370 I²C device address.

PROGRAMMING Mode Commands

- "FLASH Write Line" on Page 126
- "FLASH Erase" on Page 126
- "FLASH Check Erase Status" on Page 127
- "FLASH Read Line" on Page 128
- "Read Status" on Page 129
- "FLASH Check CRC" on Page 130
- "FLASH Set User Configuration Sector Lock" on Page 130
- "Measure Pressure" on Page 131
- "Measure Acceleration" on Page 134
- "Measure Temperature" on Page 136
- "Measure Supply Voltage" on Page 137

Figure 43 shows the nomenclature for the I2C commands.

from master to slave	S start condition	nA	not acknowledge
from slave to master	P stop condition	A	acknowledge
SR repeated start conditionmay be	e replaced by StopStart condition	n	

Figure 43 I²C Legend - PROGRAMMING Mode



3.23.1.1 FLASH Write Line

The FLASH Write Line command writes 32 bytes to the FLASH. The start address has to be a multiple of 20_H. This command should only be used if the FLASH line is fully erased. If an already programmed FLASH line gets overwritten (without being erased before) the resulting data is undefined.

Note: After the Stop condition (P) is received the data is programmed into the FLASH. During the programming time incoming I²C commands are not acknowledged. This programming time is specified in **Table 51**.



Figure 44 FLASH Write Line I2C Command

Table 13 FLASH Write Line Parameters

Parameter	Description
AdrHi	High Byte of FLASH start address
AdrLo	Low Byte of FLASH start address Must be a multiple of 20 _H
Data0 - Data 31	32 Databytes that shall be written to the FLASH line indicated with AdrHi&AdrLo
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

3.23.1.2 FLASH Erase

The FLASH Erase command erases the individual sectors of the FLASH.

Note: After the Stop condition (P) is received the selected FLASH sectors are being erased. During the erase time incoming I²C commands are not acknowledged. This erase time is specified in **Table 51**.

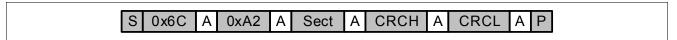


Figure 45 FLASH Erase Command

Table 14 FLASH Erase Parameters

Parameter	Description
Sect	Selects which sectors to erase
	Note: Set individual bits to '1' to erase or to '0' to NOT erase
	Bit7:2 protected FLASH area -don't care Bit1 FLASH User Configuration Sector Bit0 FLASH Code Sector
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

Datasheet 126 Revision 1.1, 2012-08-03



3.23.1.3 FLASH Check Erase Status

This function returns the status of the selected FLASH sector(s).

Note: After the first Stop condition (P) is received the selected FLASH sectors are checked. During this time incoming I²C commands are not acknowledged.

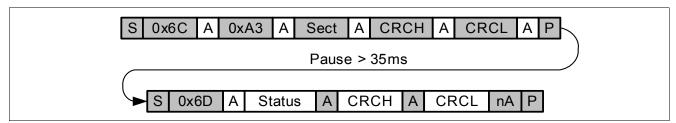


Figure 46 FLASH Check Erase Status Command

Table 15 FLASH Check Erase Parameters

Parameter	Description
Sect	Selects which sectors to erase
	Note: Set individual bits to '1' to check or to '0' to NOT check.
	Bit7:2 protected FLASH area -don't care
	Bit1 FLASH User Configuration Sector
	Bit0 FLASH Code Sector
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

Table 16 FLASH Check Erase Return values

Parameter	Description
Status	Returns the Status of the Check
	Note: '0' means Sector is erased or unchecked '1' means that at least one bit is not erased in the checked Sector.
	Bit7:2 protected FLASH area -don't care
	Bit1 FLASH User Configuration Sector
	Bit0 FLASH Code Sector
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

Datasheet 127 Revision 1.1, 2012-08-03



3.23.1.4 FLASH Read Line

The contents of the FLASH memory can be read out using the following command.

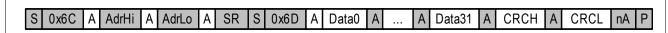


Figure 47 FLASH Read Line Command

Table 17 FLASH Read Line Parameters

Parameter	Description
AdrHi	High Byte of FLASH start address
AdrLo	Low Byte of FLASH start address Must be a multiple of 20 _H

Table 18 FLASH Read Line Return values

Parameter	Description
Data0 - Data 31	32 Databytes Read from FLASH starting at address AdrHi&AdrLo
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

Datasheet 128 Revision 1.1, 2012-08-03



3.23.1.5 Read Status

This function is intended to read out the status of previous I^2C commands. It can be called whenever desired to verify if errors occurred since the last Read Status call.

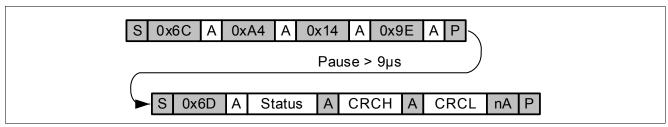


Figure 48 FLASH Read Status Command

Table 19 FLASH Read Status Return values

Parameter	Description
Status	Status byte Bit7:4 CmdCnt Counter indicating the number of executed commands since first detected error
	Note: 0000b = no error occurred since the last call 0001b = 1 command
	1111b = 15 commands or more
	Bit3:2 ErrCntInvCmdL Counter of erroneous events since last call
	Note: 00b = no error 01b = one error 10b = two errors 11b = three or more errors
	Bit1 InvCmdL Flag indicating if there was a invalid command or execution failure since the last call.
	Note: 0b = no failure found 1b = failure found
	Bit0 CRCFail CRC Failure detected since the last call
	Note: 0b = no CRC Error detected since the last call 1b = one or more CRC Error detected since last call
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

Datasheet 129 Revision 1.1, 2012-08-03



3.23.1.6 FLASH Check CRC

This function performs a CRC check on the locked FLASH Code sector. The CRC-Generator/Checker is using the 16 bit CCITT polynomial x16+x12+x5+1 with a preload value of FFFF_H. The resulting CRC checksum (CRCHi, CRCLo) is compared with value stored at the FLASH addresses $577D_H$ and $577E_H$ in the FLASH Code sector. For this function to operate correctly the CRC of the entire code sector, including memory locations otherwise unused by the application software, must be considered.

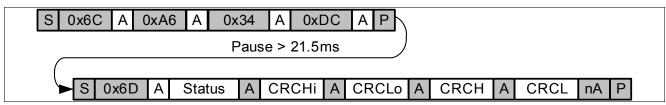


Figure 49 FLASH Check CRC

Table 20 FLASH Check CRC Return values

Parameter	Description
Status	Status Byte Returns the pass/fail information of the FLASH Check CRC
	Note: 00_H = CRC Check passed, no ECC error detected FF_H = CRC Check failed FE_H = CRC Check passed, but ECC error detected (correctable error)
CRCHi	High Byte of calculated CRC16 (not the CRCH Byte stored in the FLASH address 577D _H)
CRCLo	Low Byte of calculated CRC16 (not the CRCL Byte stored in the FLASH address 577E _H)
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

3.23.1.7 FLASH Set User Configuration Sector Lock

This command may be issued in order to lock the User Configuration Sector from any further writing or reading. This command causes Lockbyte 3 to become set. The structure for this command is as follows:

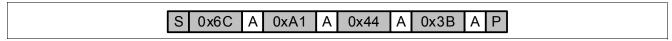


Figure 50 FLASH Set User Configuration Sector Lock



3.23.1.8 Measure Pressure

This function performs a pressure sensor measurement.

The result can either:

- · Compensated for sensitivity, offset and temperature
- Output as raw value without performing the compensation

The function can measure up to 64 samples with a specified sample rate and can average them in order to compensate for noise.

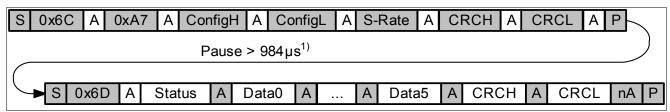


Figure 51 Measure Pressure

Note: 1) When the sample rate is > 0, this time increases



Table 21 Measure Pressure Parameters

Parameter	Description
ConfigH	Config Parameters Bit7:4 Reserved, it should be set to 0 _B Bit3 Selects the thresholds for pressure hysteresis
	Note: 0_B = Internal Configuration: 550 kPa is the threshold from low to high pressure range and 500 kPa is the threshold from high to low pressure range 1_B = Customer Configuration
	Bit2: Automatic Range Selection for pressure Measurement
	Note: 0_B = Manual 1_B = Automatic If RAW measurement is performed, the autorange selection is disabled and the range has to be set manually
	Bit1: Pressure range Selection
	Note: 0_B = Low Pressure Range (550 kPa) 1_B = High Pressure Range (900 kPa) Bit1 is ignored if Bit2 is set to 1_B
	Bit0: Selects the source of raw temperature data for compensation
	Note: 0_B = Perform new raw temperature measurement 1_B = Use raw temperature data from previous measurement
ConfigL	Config Parameters Bit7 Select Pressure Measurement, set to 1 _B Bit6 Defines if the RAW ADC result is compensated
	Note: 0_B = Temperature compensation is performed. Returns Compensated & RAW value 1_B = No compensation is performed. Returns only RAW value
	Bit5:4 Reserved, should set to 00 _B Bit3 Pressure Mode Selection
	Note: O_B = Average Value O_B = Maximum Value
	Bit2:0 Number of ADC measurements that are taken and averaged
	Note: 000b = 1 Samples (default)
	001b = 2 Samples 010b = 4 Samples
	011b = 8 Samples
	100b = 16 Samples
	101b = 32 Samples 110b = 64 Samples
	111b = 64 Samples
S-Rate	Bit7:0 Number of systemclock cycles divided by 8 between two consecutive samples (only applicable if more than one sample is taken and averaged)
	Note: 00_H = No delay (fastest possible samplerate) 01_{H} . $4F_H$ = Not allowed 50_{H} . FF_H = 1/samplerate (samplerate in systemclocks divided by 8)
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16



Table 22 Measure Pressure Return Values

Parameter	Description				
Status	Status Byte Bit7 Reserved Bit6 Reserved Bit5 Reserved Bit4 VMIN warming Note: 0 _B = Battery Supply Voltage above VMIN threshold 1 _B = Battery Supply Voltage below VMIN threshold				
	Bit3 Reserved Bit2 Sensor Fault Wire Bond Check Note: 0 _B = Wire Bond Check successful 1 _B = Wire Bond Check Failed				
	Bit1 Overflow of ADC Result Note: 0_B = No overflow of the ADC Result 1_B = Overflow of the ADC Result				
	Bit0 Underflow of the ADC Result Note: 0_B = No underflow of the ADC Result 1_B = underflow of the ADC Result				
Data0	Compensated Pressure High Byte				
Data1	Compensated Pressure Low Byte				
Data2	RAW Pressure High Byte				
Data3	RAW Pressure Low Byte				
Data4	RAW Temperature High Byte				
Data5	RAW Temperature Low Byte				
CRCH	High Byte of CRC16				
CRCL	Low Byte of CRC16				



3.23.1.9 Measure Acceleration

This function performs an acceleration sensor measurement.

The result can either:

- · Compensated for sensitivity, offset and temperature
- Output as raw value without performing the compensation

The function can measure up to 64 samples with a specified sample rate and can average them in order to compensate for noise.

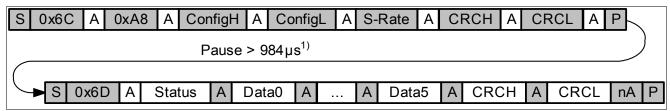


Figure 52 Measure Acceleration

Note: 1) When the sample rate is > 0, this time increases

Table 23 Measure Acceleration Parameters

Parameter	Description				
ConfigH	Config Parameters Bit7:1 Reserved, should be set to 0 _B Bit0 Selects source of raw temperature data for compensation				
	Note: 0b = Perform new raw temperature measurement 1b = Use raw temperature data from previous measurement				
ConfigL	Config Parameters Bit7 Select Acceleration Measurement, set to 0b Bit6 Defines if the RAW ADC result is compensated				
	Note: 0b = Temperature compensation is performed. Returns Compensated & RAW value 1b = No compensation is performed. Returns only RAW value				
	Bit5:4 Reserved, it should be set to 00b Bit3 Measure Mode:				
	Note: 0b = Average value 1b = Maximum value				
	Bit2:0 Number of ADC measurements that are taken and averaged				
	Note: 000b = 1 Samples (default) 001b = 2 Samples 010b = 4 Samples				
	011b = 8 Samples				
	100b = 16 Samples 101b = 32 Samples 110b = 64 Samples				
	111b = 64 Samples				



 Table 23
 Measure Acceleration Parameters (cont'd)

Parameter	Description
S-Rate	Bit7:0 Number of systemclock cycles divided by 8 between two consecutive samples (only applicable if more than one sample is taken and averaged)
	Note: 00_H = No delay (fastest possible samplerate) 01_{H} . $5E_H$ = Not allowed $5F_{H}$. FF_H = 1/samplerate (samplerate in systemclocks divided by 8)
CRCH	High Byte of CRC16
CRCL	Low Byte of CRC16

Table 24 Measure Acceleration Return values

asure Acceleration Return values
Description
Status Byte Bit7 Reserved Bit6 Reserved Bit5 Reserved Bit4 VMIN warning Note: 0b = Battery Supply Voltage above VMIN threshold 1b = Battery Supply Voltage below VMIN threshold
Bit3 Sensor Fault Diagnosis Resistor Note: 0b = Diagnosis Resistor Check successful 1b = Diagnosis Resistor Check failed
Bit2 Sensor Fault Wire Bond Check Note: 0b = Wire Bond Check successful 1b = Wire Bond Check failed
Bit1 Overflow of ADC Result Note: 0b = No overflow of the ADC Result 1b = Overflow of the ADC Result
Bit0 Underflow of ADC Result Note: 0b = No underflow of the ADC Result 1b = Underflow of the ADC Result
Compensated Acceleration High Byte
Compensated Acceleration Low Byte
RAW Acceleration High Byte
RAW Acceleration Low Byte
RAW Temperature High Byte
RAW Temperature Low Byte
High Byte of CRC16
Low Byte of CRC16

Datasheet 135 Revision 1.1, 2012-08-03



3.23.1.10 Measure Temperature

This function performs a temperature measurement. The result is compensated for sensitivity and offset.

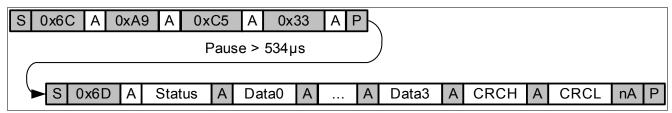


Figure 53 Measure Temperature

Table 25 Measure Temperature Return values

Parameter	Description				
Status	Status Byte				
	Bit7 Reserved				
	Bit6 Reserved				
	Bit5 Reserved				
	Bit4 VMIN warning				
	Note: 0b = Battery Supply Voltage above VMIN threshold				
	1b = Battery Supply Voltage below VMIN threshold				
	Bit3 Reserved				
	Bit2 Reserved				
	Bit1 Overflow of ADC Result				
	Note: 0b = No overflow of the ADC Result				
	1b = Overflow of the ADC Result				
	Bit0 Underflow of ADC Result				
	Note: 0b = No underflow of the ADC Result				
	1b = Underflow of the ADC Result				
Data0	Compensated Temperature High Byte				
Data1	Compensated Temperature Low Byte				
Data2	RAW Temperature High Byte				
Data3	RAW Temperature Low Byte				
CRCH	High Byte of CRC16				
CRCL	Low Byte of CRC16				

Datasheet 136 Revision 1.1, 2012-08-03



3.23.1.11 Measure Supply Voltage

This function performs a battery voltage measurement. The result is compensated for offset.

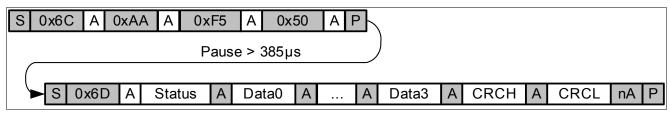


Figure 54 Measure Supply Voltage

Table 26 Measure Supply Voltage Return values

Parameter	Description				
Status	Status Byte				
	Bit7 Reserved				
	Bit6 Reserved				
	Bit5 Reserved				
	Bit4 Reserved				
	Bit3 Reserved				
	Bit2 Reserved				
	Bit1 Overflow of ADC Result				
	Note: 0b = No overflow of the ADC Result				
	1b = Overflow of the ADC Result				
	Bit0 Underflow of ADC Result				
	Note: 0b = No underflow of the ADC Result				
	1b = Underflow of the ADC Result				
Data0	Compensated Battery Voltage High Byte				
Data1	Compensated Battery Voltage Low Byte				
Data2	RAW Battery Voltage High Byte				
Data3	RAW Battery Voltage Low Byte				
CRCH	High Byte of CRC16				
CRCL	Low Byte of CRC16				



3.23.2 DEBUG Mode Operation


Note: DEBUG mode operation is automatically handled by the development environment provided by Infineon.

Manual changes of the SFRs (see Table 27) and/or usage of the Debugger Commands (see "Debugger Commands" on Page 139) by other tools may result in undefined operation.

3.23.2.1 Debug Special Function Register

The SP370 incorporates 8 debug registers that are cleared after Wakeup and Reset.

CPU Debug Compare Register 0 (high)

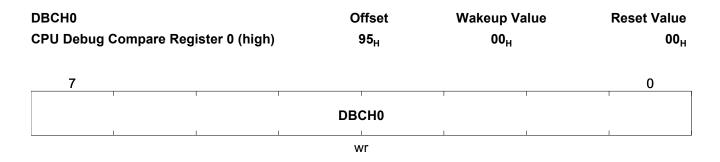

Field	Bits	Туре	Description
DBCH0	7:0	wr	CPU Debug Compare Register 0 (high) Reset: 00 _H

Table 27 DEBUG mode SFRs

Register Short Name	Register Long Name	Offset Address	Wakeup Value	Reset Value
DBCH0	Debug Compare Register 0 (highbyte)	95 _H	00 _H	00 _H
DBCL0	Debug Compare Register 0 (lowbyte)	94 _H	00 _H	00 _H
DBCH1	Debug Compare Register 1 (highbyte)	9D _H	00 _H	00 _H
DBCL1	Debug Compare Register 1(lowbyte)	9C _H	00 _H	00 _H
DBTH0	Debug Target Register 0 (highbyte)	97 _H	00 _H	00 _H
DBTL0	Debug Target Register 0 (lowbyte)	96 _H	00 _H	00 _H
DBTH1	Debug Target Register 1 (highbyte)	9F _H	00 _H	00 _H
DBTL1	Debug Target Register 1 (lowbyte)	9E _H	00 _H	00 _H

Datasheet 138 Revision 1.1, 2012-08-03



3.23.2.2 Debugging Functionality

During program execution the Program Counter (PC) of the microcontroller is continuously compared with the contents of the DBCHx + DBCLx registers.

In case of a match the PC is automatically set to the address given in DBTHx + DBTLx to handle exceptions (e.g. breakpoints).

The debugger consists of a debug handler and a single stepper. The debug handler processes the I2C communication and debug command interpretation. The debug commands SetSFR, ReadSFR, SetMemory, ReadMemory and SetPC, ReadPC are executed directly by the debug handler. The debug commands Single Step, Run Interruptible and Run to next Breakpoint are executed by the single stepper.

3.23.2.3 Debugger Commands

The following figure shows the I²C nomenclature for the commands.

from master to slave	S start condition	nA	not acknowledge
from slave to master	P stop condition	Α	acknowledge
SR repeated start conditionmay b	e replaced by StopStart conditio	n	

Figure 55 I²C Legend - DEBUG Mode

3.23.2.3.1 SetSFR - Set an SFR to a User-defined Value



Figure 56 DEBUG SetSFR Command

Addr: represents the address of the SFR to be set.

Data: this value has to be put into the SFR address specified by Addr.

3.23.2.3.2 ReadSFR - Read the Value of One SFR



Figure 57 DEBUG ReadSFR Command

Addr: represents the address of the SFR to be read.

Data: this value was read on the SFR address specified by Addr.



3.23.2.3.3 SetMemory - Set one Byte in RAM to a User-defined Value

S 0x6C A 0x06 A Adr A Data A P

Figure 58 DEBUG SetMemory Command

Addr: represents the address of the internal data memory to be set.

Data: this value that has to be written into the internal data memory byte specified by Addr.

3.23.2.3.4 ReadMemory - Read One Byte of the RAM

S 0x6C A 0x09 A Adr A P Pause > 9µs S 0x6D A Data nA P

Figure 59 DEBUG ReadMemory Command

Addr: represents the address of the Internal data memory location to be read.

Data: this value was read from the internal data memory address specified by Addr.

3.23.2.3.5 SetPC - Set the Program Counter to a user-defined value

S 0x6C A 0x0C A AdrHi A AdrLo A P

Figure 60 DEBUG SetPC Command

AdrHi: MSB of the new Program Counter. AdrLo: LSB of the new Program Counter.

3.23.2.3.6 ReadPC - Read the Program Counter

S 0x6C A 0x0F A P Pause > 9µs S 0x6D A PCHi A PCLo nA P

Figure 61 DEBUG ReadPC Command

PCHi: MSB of the Program Counter. PCLo: LSB of the Program Counter.

3.23.2.3.7 SingleStep

Execute one Opcode Instruction and return to the debug handler.

S 0x6C A 0x12 A P

Figure 62 DEBUG SingleStep Command



3.23.2.3.8 Run Interruptible

The function executes consecutive single steps until any I²C command is received on the bus. Compared to running the program in real-time this function has a slower execution speed by a factor of roughly 1/50, thus it cannot be used for debugging time critical application code.

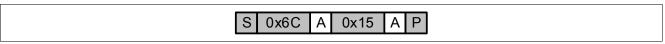


Figure 63 DEBUG Run Interruptible Command

3.23.2.3.9 Run to Next Breakpoint

The debugged program is executed without single steps in real-time. This enables debugging of runtime critical functions like RF transmission or LF data receiving. The execution is stopped when the PC matches one of the two hardware breakpoints. The second Breakpoint (Register 1) can be set if required using the SetSFR command. *Note: If none of these breakpoints is hit the communication to the debugger is lost.*

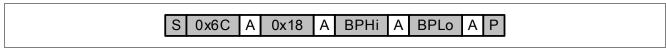


Figure 64 DEBUG Run to Next Breakpoint Command

BPHi: MSByte of the Breakpoint Register 0. BPLo: LSByte of the Breakpoint Register 0.



Specification

4 Specification

4.1 Test Board

The parameters described in **Table 37 "Supply Currents" on Page 153** and **Table 38 "RF Transmitter" on Page 155** were obtained using the SP370 Testboard described in this chapter. The environment of the customer application have not been taken into account.

4.1.1 SP370 Test Board Schematics

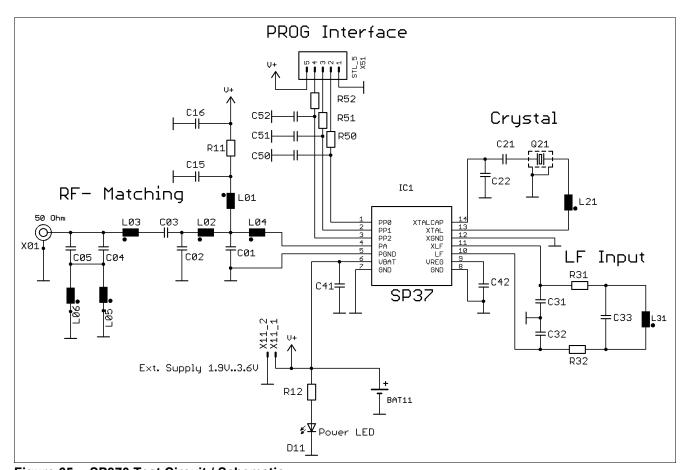


Figure 65 SP370 Test Circuit / Schematic



Specification

4.1.2 SP370 Test Board Layout

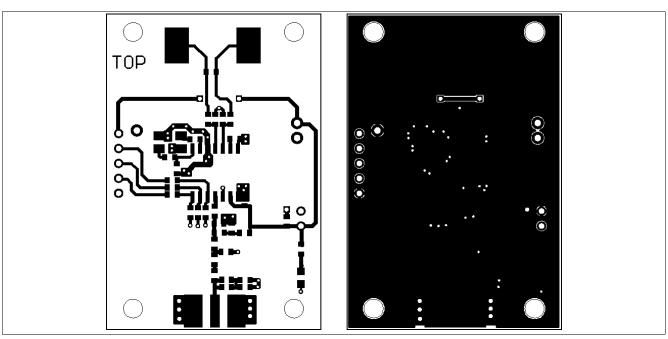


Figure 66 SP370 Test Board Layout

4.1.3 SP370 Test Board Placement

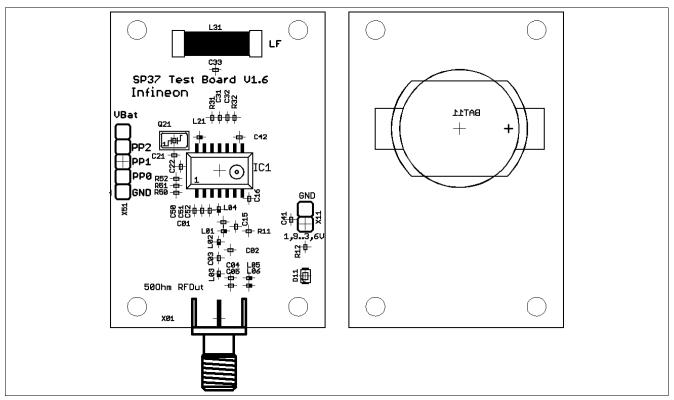


Figure 67 SP370 Test Board Placement



Specification

4.1.4 SP370 Test Board Bill of Material

Table 28 SP370 Test Board Bill of Material

Part	Value					
C41	100 nF					
C42	100 nF, ESR max. 15 Ohm					
IC1	SP370	IIIax. 13 OIIII				
R11, R50, R51, R52,	0R Jumper	·1- \				
X11	2pin Header (,				
X51	5pin Header (,				
X01	SMA Connect	tor (female)				
	315 MHz		434 MHz			
	PLow	PMed/High	PLow	PMed/High		
C01	5.6 pF	4.7 pF	2.7 pF	2.7 pF		
C02	n.p.	n.p.	n.p.	n.p.		
C03	51 nH ¹⁾	39 pF	0 Ohm	0 Ohm		
C04	12 pF	8.2 pF	2.2 nH ¹⁾	2.2 nH ¹⁾		
C05	2.7 pF	1.5 pF	n.p.	n.p.		
C15	100 pF	100 pF	100 pF	47 pF		
L01	43 nH ¹⁾	47 nH ¹⁾	22 nH ¹⁾	30 nH ¹⁾		
L02	27 pF	47 nH ¹⁾	30 nH ¹⁾	18 nH ¹⁾		
L03	0 Ohm	0 Ohm	33 pF	27 pF		
L04	18 nH ¹⁾	18 nH ¹⁾	12 nH ¹⁾	18 nH ¹⁾		
L05	0 Ohm	0 Ohm	5.6 pF	5.6 pF		
L06	n.p.	n.p.	n.p.	n.p.		
Q21	NDK NX5032SD 19.6875 MHz EXS00A-02825 NDK NX5032SD 18.0800 MHz EXS00A-03552		2			
C21	15 pF		15 pF			
C22	4.7 pF		7.5 pF			
L21	82 nH 82 nH					
BAT11	Battery Clip 2032					
C31, C32, C33, C50, C51, C52, L31, R12, R31, R32	Not placed					

¹⁾ Coilcraft 0603CS



4.2 Absolute Maximum Ratings

Table 29 Absolute Maximum Ratings

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	1.1 1.2 1.3 1.4 1.5 1.6 1.7 1.8 1.9 1.10 1.11 1.12
		Min.	Тур.	Max.				
Max. Supply Voltage	V_{batmax}	-0.3	_	+4.0	V		-	1.1
Operating Temperature	T_{j}	-40	_	+150	°C	Max 24 hrs accumulated over lifetime between 125°C and 150°C. Device powered V _{bat} =3.6 V		1.2
		-55		-40	°C	Temperature measurement, operation of interval timer	•	1.3
Operating temperature (transient)	T_{trans}	+150	_	+175	°C	Max 3 min., 10 times over lifetime device powered V _{bat} =3.6 V	•	1.4
Storage temperature	$T_{ m storage}$	-40°C	_	+150	°C	Max 1000 hours accumulated over lifetime between 125°C and 150°C. Device not powered		1.5
ESD robustness HBM	$V_{\mathrm{ESD,HBM}}$		_	5000	V	All pins According to EIA/JESD22-A114-B		1.6
ESD robustness CDM	$V_{\mathrm{ESD,CDM}}$		_	500	V	All pins (According to ESDA STM 5.3.1)		1.7
			-	750	V	Corner pins (According to ESDA STM 5.3.1)		1.8
Latch up	I_{LU}	-100	_	+100	mA	AEC-Q100 (transient current)		1.9
Input voltage	$V_{In,Digital}$	-0,3	_	V _{bat} + 0,3	V	Pin PP0, PP1, PP2		1.10
	$V_{In,LF}$	-0,3	_	+0,3	V	Pin LF, XLF	•	1.11
XTAL Input Voltage	$V_{In,XTAL}$	-0,3	_	V _{reg} + 0,3	V	Pin XTAL		1.12
Input and Output current (digital I/O pins)	$I_{IO,Digital}$	-	_	4	mA	Pin PP0, PP1, PP2	•	1.13
Input current (LF pins)	$I_{In,LF}$	_	_	4	mA	Pin LF, XLF	-	1.14
Input Pressure range	p_{In}	0	_	2000	kPa	_	-	1.15
,		2000	_	2500	kPa	Max. 2 sec. 5 times over lifetime		1.16

SP370 Tire Pressure Monitoring Sensor

Specification

Table 29 Absolute Maximum Ratings

Parameter	Symbol		Values			Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Static acceleration	$a_{\rm static}$		_	3000	g	_	-	1.17
Mechanical shock	$a_{ m shock}$		-	4000	g	Level: 4000 g peak Pulse duration: 0.3ms Waveform: Half sine Power: 3.0 V 5 shocks each dir. +/- x,y,z-axis (MIL-STD 883E)	•	1.18

Attention: Test ■ means that the parameter is not subject to production test.

It was verified by design/characterization.

Attention: Stresses above the max. values listed here may cause permanent damage to the device.

Exposure to absolute maximum rating conditions for extended periods may affect device reliability. Maximum ratings are absolute ratings; exceeding only one of these values may cause irreversible damage to the integrated circuit.



4.3 Operating Range

The following operating conditions must not be exceeded in order to ensure correct operation of the SP370. All parameters specified in the following sections refer to these operating conditions unless otherwise mentioned.

Table 30 Operating Range

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Supply Voltage	V _{bat1}	2.1	_	3.6	V	Measurement of pressure, acceleration or temperature. Operation of LF receiver		2.1
	V_{bat2}	1.9	_	3.6	V	Battery measurements, microcontroller, RF transmitter, FLASH reading	•	2.2
	V_{bat3}	2.5	-	3.6	V	FLASH programming/erasing		2.5
Ambient Temperature	$T_{\sf Operating}$	-40	_	125	°C	Normal Operation	-	2.11
	T_{Flash}	0	_	60	°C	FLASH programming/erasing		2.12
z-axis acceleration	$a_{ m Operating}$		-	1600	g	Exceeding this value will result in a higher pressure error than specified in Table 31	•	2.13



4.4 Characteristics

Product characteristics involve the spread of values within the specified voltage and ambient temperature range.

Supply voltage: Vbat = 1.9 V ... 3.6 V, unless otherwise specified

Ambient temperature: Tamb = -40°C ... +125°C, unless otherwise specified



4.4.1 Pressure Sensor (900kPa variant)

Table 31 Pressure Sensor (100 to 900kPa Automatic Pressure Range)¹⁾²⁾³⁾, V_{bat} = 2.1 V...3.6 V

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Input Pressure Range	P_{in}	100	_	500	kPa	T= -40125°C		3.0
Measurement Error	p_{Error}	-7	_	+7	kPa	T= 050°C		3.1
		-9	_	+9	kPa	T= 5070°C		3.2
		-17.5	_	+17.5	kPa	T= -400°C T= 70125°C		3.3
Input Pressure Range	p_{in}	500	_	900	kPa	T= -40125°C		3.4
Measurement Error	p_{Error}	-14	_	+14	kPa	T= 050°C		3.5
		-18		+18		T= 5070°C		3.6
		-35	_	+35	kPa	T= -400°C T= 70125°C		3.7
RAW LSB resolution	$p_{LSB,RAW}$	1.17	_	1.6	kPa	T= -40°C		3.8
		1.36	_	1.94	kPa	T= 25°C		3.9
		1.63	_	2.26	kPa	T= 125°C		3.10
Pressure Measurement Stability Range	p_{sta}	-2.73		+2.73	kPa	Minimum 95% of the measurements		3.11

- 1) This table is based on the average of 2 ADC samples
- 2) This table is based on default hysteresis (Meas_Pressure() ROM library function SensorConfig parameter bit HYST=0)
- 3) 900kPa Automatic Pressure Range is selected when Meas_Pressure() ROM library function SensorConfig parameter bit ARANGE=1

Table 32 Pressure Sensor (100 to 550kPa Manual Pressure Range)¹⁾²⁾, V_{bat} = 2.1 V...3.6 V

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Input Pressure Range	P_{in}	100	_	500	kPa	T= -40125°C		3.12
Measurement Error	p_{Error}	-7	_	+7	kPa	T= 050°C		3.13
		-9	_	+9	kPa	T= 5070°C		3.14
		-17.5	_	+17.5	kPa	T= -400°C T= 70125°C		3.15
Input Pressure Range	P_{in}	500	_	550	kPa	T= -40125°C		3.16
Measurement Error	p_{Error}	-14	_	+14	kPa	T= 050°C		3.17
		-18	_	+18	kPa	T= 5070°C		3.18
		-35	_	+35	kPa	T= -400°C T= 70125°C		3.19



Table 32 Pressure Sensor (100 to 550kPa Manual Pressure Range)¹⁾²⁾, V_{bat} = 2.1 V...3.6 V (cont'd)

Parameter	Symbol		Values			Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
RAW LSB resolution	$p_{LSB,RAW}$	0.59	_	0.8	kPa	T= -40°C		3.20
		0.68	_	0.92	kPa	T= 25°C	•	3.21
		0.81	_	1.13	kPa	T= 125°C	•	3.22
Pressure Measurement Stability Range	p_{sta}	-1.37		+1.37	kPa	Minimum 95% of the measurements	•	3.23

¹⁾ This table is based on the average of 2 ADC samples

Table 33 Pressure Sensor (100 to 900kPa Manual Pressure Range)¹⁾²⁾, V_{bat} = 2.1 V...3.6 V

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Input Pressure Range	P_{in}	100	_	900	kPa	T= -40125°C		3.24
Measurement Error	p_{Error}	-14	_	+14	kPa	T= 050°C		3.25
		-18	_	+18	kPa	T= 5070°C		3.26
		-35	_	+35	kPa	T= -400°C T= 70125°C		3.27
RAW LSB resolution	$p_{LSB,RAW}$	1.17	_	1.6	kPa	T= -40°C		3.28
		1.36	_	1.94	kPa	T= 25°C		3.29
		1.63	_	2.26	kPa	T= 125°C		3.30
Pressure Measurement Stability Range	p_{sta}	-2.73		+2.73	kPa	Minimum 95% of the measurements		3.31

¹⁾ This table is based on the average of 2 ADC samples

^{2) 100-550}kPa Manual Pressure Range is selected when Meas_Pressure() ROM library function SensorConfig parameter bits ARANGE=0 and PRANGE=0

^{2) 100-900}kPa Manual Pressure Range is selected when Meas_Pressure() ROM library function SensorConfig parameter bits ARANGE=0 and PRANGE=1



4.4.2 z-axis Acceleration Sensor

Table 34 z-axis Acceleration Sensor¹⁾, V_{bat} = 2.1 V...3.6 V

Parameter	Symbol		Values	i	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Input Acceleration Range	a_{in}	-115	-	115	g	T= -40125°C		5.1
Sensitivity Error	$a_{Sensitivity}$	-18.75	_	+18.75	%	T= -4090°C		5.2
		-24	_	+24	%	T= 90125°C		5.3
Offset Error	a_{Offset}	-6	_	+6	g	T= -2070°C		5.4
		-8.5	_	+8.5	g	T= -4020°C T= 7090°C		5.5
		-12	_	+12	g	T= 90125°C		5.6
RAW LSB resolution	$a_{LSB,RAW}$	0.46	_	0.82	g	T= -40°C	-	5.14
		0.53	_	0.93	g	T= 25°C	-	5.15
		0.62	_	1.14	g	T= 125°C	-	5.16
Acceleration Measurement Stability Range	$a_{\rm random}$	-1.6	_	+1.6	g	Minimum 95% of the measurements		5.17
Accelerometer Quality Factor	Q_{acc}	-	_	600	-		•	5.18

¹⁾ This table is based on the average of 2 ADC samples



4.4.3 Temperature Sensor

Table 35 Temperature Sensor¹⁾, $V_{bat} = 2.1 V...3.6 V$

Parameter	Symbol		Values		Values	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.					
Measurement Error	T_{Error}	-3	_	+3	°C	T= -2070°C		6.1	
		-5	_	+5	°C	T= -4020°C T= 70125°C		6.2	
Temperature Measurement Stability Range	T_{sta}	-1		+1	°C	Minimum 95% of the measurements	•	6.3	

¹⁾ This table is based on the average of 2 ADC samples

Attention: Test ■ means that the parameter is not subject to production test. It was verified by design/characterization.

4.4.4 Battery Sensor

Table 36 Battery Sensor¹⁾, V_{bat} = 2.1 V...3.6 V

Parameter	Symbol		Values			Note / Test Condition	Test	Number
		Min.	Тур.	Max.	=			
Measurement Error	V_{Error}	-100	_	+100	mV	_		7.1

¹⁾ This table is based on the average of 2 ADC samples



4.4.5 Supply Currents

Table 37 Supply Currents

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Supply Current RF Transmission ¹⁾ Modulation: FSK SFR DIVIC[1:0]: 11 _B	I _{P Low,1.9V,-40}	_	_	8	mA	V_{bat} = 1.9 V, T= -40°C SFR RFTX.PAOP = 00_b $P_{out} \sim 1$ dBm $Z_{load,434MHz} \sim 500$ Ohm $Z_{load,315MHz} \sim 650$ Ohm	•	8.1
$I_{P \; Low, 3}$	I _{P Low,3.0V,-40}	_	_	9	mA	V_{bat} = 3.0 V, T= -40°C SFR RFTX.PAOP = 00_{b} $P_{out} \sim 5$ dBm $Z_{load,434MHz} \sim 500$ Ohm $Z_{load,315MHz} \sim 650$ Ohm	•	8.3
	I _{P Low,3.0V,25}	_	_	10	mA	V_{bat} = 3.0 V, T= 25°C SFR RFTX.PAOP = 00_b P_{out} ~ 5 dBm $Z_{load,434MHz}$ ~ 500 Ohm $Z_{load,315MHz}$ ~ 650 Ohm		8.4
	$I_{\text{P Low},3.0\text{V},125}$ 12 mA V_{bat} = 3.0 V, T= 128 SFR RFTX.PAOP P_{out} ~ 5 dBm $Z_{\text{load},434\text{MHz}}$ ~ 500 C	V_{bat} = 3.0 V, T= 125°C SFR RFTX.PAOP = 00_b P_{out} ~ 5 dBm $Z_{load,434MHz}$ ~ 500 Ohm $Z_{load,315MHz}$ ~ 650 Ohm	•	8.5				
	I _{P Med,1.9V,-40}	_	_	10	mA	V_{bat} = 1.9 V, T= -40°C SFR RFTX.PAOP = 01 _b $P_{out} \sim 4$ dBm $Z_{load,434MHz} \sim 300$ Ohm $Z_{load,315MHz} \sim 450$ Ohm	•	8.6
	I _{P Med,3.0V,-40}	_	_	12	mA	V_{bat} = 3.0 V, T= -40°C SFR RFTX.PAOP = 01 _b $P_{out} \sim 8$ dBm $Z_{load,434MHz} \sim 300$ Ohm $Z_{load,315MHz} \sim 450$ Ohm	-	8.8
	$I_{ m P\ Med,3.0V,25}$	_	_	14	mA	V_{bat} = 3.0 V, T= 25°C SFR RFTX.PAOP = 01 _b P_{out} ~ 8 dBm $Z_{load,434MHz}$ ~ 300 Ohm $Z_{load,315MHz}$ ~ 450 Ohm		8.9
	$I_{ m P}$ Med,3.0V,125	_	_	15	mA	V_{bat} = 3.0 V, T= 125°C SFR RFTX.PAOP = 01 _b P_{out} ~ 8 dBm $Z_{load,434MHz}$ ~ 300 Ohm $Z_{load,315MHz}$ ~ 450 Ohm		8.10



Table 37 Supply Currents (cont'd)

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
POWER DOWN	$I_{\rm PD,3.0V,25^{\circ}C}$	_	_	700	nA	V _{bat} = 3.0 V, T= 25°C		8.13
current	$I_{\rm PD,3.0V,90^{\circ}C}$	_	_	3.5	μΑ	V _{bat} = 3.0 V, T= 90°C	-	8.14
RAM lower memory block powered down SFR CFG2.PDLMB:1 _b	$I_{\rm PD,3.0V,125^{\circ}C}$	_	_	19.5	μΑ	V _{bat} = 3.0 V, T= 125°C		8.15
POWER DOWN current	$I_{\rm PD_RAMen,3.0}$ v,25°C	_	-	750	nA	V _{bat} = 3.0 V, T= 25°C		8.16
RAM lower memory block kept powered	$I_{\rm PD_RAMen,3.0}$ v,90°C	_	-	3.9	μΑ	V _{bat} = 3.0 V, T= 90°C		8.17
SFR CFG2.PDLMB:0 _b THERMAL	$I_{\rm PD_RAMen,3.0}$ v,125°C	_	-	21	μΑ	V _{bat} = 3.0 V, T= 125°C		8.18
THERMAL SHUTDOWN current RAM lower memory block powered down SFR CFG2.PDLMB:1 _b	$I_{TS,3.0V,125^\circC}$	_	_	170	μΑ	V _{bat} = 3.0 V, T= 125°C		8.19
THERMAL SHUTDOWN current RAM lower memory block powered down SFR CFG2.PDLMB:1 _B	I _{TS_RAMen} , 3.0V, 125°C	_	_	175	μА	V _{bat} = 3.0 V, T= 125°C	•	8.20
IDLE current	$I_{\rm Idle,3.0V,25^{\circ}C}$	_	_	1	mA	V _{bat} = 3.0 V, T= 25°C		8.21
SFR DIVIC: 00 _B Timer0 active	I _{Idle,3.0V,125°C}	_	_	1.1	mA	V _{bat} = 3.0 V, T= 125°C	-	8.22
RUN current	$I_{\mathrm{Run,3.0V,25^{\circ}C}}$	_	_	2.1	mA	V _{bat} = 3.0 V, T= 25°C		8.23
(Peripheral units in active state) SFR DIVIC: 00 _B	$I_{\mathrm{Run,3.0V,125^{\circ}}}$ C	_	_	2.4	mA	V _{bat} = 3.0 V, T= 125°C	-	8.24
RUN current (PLL	$I_{\mathrm{PLL,3.0V,25^{\circ}C}}$	-	_	8	mA	V _{bat} = 3.0 V, T= 25°C		8.25
enabled) SFR DIVIC: 11 _B	I _{PLL,3.0V,125°}	_	_	9	mA	V _{bat} = 3.0 V, T= 125°C		8.26
LF Receiver current SFR bits LFBBM: 00 _B	$I_{LF_Add,AFE}$			4	μΑ		•	8.27
LF Receiver current ²⁾ SFR bits LFBBM: 01 _B	$I_{\rm LF_Add,I}$			6.1	μΑ	V _{bat} = 3.0 V, T= -4090°C	•	8.28
	$I_{LF_Add,f,}$			7.8	μΑ	V _{bat} = 3.0 V, T=-40125°C	•	8.29

¹⁾ These parameters were obtained using the SP370 Test Board. Tolerances of the passive elements (matching network) not taken into account. The environment of the customer application have not been taken into account

²⁾ This additional LF current is valid for all LF baseband conditions. The difference in current consumption between decoding and not decoding is negligible.



4.4.6 RF Transmitter

Table 38 RF Transmitter¹⁾

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Transmit Frequency	$f_{Tx,315MHz}$	300		320	MHz	_	•	9.1
	$f_{Tx,433.92MHz}$	433		450	MHz	_	-	9.2
Output Power transformed into 50 Ohm	P _{low,} 433.92 MHz	4	5	6	dBm	V_{bat} = 3.0 V, T= 25°C SFR RFTX.PAOP = 00_b Zload~ 500 Ohm		9.5
	P _{med,} 433.92 MHz	7	8	9	dBm	V_{bat} = 3.0 V, T= 25°C SFR RFTX.PAOP = 01 _b Zload~ 300 Ohm		9.6
	$P_{low,315MHz}$	4	5	6	dBm	V_{bat} = 3.0 V, T= 25°C SFR RFTX.PAOP = 00_b Zload~ 650 Ohm		9.9
	$P_{ m med, 315 MHz}$	7	8	9	dBm	V_{bat} = 3.0 V, T= 25°C SFR RFTX.PAOP = 01 _b Zload~ 450 Ohm		9.10
Output Power change over temperature	dP _{-40°C}	0	_	+1	dB	V _{bat} = 3.0 V, T= -40°C		9.13
Output Power change over temperature	$dP_{125^{\circ}\mathrm{C}}$	0	_	-1.5	dB	V _{bat} = 3.0 V, T= 125°C	•	9.14
Output Power change over supply voltage	$dP_{1.9V}$	0	_	-8	dB	V _{bat} = 1.9 V, T= 25°C		9.15
Output Power change over supply voltage	$dP_{2.5V}$	0	_	-2.8	dB	V _{bat} = 2.5 V, T= 25°C	•	9.17
Output Power change over supply voltage	$dP_{3.6V}$	0	_	+2.8	dB	V _{bat} = 3.6 V, T= 25°C		9.18
Datarate	DR _{RF}	_	_	20	kBit/s	_		9.19
Datarate accuracy	dDR_{RF}	-	-	+/-1	%	f _{crystal} = 18.080/19.6875MHz DR _{RF} = 9600Bit/s SFR TMOD.T1CLK = 01 _b SFR TMOD.TCLKM = 1 _b		9.20
Spurious emissions (incl. harmonics) @ f _{Tx} = 315 MHz	$P_{\rm spurii,FCC}$	_	_	-28	dBc	FCC 15.231a/e 2nd - 10th harmonic other spurious <1GHz	•	9.21



Table 38 RF Transmitter¹⁾ (cont'd)

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Spurious emissions (incl. harmonics) @ f _{Tx} = 433.92 MHz	$P_{ m spurii,ETSI,RB}$	_	_	-54	dBm	ETSI EN300220 BW = 10 kHz, 47- 74 MHz, 87.5 MHz- 118 MHz, 174- 230 MHz, 470- 862 MHz	•	9.22
Spurious emissions (incl. harmonics) @ f _{Tx} = 433.92 MHz	$P_{ m spurii,ETSI,<1}$ G	_	_	-36	dBm	ETSI EN300220 BW = 10 kHz other <1 GHz		9.23
Spurious emissions (incl. harmonics) @ f _{Tx} = 433.92 MHz	$P_{ m spurii,ETSI,>1}$ G	_	_	-30	dBm	ETSI EN300220 BW = 10 kHz >1 GHz		9.24
Phase Noise	$P_{\mathrm{PN, 10kHz}}$	_	_	-80	dBc/H z	fCarrier +/- 10 kHz	•	9.25
	$P_{\mathrm{PN,100kHz}}$	_	_	-80	dBc/H z	fCarrier +/- 100 kHz	•	9.26
$P_{PN,11}$	$P_{PN, 1 MHz}$	_	_	-90	dBc/H z	fCarrier +/- 1 MHz	•	9.27
	$P_{\mathrm{PN, 10~MHz}}$	_	_	-120	dBc/H z	fCarrier +/- 10 MHz	-	9.28

¹⁾ The parameter in this table were obtained using the SP370 Test Board. Tolerances of the passive elements (matching network) not taken into account. The environment of the customer application have not been taken into account.



4.4.7 LF Receiver

Table 39 LF Receiver, $V_{bat} = 2.1 V...3.6 V$

Parameter	Symbol		Values			Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Differential Input Capacitance	$C_{Input,LF}$	8	_	12	pF	@ 125 kHz		10.1
Differential Input Resistance DC	$R_{Input,LF}$	1M			Ohm	AGC disabled		10.2



LF Receiver Telegram

```
// Basic LF Telegram Configuration
LFRX0 = 0x8C;  // AGC Threshold, LF Antenna Voltage Divider Factor
LFRX1 = 0x20;  // AGC Decay Time Constant, Autocalibration Time
LFRX2 = 0x77;  // AGC Attack Time Constant
LFCDM0 = 0x1C;  // Enable Autocalibration
LFRXC = 0x14;  // Enable AGC, LF Baseband on while LFRx enabled, Enable LFRx
```

Figure 68 LF Receiver Special Function Register Settings for Telegram Mode

Table 40 LF Receiver Telegram, $V_{bat} = 2.1 \text{ V...} 3.6 \text{ V}$, $f_{LF} = 120 \text{ kHz...} 130 \text{ kHz}$

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Datarate	DR_{LF}	_	3.9	_	kBit/s	_		10.6
Datarate error	$DR_{error,c}$	-2.5		2.5	%	Using "LFBaudrateCalibration " ROM Library function once for initial calibration in production @ Vbat= 2.5 V, T= 25°C		10.8
Preamble length	$t_{\sf preamble}$	2	4	_	ms	DR_{LF} = 3.9 kbit/s, t_{bit} = 1/ DR_{LF}	•	10.9
Settling time	t _{settling}	2.4	3.5	5.8	ms	LFRX enabled by LFOOT ¹⁾ Min/Max tolerances from 2 kHz RC Oscillator applied SFR LFRX1.ACT = 10 _b SFR bit ENOOTIM = 1 _b		10.10
LF Telegram Sensitivity	$LF_{\mathrm{tele,det,f}}$			2.5	mVpp	Refer to test case T-1.2		10.13

¹⁾ If LF Receiver (LFRX) is enabled by CPU via SFR LFRXC.ENLFRX or autocalibration cycle is started by SFR LFRXC.CDRECAL then up to one additional 2 kHz RC oscillator period must be added to the given times

Attention: Test • means that the parameter is not subject to production test. It was verified by design/characterization.

Table 41 LF Receiver Telegram, V_{bat} = 2.1 V...3.6 V, T = -20 °C...90 °C, f_{LF} = 120 kHz...130 kHz

Parameter	Symbol	Values		Unit	Note / Test Condition	Test	Number	
		Min.	Тур.	Max.				
LF Telegram Sensitivity	$LF_{\rm tele,det,l}$			1.3	mVpp	Refer to test case T-1.2		10.19



LF Receiver Carrier Detector

```
// Defines
#define CDETT_Levels_Base_Address 0x580E
#define CDETT Level 1 // Configure Carrier Detector Threshold Level (values 1, 2 or 3)
#define CDFLT_Times_Base_Address 0x580B
#define CDFLT_Time 1 // Configure Carrier Detector Filter Time (values 1, 2 or 3)
// Basic LF Carrier Detection Configuration, Sensitivity Settings, Filter Settings
LFCDM0 = 0x1C; // Carrier Detector Dynamic Treshold, Enable Autocalibration & Freeze Hold
// Load Carrier Detector Filter Time from Flash
LFCDFLT = CBYTE[CDFLT_Times_Base_Address-(CDFLT_Time-3)];
// Load Carrier Detector Threshold from Flash
LFRX0 = CBYTE[CDETT Levels Base Address-(CDETT Level-3)];
               // AGC Decay Time Constant, Autocalibration Time
// AGC Attack Time Constant
LFRX1 = 0x10;
LFRX2 = 0x77;
LFRXC = 0 \times 04;
               // Enable AGC, LF Baseband off, Enable LFRx
```

Figure 69 LF Receiver Special Function Register Settings for Carrier Detection

Table 42 LF Receiver Carrier Detection, V_{bat} = 2.1 V...3.6 V, f_{LF} = 120 kHz...130 kHz

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Auto-Calibration time	t _{calibration,1}	3.8	5.5	9.1	ms	LFRX enabled by LFOOT ¹⁾ Min/Max tolerances from 2 kHz RC Oscillator applied SFR LFRX1.ACT = 01 _b SFR bit ENOOTIM = 1 _b	-	10.20
Maximum Amplitude for Carrier Detector Filter	$S_{max,f}$	30			mVpp	Refer to test case T-1.1		10.22
-	$S_{nodet,1,f}$	0.33			mVpp	Refer to test case T-1.2		10.23
	$S_{\mathrm{det,1,f}}$			3.35	mVpp			10.24
LF Carrier Detect	$S_{nodet,2,f}$	2			mVpp	Carrier Detector Filter		10.25
Threshold 2 ²⁾	$S_{\rm det,2,f}$			11	mVpp	Time 1 Refer to test case T-1.2	-	10.26
LF Carrier Detect	$S_{nodet,3,f}$	10			mVpp	Refer to test case T-1.2		10.27
Threshold 3 ²⁾	$S_{det,3,f}$			50	mVpp			10.28
Carrier Detector Filter	$t_{\mathrm{CDnodet,1}}$	62			μs	Refer to test case T-1.1		10.29
Time 1	$t_{\mathrm{CDdet,1}}$			240	μs			10.30
Carrier Detector Filter	$t_{\rm CDnodet,2}$	500			μs	Refer to test case T-1.1	-	10.31
Time 2	$t_{\mathrm{CDdet,2}}$			800	μs			10.32
Carrier Detector Filter	$t_{\text{CDnodet,3}}$	800			μs	Refer to test case T-1.1		10.33
	$t_{CDdet,3}$			1150	μs			10.34



Table 42 LF Receiver Carrier Detection, V_{bat} = 2.1 V...3.6 V, f_{LF} = 120 kHz...130 kHz (cont'd)

Parameter	Symbol	Values		Unit	Note / Test Condition	Test	Number	
		Min.	Тур.	Max.				
Carrier Detection	t _{CDCFH,125}	2			s	T=125°C	•	10.35
Freeze Hold Time	t _{CDCFH,25}	300			s	T=25°C	•	10.36

¹⁾ If LF Receiver (LFRX) is enabled by CPU via SFR LFRXC.ENLFRX or autocalibration cycle is started by SFR LFRXC.CDRECAL then up to one additional 2 kHz RC oscillator period must be added to the given times

Attention: Test ■ means that the parameter is not subject to production test.

It was verified by design/characterization.

Table 43 LF Receiver Carrier Detection, V_{bat} = 2.3 V...3.3 V, T = , f_{LF} = 120 kHz...130 kHz

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Maximum Amplitude for Carrier Detector Filter	$S_{max,I}$	100			mVpp	Refer to test case T-1.1	-	10.37
LF Carrier Detect	$S_{nodet,2,I}$	3			mVpp	Carrier Detector Filter		10.38
Threshold 2 ¹⁾²⁾	$S_{det,2,I}$			10	mVpp	Time 1 Refer to test case T-1.2	2	10.39

¹⁾ For reliable carrier detection a minimum pulse length of 240µs is required

²⁾ For reliable carrier detection a minimum pulse length of 240µs is required

²⁾ Tested with LF Carrier Detector Filter Time 1 - verified by characterization/design for LF Carrier Detector Filter Times 2, 3



4.4.8 LF Test Cases

T-1.1, Test Case for large LF signal measurements

Setup

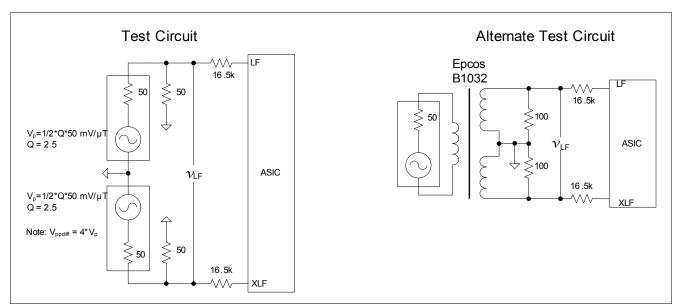


Figure 70 Test Circuit for large LF signal measurements

T-1.2, Test Case for small LF signal measurements

Setup

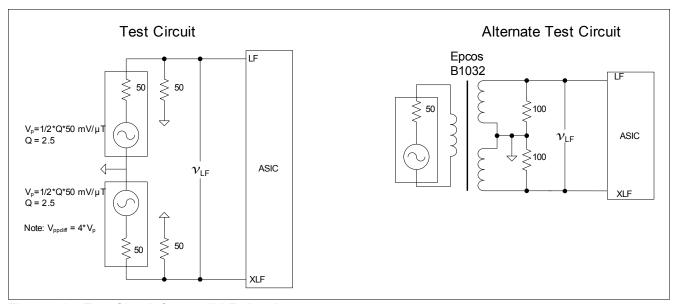


Figure 71 Test Circuit for small LF signal measurements



4.4.9 Crystal Oscillator

Table 44 Crystal Oscillator, f_{Crystal} = 18 MHz...20 MHz

Parameter	Symbol		Values	S	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Crystal startup time	t _{XTAL,Startup}	-	700	1250	μѕ	Measured on SP370 Test Board (see "Test Board" on Page 142) with Crystal NX5032SD EXS00A-03552 C _L =12 pF, f _{Crystal} = 18,08 MHz		12.1
Parasitic capacitance from XTAL pin to GND (PCB tracks, XTAL shield, etc.)	$C_{parasitic}$	_	_	4	pF	_	•	12.2
Serial resistance of the crystal	R_{Rmax}	_	_	60	Ohm	_		12.3
Input inductance	$L_{\mathrm{OSC,3.0V,25^{\circ}}}$ c	2.0	2.9	3.8	μH	V _{bat} = 3.0 V, T= 25°C		12.4
	L_{OSC}	1.8	2.9	4.3	μH	_		12.5
Internal cap bank maximum capacitance	C_{bank}	36	40	44	pF	Between pin XTALCAP and pin XGND SFR XTAL1 = FF _H SFR RFENC.TXDD = 1	-	12.6
FSK Switch ON resistance	$R_{ m Switch,ON}$			60	Ohm	Between pin XTALCAP and pin XGND SFR bit FSKSWITCH = 1 _B SFR RFENC.TXDD = 1		12.7
FSK Switch OFF resistance	$R_{ m Switch,OFF}$	100			kOhm	Between pin XTALCAP and pin XGND SFR bit FSKSWITCH = 0 _B SFR RFENC.TXDD = 1		12.8
FSK Switch OFF capacitance	$C_{Switch,OFF}$	3.2	3.5	3.8	pF	Between pin XTALCAP and pin XGND SFR XTAL1 = 0x00 _B SFR bit FSKSWITCH = 0 _B SFR RFENC.TXDD = 1		12.9



4.4.10 12 MHz RC HF Oscillator

Table 45 12 MHz RC HF Oscillator

Parameter	Symbol	Values Min. Typ. Max.		Unit	Note / Test Condition	Test	Number	
		Min.	Тур.	Max.				
Operating frequency	$f_{RC,HF}$	11.04	12.00	12.96	MHz			13.1

4.4.11 2 kHz RC LP Oscillator

Table 46 2 kHz RC LP Oscillator

Parameter	Symbol		Values	S	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Operating frequency	$f_{RC,LP}$	1.3	2	2.7	kHz	V _{bat} = 3.0 V, T= 25°C		14.1
Frequency drift	$df_{\rm RC,LP}$	-7	_	+7	%	_		14.2



4.4.12 Interval Timer & LF On/Off Timer

Table 47 Interval Timer / LF On/Off Timer

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Interval Timer Precounter calibration error	df_{ITP}	-0.083	-	0	%/Hz	Error is dependent upon Interval Timer timebase specified to "Interval Timer Calibration" ROM Library function. This error does not include reference clock (XTAL or 12 MHz RC oscillator) and 2 kHz RC LP oscillator drift errors.		15.1
LF On/Off Timer calibration error "On" Time	df_{LFON}	-1.64	-	4.92	%	Error is assumes usage of "Interval Timer Calibration" ROM Library function. This error does not include reference clock (XTAL or 12 MHz RC oscillator) and 2 kHz RC LP oscillator drift errors.		15.2
LF On/Off Timer calibration error "Off" Time	df _{LFOFF}	-1.64	-	0	%	Error is assumes usage of "Interval Timer Calibration" ROM Library function. This error does not include reference clock (XTAL or 12 MHz RC oscillator) and 2 kHz RC LP oscillator drift errors.	•	15.3



4.4.13 Voltage Regulator

Table 48 Voltage Regulator¹⁾²⁾

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Regulated output voltage in RUN state	V_{REG}	1.9	2.1	2.4	V	V _{bat} = 2.1 V - 3.6 V,		17.1
Regulated output voltage at low battery in RUN state	$V_{REG,Low}$	1.8	_	2.1	V	V _{bat} = 1.9 V - 2.1 V		17.2
Regulated output voltage in Programming mode	V_{REG}	2.3	2.5	2.75	V	V _{bat} = 2.5 V - 3.6 V		17.4
Regulated output voltage in POWERDOWN and THERMAL SHUTDOWN	$V_{REG,PD}$	1.7	_	2.5	V	_		17.5
External Capacitance at Vreg Pin	C _{VREG}	60	100	_	nF	Maximum ESR 15 Ohm	•	17.6

¹⁾ The voltage regulator is designed to supply only the internal blocks of the SP370 and not designed to drive any external circuitry, thus only the decoupling cap is allowed to be connected to pin V_{reg}. A 100nF decoupling cap with an maximum ESR of 15 Ohm is recommended for proper operation.

²⁾ The voltage regulator is designed to supply only the internal blocks of the SP370. It is not designed to drive any external circuitry, including the embedded PA. A 100nF decoupling cap with an maximum ESR of 15 Ohm is recommended for proper operation. It is not prohibited to connect the PA to pin Vreg as long as the customer verifies that the behavior of the different SP370 devices is always correct and within the specification.



4.4.14 Power On Reset / Brown Out Reset

Table 49 Power On Reset / Brown Out Reset

Parameter	Symbol		Values	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Power On Reset level	V_{POR}	0.2	0.4	1.7	V	Min. supply voltage level measured at Pin V _{REG} for a valid logic LOW at Power On Reset circuit		16.1
Power On Reset release level	V_{THR}	1.7	_	1.8	V	Measured at Pin V _{REG}		16.3
Power On reset time	t_{POR}	0.25	_	10	ms	_		16.4
Brown Out detect level in RUN state	$V_{\mathrm{RUN,BRD}}$	1.7	_	1.8	V	Measured at Pin V _{REG}		16.5
Brown Out detect level in POWERDOWN and THERMAL SHUTDOWN	$V_{PD,BRD}$	0.7	_	1.7	V	Measured at Pin V _{REG}		16.8
Mode selection time	t_{mode}	_	_	2.5	ms	_		16.10
Minimum detectable Brown Out glitch in RUN state	$t_{Brownout,RUM}$	_	_	1	μs	_	•	16.11
Minimum detectable Brown Out glitch in POWERDOWN and THERMAL SHUTDOWN state	t _{Brownout,PD}	_	_	100	μs	_		16.12

Attention: Test ■ means that the parameter is not subject to production test.

It was verified by design/characterization.

4.4.15 VMIN Detector

Table 50 VMIN Detector

Parameter	Symbol	Values		Unit	Note / Test Condition	Test	Number	
		Min.	Тур.	Max.				
Low battery threshold warning level	TH_{LBAT}	2.0	2.1	2.2	V	Used by ROM Library functions only		18.1



4.4.16 FLASH Memory

Table 51 FLASH Memory

Parameter	Symbol		Value	s	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Erase/Program temperature	T_{FL}	0	_	+60	°C	_		19.1
Erase/Program supply voltage	V_{bat3}	2.5	_	3.6	V	-		19.2
Endurance	En _{Flash}	100	_	_	cycles	Programming/erase cycles per wordline	•	19.3
Erase time	$t_{\sf Erase}$	_	102	_	ms	Min/max can be derived by adding the tolerance and drift of the 12 MHz RC HF Osc. (see Table 45)		19.4
Write time per FLASH line	t _{Program}	_	2.2	_	ms	FLASH line = 32 Byte min/max can be derived by adding the tolerance and drift of the 12 MHz RC HF Osc. (see Table 45)	-	19.5

Attention: Test ■ means that the parameter is not subject to production test.

It was verified by design/characterization.

4.4.17 TMAX Detector

Table 52 TMAX Detector

Parameter	Symbol	Values			Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
THERMAL SHUTDOWN release temperature	$T_{\mathrm{TMAX,Release}}$	115.5	_	-	°C	Used by "ThermalShutdown" ROM Library function	•	20.1
THERMAL SHUTDOWN enable temperature	$T_{TMAX,\;Enable}$	117	-	125	°C	only. The TMAX enable temperature is verified to be above the release temperature.		20.2



4.4.18 Watchdog Timer

Table 53 Watchdog Timer

Parameter	Symbol	Values			Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Watchdog timeout	t _{Watchdog}	0.6	1	1.7	s	Min/max is derived by considering the tolerance and drift of the 2 kHz RC LP Osc. (see Table 46)		21.1

Attention: Test ■ means that the parameter is not subject to production test. It was verified by design/characterization.

4.4.19 Digital I/O pins

Table 54 Digital I/O pins

Parameter	Symbol		Values	S	Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
Input LOW voltage	V_{IL}	-0.2	_	0.4	V	_		22.1
Input HIGH voltage	V_{IH}	VBat - 0.4	-	VBat + 0.2	V	_		22.2
Output LOW voltage	V_{OL}	_	_	0.5	V	IOL= 1.6 mA		22.3
Output HIGH voltage	V_{OH}	VBat - 0.5	_	_	V	IOH= -1.6 mA		22.4
Output transition time	t _{HL, LH}	_	_	30	ns	20 pF load, 10% 90%		22.5
Parasitic capacitance	$C_{\sf pad}$	_	_	5	pF	_		22.6
Internal pullup /	$R_{\rm up/down}$	35	50	70	kOhm	Pin PP0, PP1		22.7
pulldown resistor	$R_{ m up/down}$	175	250	335	kOhm	Pin PP2		22.8

Attention: Test ■ means that the parameter is not subject to production test.

It was verified by design/characterization.

4.4.20 I²C Interface

Table 55 I²C Interface

Parameter	Symbol	Values			Unit	Note / Test Condition	Test	Number
		Min.	Тур.	Max.				
I ² C bitrate	DR_{I2C}	_	_	400	kbit/s	SFR DIVIC[1:0]: 00 _B		23.1

Package Information

5 Package Information

5.1 Package Outline

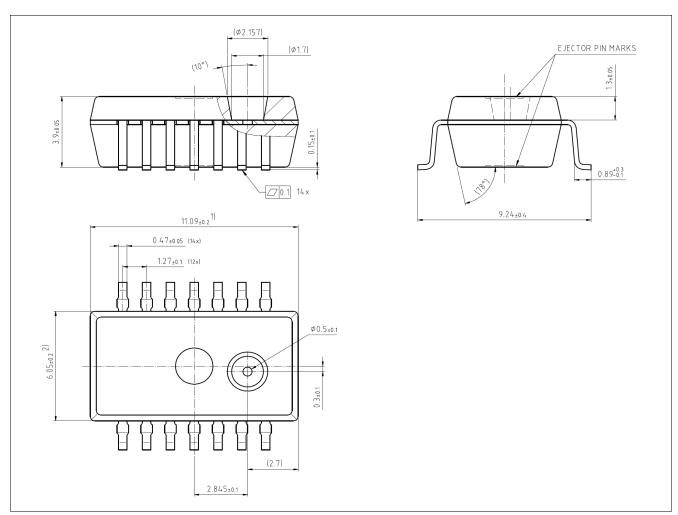


Figure 72 PG-DSOSP-14-6 Package Dimensions

Dimensions in [mm]¹⁾²⁾

¹⁾ Dimension does not include mold flash, protrusions or gate burrs. Mold flash, protrusions and gate burrs do not exceed 0.15mm (0.006 inch) per side.

²⁾ Dimension does not include inter-lead flash or protrusions. Inter-lead flash and protrusions do not exceed 0.25mm (0.010 inch) per side.

Package Information

5.2 Identification Code

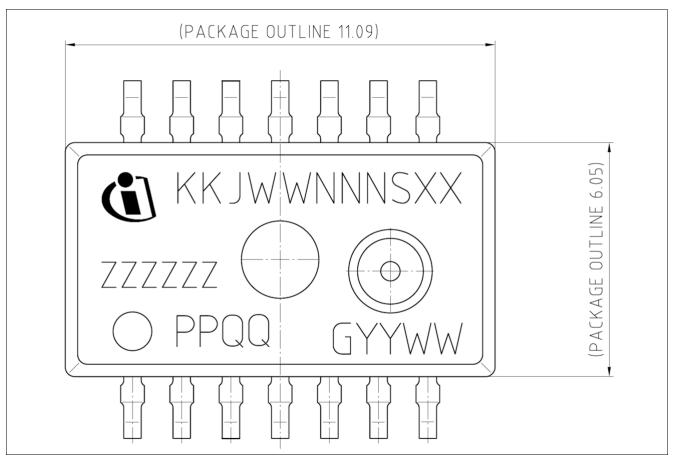


Figure 73 PG-DSOSP-14-6 marking

The marking for the SP370 is on the topside of the package.

5.2.1 Identification Code Definition

KKJWWNNNSXX: Infineon Lot Number ZZZZZ: Product Identification (SP37)

O: Pin 1 Marking

PPQQ: Manufacturer Version (PP = 25 Villach Sensor) and Sensor Information Code (QQ = 11)

G: Green Package Indicator¹⁾

YYWW: Date Code (YY = Year, WW = week)

¹⁾ The Green Package fulfils the solder condition for Pb-Free Assembly according to IPC/JEDEC J-STD-020C.



References

References

This section contains documents used for cross-reference throughout this document.

[1] SP370 ROM Library function guide

www.infineon.com Published by Infineon Technologies AG

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Board Mount Pressure Sensors category:

Click to view products by Infineon manufacturer:

Other Similar products are found below:

6407-249V-17343P 6407-250V-09273P 80527-25.0H2-05 80541-B00000150-01 80541-B00000200-05 80554-00700100-05 8056800300050-01 93.631.4253.0 93.731.4353.0 93.932.4553.0 136PC150G2 136PC15A1 142PC95AW71 142PC05DW70 15PSI-G-4V 180501A-L0N-B 26PCBKT 26PCCFA6D26 26PCCFS2G 26PCCVA6D 93.632.7353.0 93.731.3653.0 93.931.4853.0 93.932.4853.0 SCDA120XSC05DC 185PC30DH 20INCH-G-MV-MINI 26PCAFJ3G 26PCCEP5G24 26PCDFA3G 26PCJEU5G19 ASCX15AN-90
TSCSAAN001PDUCV DCAL401DN DCAL401GN XZ202798SSC XZ203676HSC 6407-249V-09343P 6407-250V-17343P SP370-25-1160 81794-B00001200-01 HSCDLNN100PGAA5 82681-B00000100-01 81618-B00000040-05 SSCDJNN015PAAA5 TSCDLNN100MDUCV
TSCSAAN100PDUCV NBPDANN015PGUNV NBPLLNS150PGUNV 142PC100D