

Direct-to-Liquid Thermoelectric Assembly



Thermoelectric cooling unit for medical and industrial applications

The Direct-to-Liquid Series thermoelectric assembly (TEA) offers dependable, compact performance by cooling objects via liquid to transfer heat. Heat is absorbed through a cold block and dissipated thru a second liquid heat exchanger. The thermoelectric modules are custom designed to achieve a high coefficient of performance (COP) to minimize power consumption. This product series is available in a wide range of cooling capacities and voltages. Custom configurations are available, however, MOQ applies.

The liquid heat exchanger is designed to accommodate distilled water with glycol. Corrosion resistant turbulators are enclosed inside channels to increase heat transfer. Mating port adaptors are sold separately.

FEATURES

- Compact form factor
- Reliable solid-state operation
- Precise temperature control
- Bi-metal thermostat for overheat protection
- RoHS compliant

APPLICATIONS


- Medical Diagnostics
- Industrial Lasers
- Medical Lasers
- Analytical Instrumentation

Americas: +1.919.597.7300 Europe: +46.31.420530 Asia: +86.755.2714.1166 ets.sales@lairdtech.com www.lairdtech.com




Direct-to-Liquid Thermoelectric Assembly



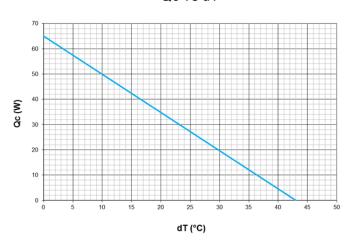

Pressure Drop vs Flow Rate

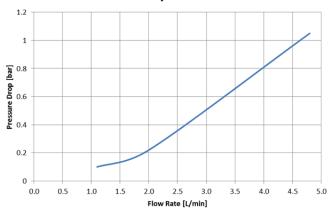


SPECIFICATIONS

TECHNICAL	
Technology	Thermoelectric modules, liquid cooling, closed loop (non-mixing), filter less, non-refrigerant
Cooling at ΔT = 0°C	65 W (222 Btu/h)
Voltage (nominal / maximum) 1	12/15 VDC
COP (Coefficient of Performance)	72%
Grounding (all voltages)	Positive or negative
Current draw, ±10% (nominal / startup)	3.9/4.3 A
Weight	0.4 kg (0.9 lbs)
Connector type (on unit / mating side)	TEM: Leads, 20 AWG, Red/Black OHT: Leads
ENVIRONMENTAL	
Temperature range	-40°C to +62°C (-40°F to +143°F)
Hi-Pot Test	750 VDC
Over temp Thermostat	75°C±5°C (167°F±41°F) on hot side heat sink
1) Max ripple 5%	



Direct-to-Liquid Thermoelectric Assembly

MECHANICAL DRAWING

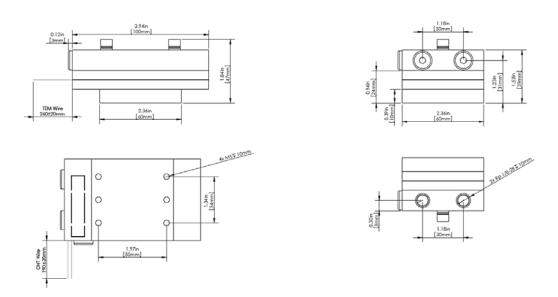

For overheating protection, the cooler is equipped with a bimetal thermostat. The maximum rating for the thermostat is 8 A dc. For systems with 8 A or less, the thermostat can be connected directly in series with the thermoelectric modules (TEMs). Otherwise, connect the TEMs to the power source through a relay of suitable rating which state is controlled with the bimetal thermostat.

Note: Cold block requires insulation to minimize moisture buildup under dew point conditions.



Direct-to-Liquid Thermoelectric Assembly

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for Thermoelectric Assemblies category:

Click to view products by Laird Connectivity manufacturer:

Other Similar products are found below:

AA-150-48-44-LK-XX TEC1-07108 TEC1-04908 TEC1-06310 TEC1-06315 DA-044-12-02-00-00 387000840 DA-045-24-02-00-00 387000840 AA-040-12-22-00-00 387000817 387000913 387000919 TC-18-QC-50 DA-051-24-02-00-00 387000918 387000910 TC-WIRE3-PR-59 WL 2000 AA-150-24-44-00-XX DA-039-12-02-00-00 AA-060-24-22-00-00 DA-020-12-02-00-00 AA-050-24-22-00-00 TC-18-QE-50 LA-115-24-02-00-00 LA-045-12-02-00-00 DA-108-24-02-00-00 DA-045-12-02-00-00 DA-024-12-02-00-00 AA-060-12-22-00-00 AA-033-12-22-00-00 AA-019-12-22-00-00 387000872 387000176 371061,01 387002414 AA-026-12-22-00-00 AA-150-24-44-LK-XX AA-150-48-44-00-XX DA-033-12-02-00-00 DA-075-12-02-00-00 DL-120-24-00-00-00 LAC-046-24-02-00-00 L-ADAP-8-1/8 LL-060-12-00-00-00 SAA-170-24-22-00-00 SDA-195-24-22-00-00 TC-NTC-1 TC-NTC-2