

R88D-GN□, R88D-GT□

G-Series servo drive

A compact servo drive family for motion control. Compact size and integrated MECHATROLINK-II motion bus.

- ML2 and Analog/ Pulse servo drive models
- High-response frequency of 1 kHz
- Auto-tuning for easy and quick start-up
- Vibration suppression
- Positioning, speed or torque control
- Separate power and control power supply
- Fast and accurate positioning
- Incremental and absolute encoder



Ratings

- 230 VAC Single-phase 100 W to 1.5 kW (8.62 Nm)



AC Servo systems

System configuration

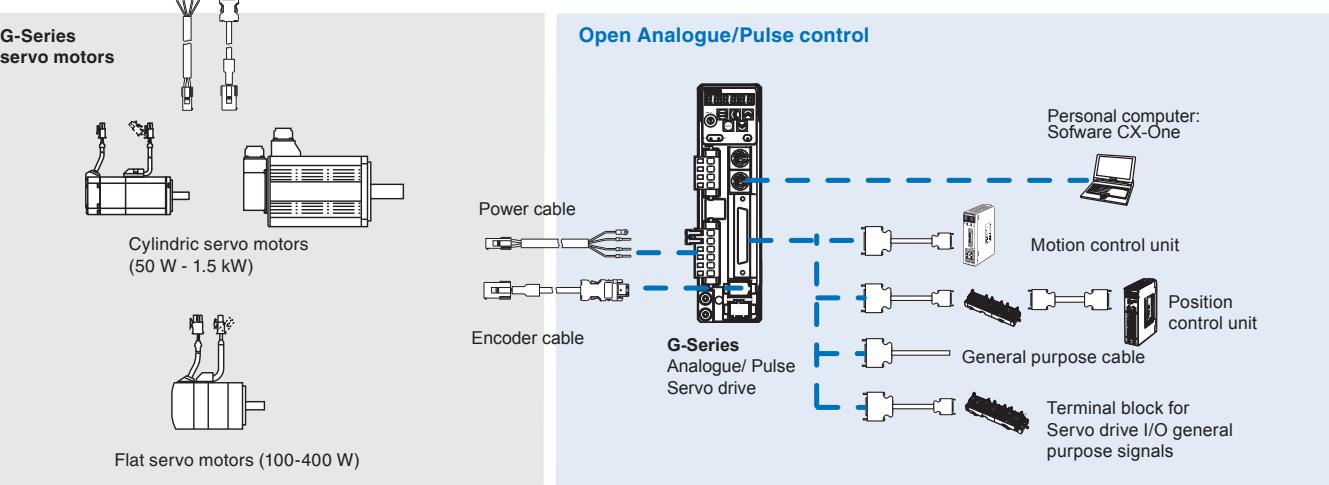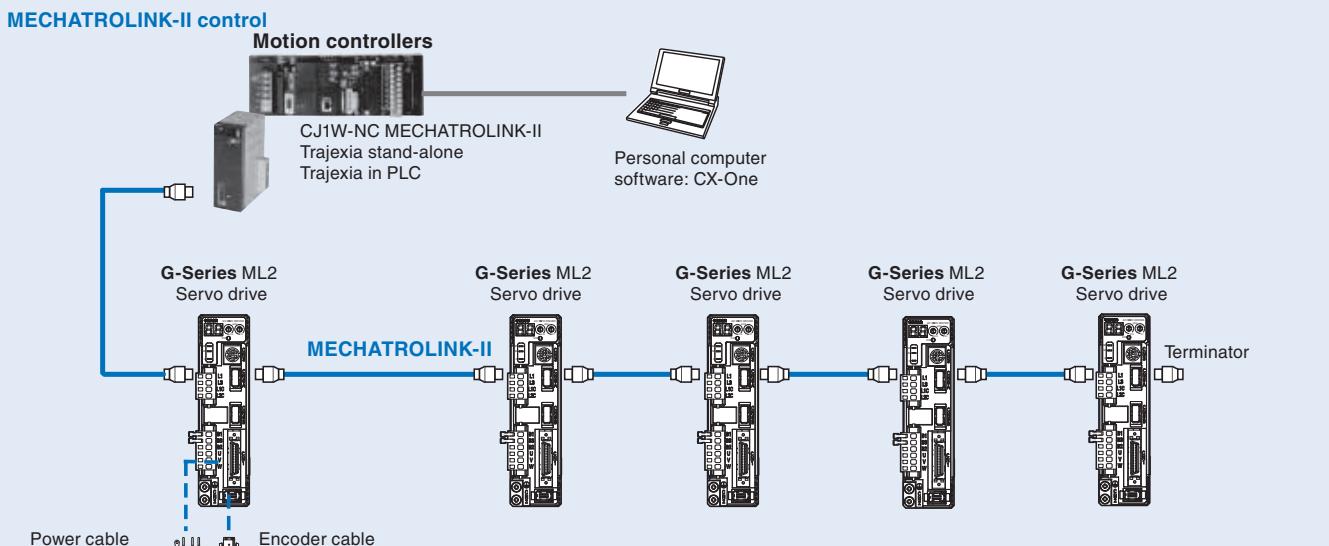

Servo motor supported

Servo motor						G-Series servo drive			
Family	Voltage	Speed	Rated torque	Capacity	Model	MECHATROLINK-II	Analog/ Pulse		
Cylindric	50 - 750 W	230 V	3000 min ⁻¹	0.16 Nm	50 W	R88M-G05030□-□S2	R88D-GN01H-ML2		
				0.32 Nm	100 W	R88M-G10030□-□S2	R88D-GN01H-ML2		
				0.64 Nm	200 W	R88M-G20030□-□S2	R88D-GN02H-ML2		
				1.3 Nm	400 W	R88M-G40030□-□S2	R88D-GN04H-ML2		
				2.4 Nm	750 W	R88M-G75030□-□S2	R88D-GN08H-ML2		
	900 - 1500 W			3.18 Nm	1000 W	R88M-G1K030T-□S2	R88D-GN15H-ML2		
				4.77 Nm	1500 W	R88M-G1K530T-□S2	R88D-GN15H-ML2		
				4.8 Nm	1000 W	R88M-G1K020T-□S2	R88D-GN10H-ML2		
				7.15 Nm	1500 W	R88M-G1K520T-□S2	R88D-GN15H-ML2		
				1000 min ⁻¹	8.62 Nm	R88M-G90010T-□S2	R88D-GN15H-ML2		
Flat	100-400 W	230 V	3000 min ⁻¹	0.32 Nm	100 W	R88M-GP10030□-□S2	R88D-GN01H-ML2		
				0.64 Nm	200 W	R88M-GP20030□-□S2	R88D-GN02H-ML2		
			3000 min ⁻¹	1.3 Nm	400 W	R88M-GP40030□-□S2	R88D-GN04H-ML2		
				400 W			R88D-GT04H		

Type designation

Servo drive

R88D-GN04H-ML2

G-Series servo drive

Drive type

T: Analogue/ pulse type

N: Network type

Capacity

01	100 W
02	200 W
04	400 W
08	750 W
10	1.0 kW
15	1.5 kW

Model

Blank: Analogue/ pulse type

ML2: MECHATROLINK-II communications

Source voltage

H: 230 V

Servo drive specifications

General specifications

Servo drive type		R88D-G□	01H□	02H□	04H□	08H□	10H□	15H□											
Applicable servomotor	R88M-G□	05030□/10030□	20030□	40030□	75030□	G1K020T□	90010T□/1K030T□/1K5□0T□												
	R88M-GP□	10030□	20030□	40030□	-	-	-												
Max. applicable motor capacity	W	100	200	400	750	1000	1500												
Continuous output current	Arms	1.16	1.6	2.7	4.0	5.9	9.8												
Max. output current	Arms	3.5	5.3	7.1	14.1	21.2	28.3												
Input power	Main circuit	For single-phase, 200 to 240 VAC +10 to -15% (50/60 Hz)			For single-phase/ three-phase, 200 to 240 VAC +10 to -15% (50/60 Hz)														
Supply	Control circuit	For single-phase, 200 to 240 VAC + 10 to -15% (50/60 Hz)																	
Control method	IGBT-driven PWM method																		
Feedback	Serial encoder (incremental/absolute)																		
Conditions	Usage/storage temperature	0 to +55 °C / -20 to 65 °C																	
	Usage/storage humidity	90% RH or less (non-condensing)																	
	Altitude	1000m or less above sea level																	
	Vibration/shock resistance	5.88 m/s ² / 19.6 m/s ²																	
Configuration	Base mounted																		
Approx. weight	Kg	0.8		1.1	1.5	1.7													

MECHATROLINK-II servo drive specifications


Position/Speed/torque control mode Performance	Speed variance	Load variance	During 0 to 100% load ± 0.01 max. (at rated speed)
	Voltage variance	0% at $\pm 10\%$ of rated voltage (at rated speed)	
	Temperature variance	0 to 50°C $\pm 0.1\%$ max. (at rated speed)	
	Frequency characteristics	1 kHz	
	Torque control accuracy (reproducibility)	$\pm 3\%$ (at 20% to 100% of rated torque)	
	Soft start time setting	0 to 10 s (acceleration time and deceleration time can be set)	
	MECHATROLINK Communication	MECHATROLINK-II commands (for sequence, motion, data setting/reference, monitor, adjustment and other commands)	
	Sequence input signal	Emergency stop, 3 external latch signals, forward/reverse torque limit, forward/reverse run prohibit, origin proximity, 3 general-purpose inputs	
	Sequence output signal	It is possible to output three types of signals: positioning completed, speed coincidence, rotation speed detection, servo ready, current limit, speed limit, brake release and warning signal	
	RS-232 communications	Interface Transmission rate Functions	Personal computer From 2400 to 57600 bps Parameter setting, status display, alarm display (monitor, clear, history), servo drive data tracing function, test run/autotuning operations, real time trace, absolute encoder setting, default values function
I/O signal Integrated functions	MECHATROLINK communications	Communications protocol Transmission rate Data length Functions	MECHATROLINK-II 10 Mbps 32 bytes Parameter setting, status display, alarm display (monitor, clear, history), default values function
	Tuning		Horizontal and vertical axis mode. One parameter rigidity setting. Load inertia detection.
	Dynamic brake (DB)		Operates when main power OFF, servo alarm, overtravel or servo OFF
	Regenerative processing		Built-in regeneration resistor in models from 750 W to 1.5 kW. External regeneration resistor optionally.
	Overtravel (OT) prevention function		Dynamic brake, disables torque or emergency stop torque during POT and NOT operation
	Emergency stop (STOP)		Emergency stop input
	Encoder divider function		Optional division pulses possible
	Electronic gearing		0,01 < Numerator/Denominator < 100
	Internal speed setting function		8 internal speeds
	Protective functions		Oversupply, undervoltage, overcurrent, overload, regeneration overload, servo drive overheating
	Analog monitor Output		The actual servomotor speed, command speed, torque and number of accumulated pulses can be measured using an oscilloscope or other device.
	Panel operator	Display functions	A 2-digit 7-segment LED display shows the servo drive status, alarm codes, parameters, etc. MECHATROLINK-II communications status LED indicator (COM)
		Switches	Rotary switch for setting the MECHATROLINK-II node address

Analog/pulse servo drive specifications

Control mode Performance	Control mode		Position, speed and torque control mode
	Speed variance	Load variance	During 0 to 100% load ± 0.01 max. (at rated speed)
		Voltage variance	0% at $\pm 10\%$ of rated voltage (at rated speed)
		Temperature dependence	0 to 50°C $\pm 0.1\%$ max. (at rated speed)
	Frequency characteristics		1 kHz
	Torque control accuracy (reproducibility)		$\pm 3\%$ (at 20% to 100% of rated torque)
	Soft start time setting		0 to 10 s (acceleration time and deceleration time can be set)
	Command pulse Input signal	Input pulse type Input pulse frequency Electronic gearing	Signal + pulse, 90° phase displacement 2-phase pulse (phase A/B) or reverse and forward pulses (CW/CCW) 500 kpps max. line-driver input, 200 kpps max. open-collector input 0,01 < Numerator/Denominator < 100
	Speed control Input signal	Speed reference voltage Torque limit Preset speed control	10 VDC at 3000 r/min: set at delivery (the scale can be set by parameters) 3 VDC at rated torque (torque can be limited separately in positive/negative direction) Preset speed is selectable from 8 internal settings by digital inputs.
	Torque control	Torque reference voltage Speed limit	3 VDC at rated torque: set at delivery (the scale and polarity can be set by parameters). Speed limit can be set by parameter.
I/O signal	Sequence input signal		Forward/reverse run prohibit, deviation counter reset, alarm reset, control mode switch, pulse prohibited, speed selection, gain switch, zero speed designation, origin proximity
	Sequence output signal		Brake release, servo ready and alarm output. It is possible also to output two types of configurable signals: current limit, rotation speed detection, warning signal, speed coincidence, positioning completed

Communications	RS-232 communications	Interface Personal computer Transmission rate From 2400 to 57600 bps Functions Parameter setting, status display, alarm display (monitor, clear, history), servo drive data tracing function, test run/autotuning operations, real time trace, absolute encoder setting, default values function
	RS-485 communications data	Interface Communication data interface between servo drives and personal computer. Transmission rate From 2400 to 57600 bps Functions Parameter setting, status display, alarm display (monitor, clear, history), servo drive data tracing function, test run/autotuning operations, real time trace, absolute encoder setting, default values function
	Tuning	Horizontal and vertical axis mode. One parameter rigidity setting. Load inertia detection.
	Dynamic brake (DB)	Operates when main power OFF, servo alarm, overtravel or servo OFF
	Regenerative processing	Built-in regeneration resistor in models from 750 W to 1.5 kW. External regeneration resistor optionally.
	Overtravel (OT) prevention function	Dynamic brake, disables torque or emergency stop torque during POT and NOT operation
	Emergency stop (STOP)	Emergency stop input
	Encoder divider function	Optional division pulses possible
	Protective functions	Oversupply, undervoltage, overcurrent, overload, regeneration overload, servo drive overheat
	Analog monitor Output	The actual servomotor speed, command speed, torque and number of accumulated pulses can be measured using an oscilloscope or other device.
Panel operator	Display functions	A 6-digit 7-segment LED display shows the servo drive status, alarm codes, parameters, etc.
	Switches	Unit No. switch for serial communications. Value from 0 to F. To identify which servo drive the computer is accessing in RS232 communications when multiple servo drives.

Servo drive part names

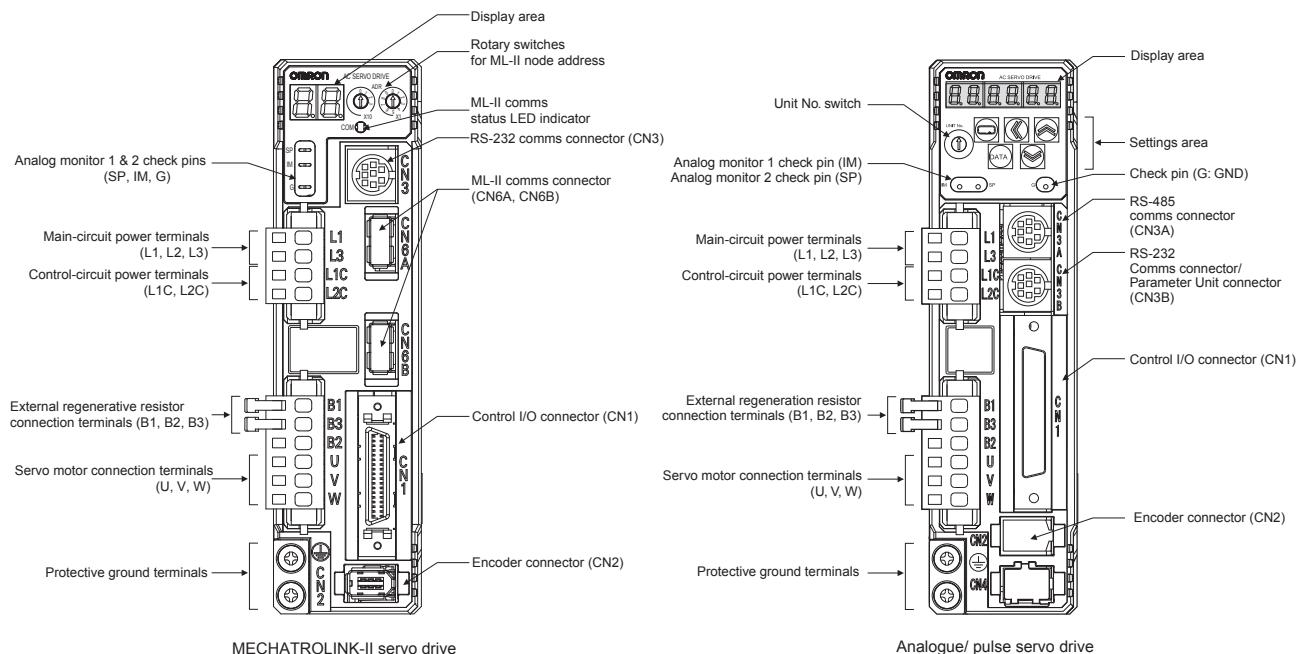

I/O specifications

Main circuit connector (CNA) specifications

Symbol	Name	Function
L1	Main circuits power supply input	AC power input terminals for the main circuit Note: for single-phase connect the power supply input to L1 and L3
L2		
L3		
L1C	Control circuit power supply input	AC power input terminals for the control circuit
L2C		

Servomotor connector (CNB) specifications

Symbol	Name	Function
B1	External regeneration resistor connection terminals	Up to 400 W: If regenerative energy is high, connect an external regeneration resistor between B1 and B2.
B2		From 750 W to 1.5kW: Normally B2 and B3 are connected. If regenerative energy is high, remove the short-circuit bar between B2 and B3 and connect an external regeneration resistor between B1 and B2.
B3		
U	Servo motor connection terminals	Terminals for outputs to the servomotor.
V		
W		
(+)	Frame ground	Ground terminal. Ground to 100Ω or less.
(-)		

I/O signals (CN1) - Input signals (for MECHATROLINK-II servo drives)

Pin No.	Signal name	Function
1	+24VIN	Control power supply input for sequence signals: users must provide the +24 V power supply. Allowable voltage range: 12 to 24 VDC
2	STOP	Emergency Stop Input Input for emergency stop. Emergency stop function factory default: enable.
3	EXT3	External Latch Signals This external signal input latches the current value feedback pulse counter.
4	EXT2	
5	EXT1	Minimal signal width must be 1 ms.
22	IN1	External general-purpose Input 0 This input is used as external general-purpose input.
6	IN0	External general-purpose Input 1
23	IN2	External general-purpose Input 2
7	PCL	Forward Torque Limit Input This signal input selects the torque limit.
8	NCL	Reverse Torque Limit Input
19	POT	Forward Run Prohibit Input Forward/ reverse drive rotation overtravel input. Stops servomotor when movable part travels beyond the allowable range of motion.
20	NOT	Reverse Run Prohibit Input
21	DEC	Origin Proximity Input Connect the origin proximity input signal in the origin search operation.
34	BAT	Battery backup input for absolute encoder Connecting pin for the absolute backup battery. Do not connect when a battery is connected to the servomotor encoder cable.
33	BATCOM	

I/O signals (CN1) - output signals (for MECHATROLINK-II servo drives)

Pin No.	Signal name	Function
15	/ALM	The output turns OFF when an alarm is generated in the Servo drive.
16	ALMCOM	
29	OUTM2	General-purpose output.
30	OUTM2COM	
31	OUTM3	The function for this output is selected by changing the parameter: INP1 (Positioning completed), VCMP (Speed conformity signal), TGON (Servomotor rotation speed detection), READY (Servo ready), CLIM (Current limit detection), VLIM (Speed limit detection), BKIR (Brake interlock), WARN (Warning signal)
32	OUTM3COM	
36	OUTM1	
35	OUTM1COM	

I/O signals (CN1) - Input signals (for analog/pulse servo drives)

Pin No.	Control mode	Signal name	Function
1	Position	+24 VCW	Reference pulse input for line driver and open collector according to parameter setting.
3		+CW	
4		-CW	Input mode: Sign + pulse string
2		+24 VCW	Reverse/forward pulse (CCW/CW pulse)
5		+CCW	Two-phase pulse (90° phase differential)
6		-CCW	
44		+CWLD	Reference pulse input for line driver only.
45		-CWLD	
46		+CCWL	Input mode: Reverse/forward pulse (CW/CCW pulse)
47		-CCWL	
14	Speed	REF	Speed reference input: ±10 V/rated motor speed (input gain can be modified using a parameter).
		TREF1	Torque reference input: ±10 V/rated motor torque (input gain can be modified using a parameter).
		VLIM	Speed limit input: ±10 V/rated motor speed (input gain can be modified using a parameter).
15	-	AGND1	Analog signal ground
16	Torque	TREF2	Torque reference input: ±10 V/rated motor torque (input gain can be modified using a parameter).
	Position/Speed	PCL	Forward torque limit input: ±10 V/rated motor torque (input gain can be modified using a parameter).
18		NCL	Reverse torque limit input: ±10 V/rated motor torque (input gain can be modified using a parameter).
17	-	AGND	Analog signal ground

Pin No.	Control mode	Signal name	Function
1	Common	+24 VIN	Control power supply input for sequence signals: users must provide the +24 V power supply (12 to 24 V).
		RUN	Servo ON: this turn ON the servo.
2	Position	DFSEL	Vibration filter switching
		PSEL	Speed command rotation direction switch
3	Speed/Torque	VZERO	Zero speed designation
		GSEL	Speed command is regarder as 0. This function is enable/disabled by parameter.
4	Common	TLSEL	Gain switching
		TLSEL	Torque limit switch.
5	Position	GESEL	Electronic gear switching
		VSEL3	Switches the numerator fro electronic gear ratio.
6	Speed		Internal speed selection 3
			Input to select the desired speed setting during internally speed operation. The speed selecton is combining this input with VSEL1 and VSEL2 inputs.
7	Position	ECRST	Error counter reset input.
		VSEL2	Resets the position error counter.
8	Speed		Internal speed selection 2
			Input to select the desired speed setting during internally speed operation. The speed selecton is combining this input with VSEL1 and VSEL3 inputs.
9	Common	RESET	Alarm reset input.
			Release the alarm status. The error counter is reset when the alarm is reset.
10	Position/ Speed/Torque	TVSEL	Control mode switching
			Position ↔ speed Position ↔ torque Torque ↔ speed } Enables control mode switching
11	Position	IPG	Pulse prohibition input. Digital input to inhibit the position reference pulse.
		VSEL1	Internal speed selection 1
12	Speed		Input to select the desired speed setting during internally speed operation. The speed selecton is combining this input with VSEL2 and VSEL3 inputs.
13	Common	NOT	Reverse run prohibited
		POT	Forward run prohibited
14	Common	SEN	Overtravel prohibited: stops servomotor when movable part travels beyond the allowable range of motion.
		SENGND	Sensor ON signal ground.
15	Common	BAT (+)	Backup battery connection terminals when the absolute encoder power is interrupted. Do not connect when an absolute encoder battery cable for backup is used.
		BATGND (-)	
16	Common	FG	Frame ground


I/O signals (CN1) - Output signals (for analog/pulse servo drives)

Pin No.	Control mode	Signal name	Function
1	Common	+A	Encoder phase A+
		-A	Encoder phase A-
		+B	Encoder phase B+
		-B	Encoder phase B-
		+Z	Encoder phase Z+
		-Z	Encoder phase Z-
		Z	Encoder phase-Z output
		ZCOM	Phase Z is output for encoder signals. Open-collector output.
		BKIR	Encoder phase-Z common
		BKIRCOM	Brake release signal output
		READY	Timing signal for operating the electromagnetic brake on a motor.
		READYCOM	Servo ready: ON if there is not servo alarm when the control/main circuit power supply is turned ON.
		/ALM	Servo alarm: turns OFF when an error is detected.
		ALMCOM	
2	Speed/torque	TGON	Motor rotation speed detection. This output turns ON when the motor rotation speed reaches the speed set in a parameter.
		TGONCOM	
3	Position	INP	Positioning complete output: turns ON when position error is equal to setting parameter.
		INPCOM	
4		INP2	Position complete output 2
		P-CMD	The function of output signals allocated to pins 11,10, 34 to 39 can be changed with these options by parameters settings.
		ZSP	Position command status
		WARN1	Zero speed
		WARN2	Warning 1
		ALM-ATB	Warning 2
		VCMP	Alarm output
		V-CMD	Speed conformity output
		V-LIMIT	speed command status
		T-LIMIT	Speed limit detection
5	Common	OUTM1	Torque limit detection
		OUTM2	General-purpose Output 1
		COM	Use the parameter settings to assign the desired function
		OUTM2	General-purpose Output2
		COM	Output ground common

Dimensions


Servo drives

R88D-GN01/02H-ML2, R88D-GT01/02H (200 V, 100 to 200 W)

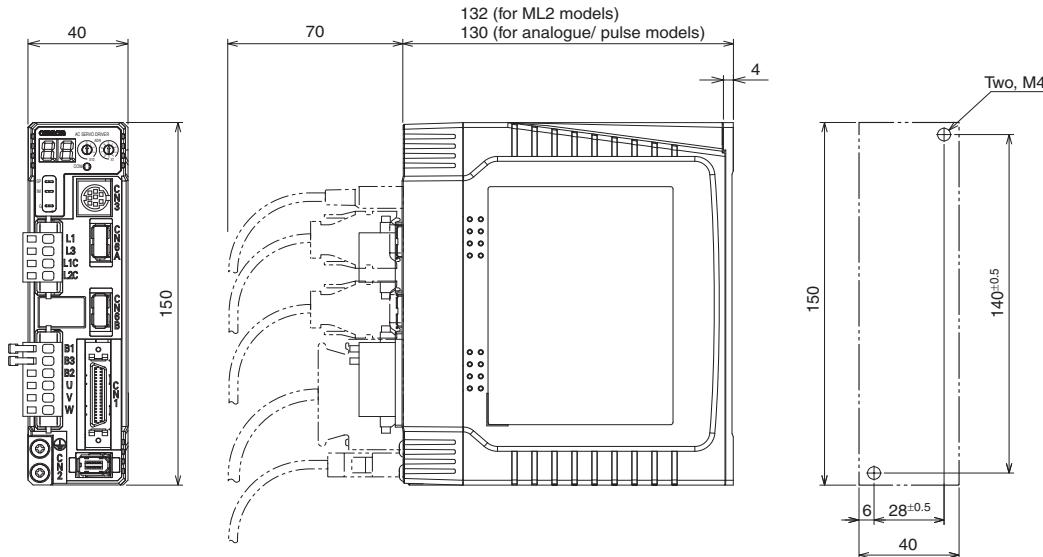


AC Servo systems


R88D-GN04H-ML2, R88D-GT04H (200 V, 400 W)

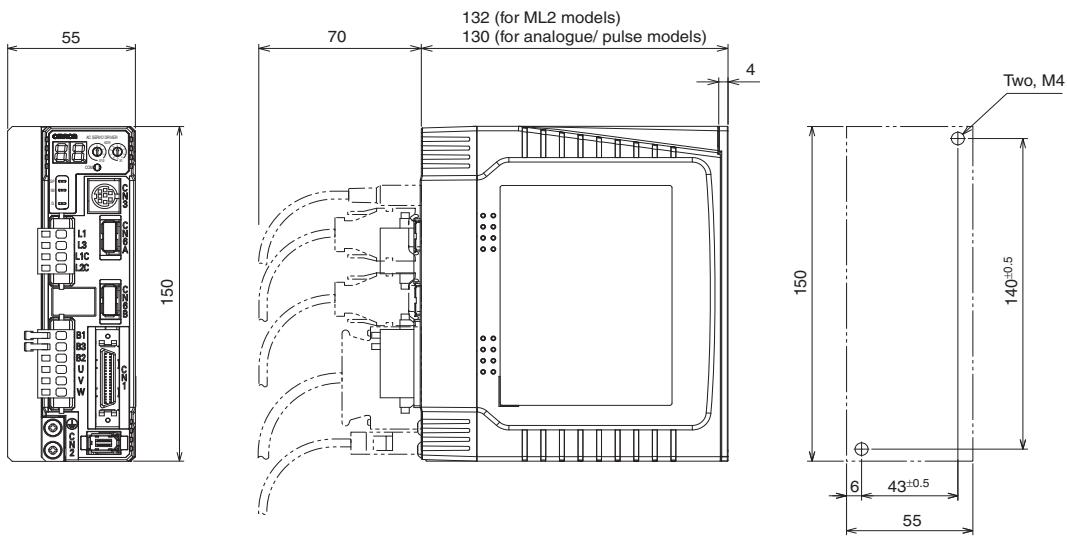


R88D-GN08H-ML2, R88D-GT08H (200 V, 750 W)

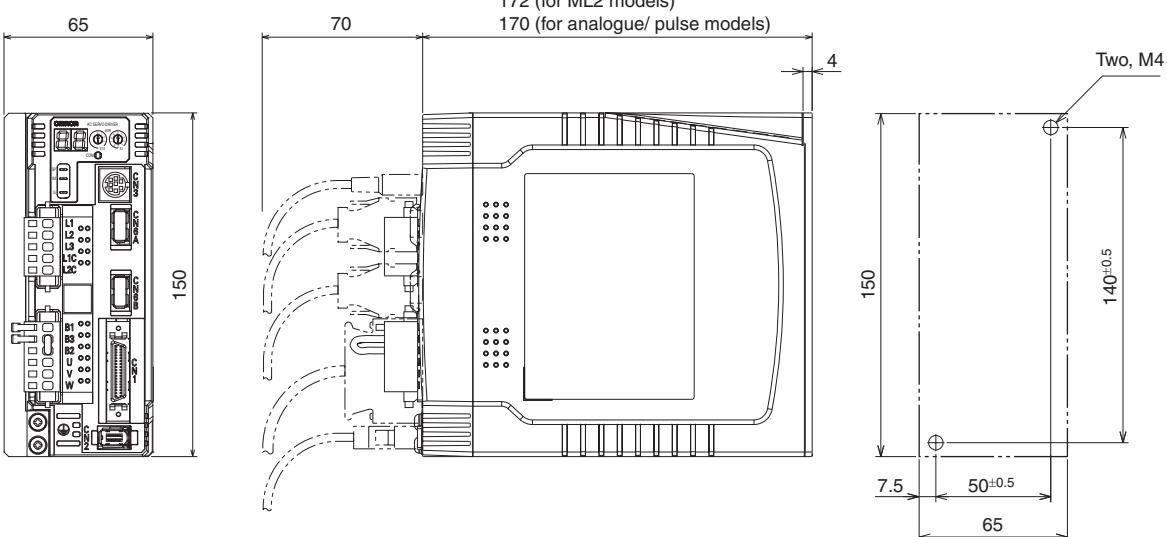

R88D-GN10/15H-ML2, R88D-GT10/15H (200 V, 1 kW to 1.5 kW)

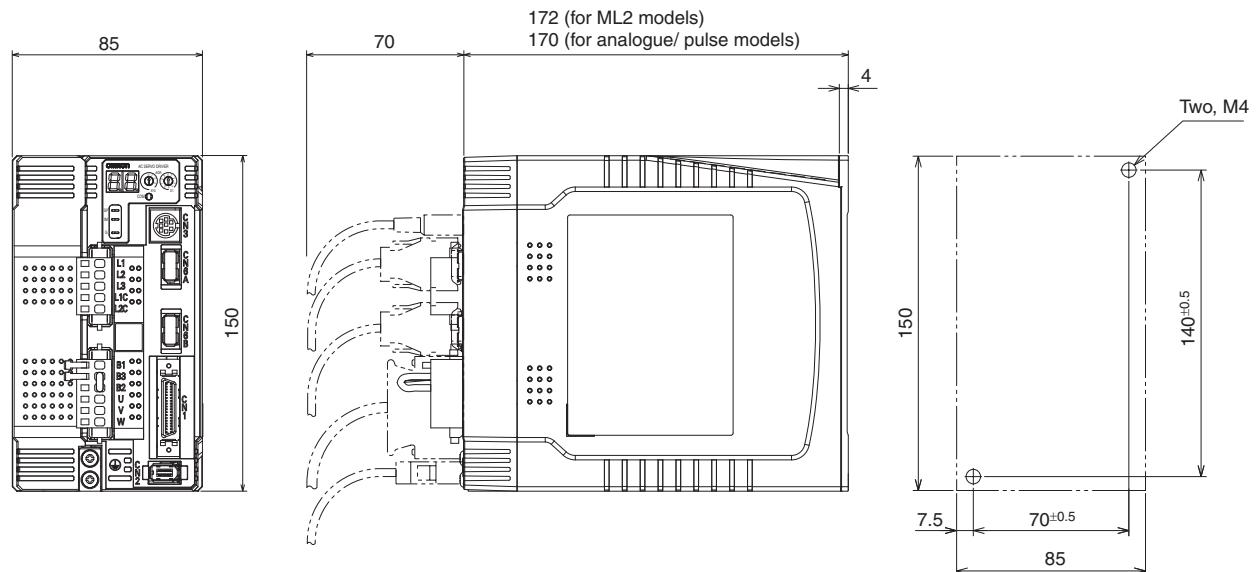


lters

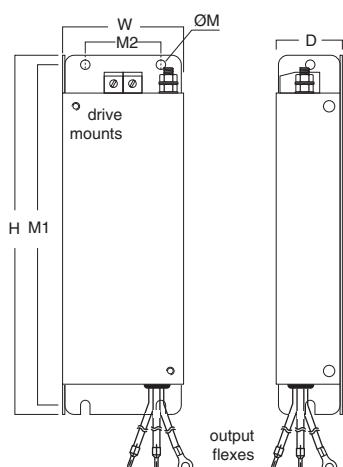

Filter model	Rated current	Leakage current	External dimensions			Mount dimensions		Filter Fixing	Rated voltage
			H	W	D	M1	M2		
R88A-FIK102-RE	2.4 A	3.5 mA	190	42	44	180	20	M4	250 VAC single-phase
R88A-FIK104-RE	4.1 A	3.5 mA	190	57	30	180	30	M4	
R88A-FIK107-RE	6.6 A	3.5 mA	190	64	35	180	40	M4	
R88A-FIK114-RE	14.2 A	3.5 mA	190	86	35	180	60	M4	

Installation


Single-phase, 230 VAC

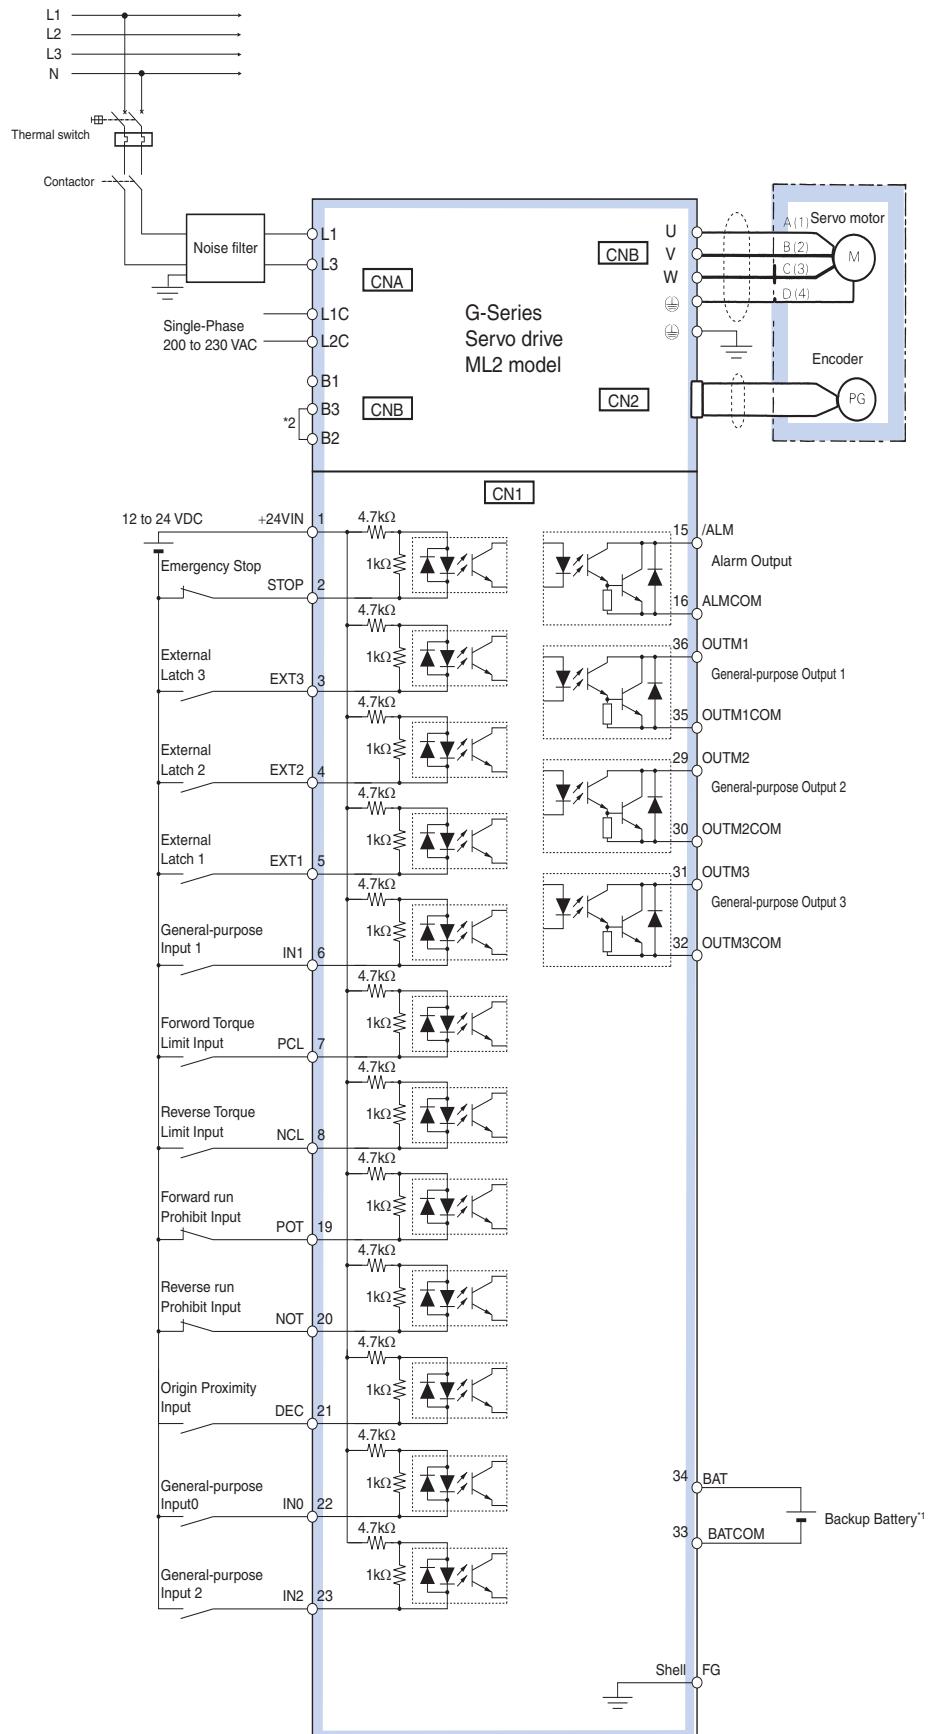

*1 For use only with an absolute encoder. If a backup battery is connected to CN1 I/O connector, an encoder cable with a battery is not required.

*2 For servo drives from 750 W, B2 and B3 are short-circuited. If the internal regenerative resistor is insufficient, remove the wire between B2 and B3 and connect an external resistor between B1 and B2.

Single-phase, 230 VAC

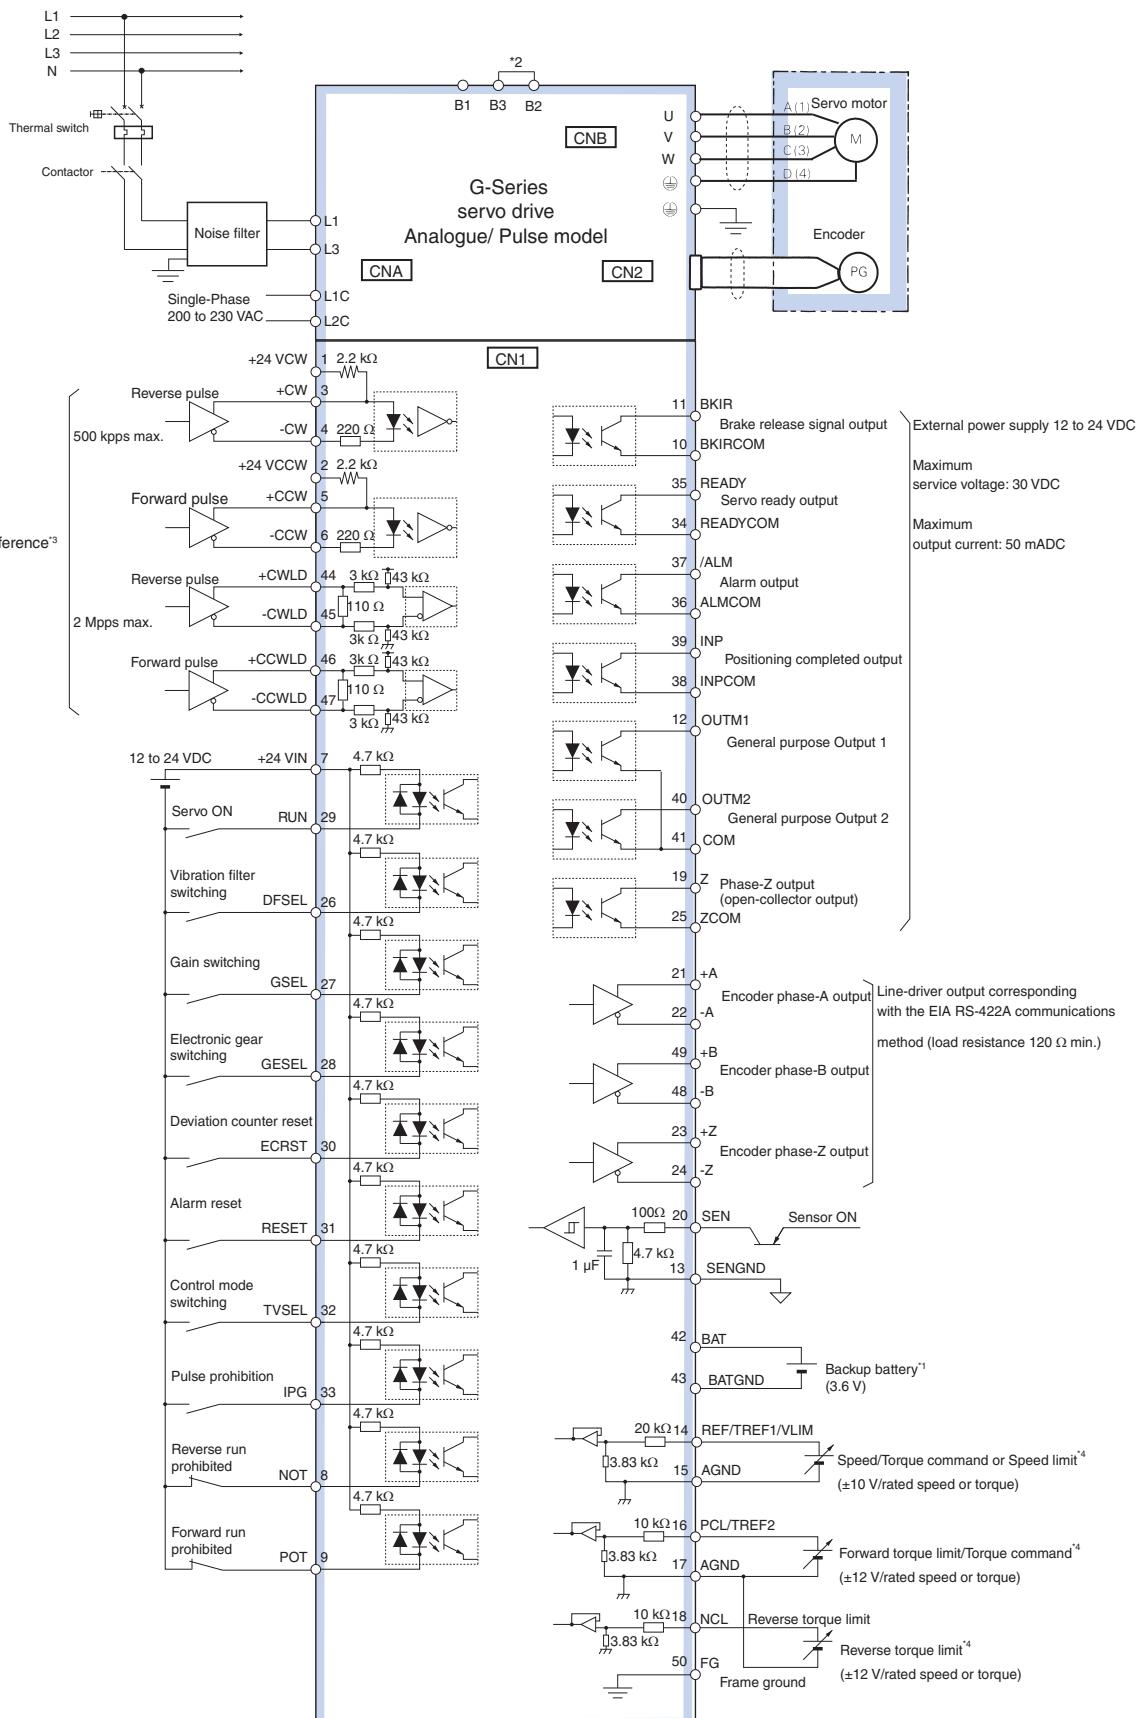


For use only with an absolute encoder. If a backup battery is connected to CN1 I/O connector, an encoder cable with a battery is not required. For servo drives from 750 W, B2 and B3 are short-circuited. If the internal regenerative resistor is insufficient, remove the wire between B2 and B3 and connect an external resistor between B1 and B2.

Only available in Position control mode.

The input function depends on control mode used (Position, speed or torque control).

Ordering information

G-Series MECHATROLINK-II model reference configuration

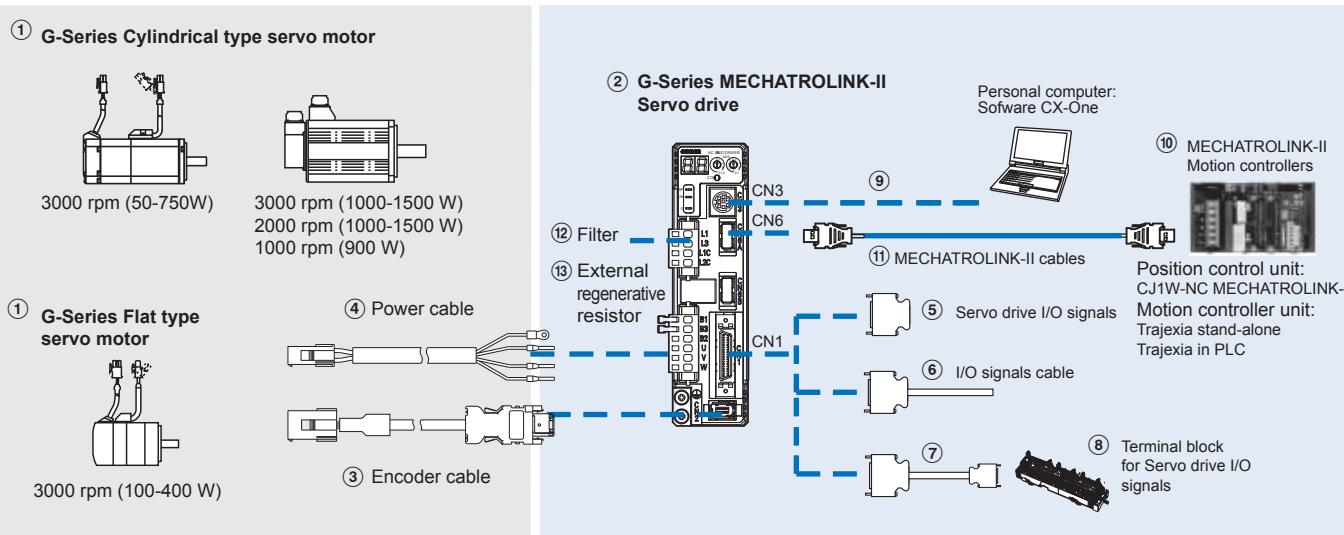

AC Servo systems

Note: The symbols ①②③④⑤... show the recommended sequence to select the components in a G-Series servo system.

Servo motors, power & encoder cables

Note: ①③④ Refer to the G-Series servo motor chapter for servomotor, motor cables or connectors selection

Servo drives

	Specifications	Servo drive model	① Compatible rotary servo motors	
			Cylindric type	Flat type
② 1 phase 200 VAC	100 W	R88D-GN01H-ML2	R88M-G05030□	R88M-GP10030□
			R88M-G10030□	
	200 W	R88D-GN02H-ML2	R88M-G20030□	R88M-GP20030□
	400 W	R88D-GN04H-ML2	R88M-G40030□	R88M-GP40030□
	750 W	R88D-GN08H-ML2	R88M-G75030□	-
	1.0 kW	R88D-GN10H-ML2	R88M-G1K020T□	-
	1.5 kW	R88D-GN15H-ML2	R88M-G90010T□	-
			R88M-G1K030T□	-
			R88M-G1K520T□	-
			R88M-G1K530T□	-

MECHATROLINK-II cables (for CN6)

Symbol	Specifications	Length	Model
(11)	MECHATROLINK-II Terminator resistor	-	JEPMC-W6022-E
	MECHATROLINK-II cables	0.5 m	JEPMC-W6003-A5-E
		1 m	JEPMC-W6003-01-E
		3 m	JEPMC-W6003-03-E
		5 m	JEPMC-W6003-05-E
		10 m	JEPMC-W6003-10-E
		20 m	JEPMC-W6003-20-E
		30 m	JEPMC-W6003-30-E

Filters

Symbol	Applicable servodrive	Filter model	Rated current	Leakage current	Rated voltage
(12)	R88D-GN01H	R88A-FIK102-RE	2.4 A	3.5 mA	250 VAC single-phase
	R88D-GN02H				
	R88D-GN04H	R88A-FIK104-RE	4.1 A	3.5 mA	
	R88D-GN08H	R88A-FIK107-RE	6.6 A	3.5 mA	
	R88D-GN10H	R88A-FIK114-RE	14.2 A	3.5 mA	
	R88D-GN15H				

External regenerative resistor

Symbol	Regenerative resistor unit model	Specifications
(13)	R88A-RR08050S	50 Ω, 80 W
	R88A-RR080100S	100 Ω, 80 W
	R88A-RR22047S	47 Ω, 220 W
	R88A-RR50020S	20 Ω, 500 W

		2 m	R88A-CPGB002S-E
⑦	Terminal block cable	1 m	XW2Z-100J-B33
		2 m	XW2Z-200J-B33
⑧	Terminal block	-	XW2B-20G4
			XW2B-20G5
			XW2D-20G6

Computer cable (for CN3)

Symbol	Name		Model
(@)	Computer cable RS232	2 m	B88A-CCG002P2

MECHATROLINK II Motion controllers


Symbol	Name	Model
⑩	Trajexia stand-alone motion controller	TJ2-MC64 (64 axes) TJ1-MC16 (16 axes) TJ1-MC04 (4 axes)
	Trajexia-PLC motion controller	CJ1W-MCH72 (30 axes) CJ1W-MC472 (4 axes)
	Position Controller Unit for CJ1 PLC	CJ1W-NCF71 (16 axes) CJ1W-NC471 (4 axes) CJ1W-NC271 (2 axes)
	Position Controller Unit for CS1 PLC	CS1W-NCF71 (16 axes) CS1W-NC471 (4 axes) CS1W-NC271 (2 axes)

Computer software

Specifications	Model
Configuration and monitoring software tool for servo drives and inverters. (CX-drive version 1.70 or higher)	CX-drive
Complete OMRON software package including CX-drive. (CX-One version 3.10 or higher)	CX-One

Ordering information

G-Series Analog/pulse model reference configuration

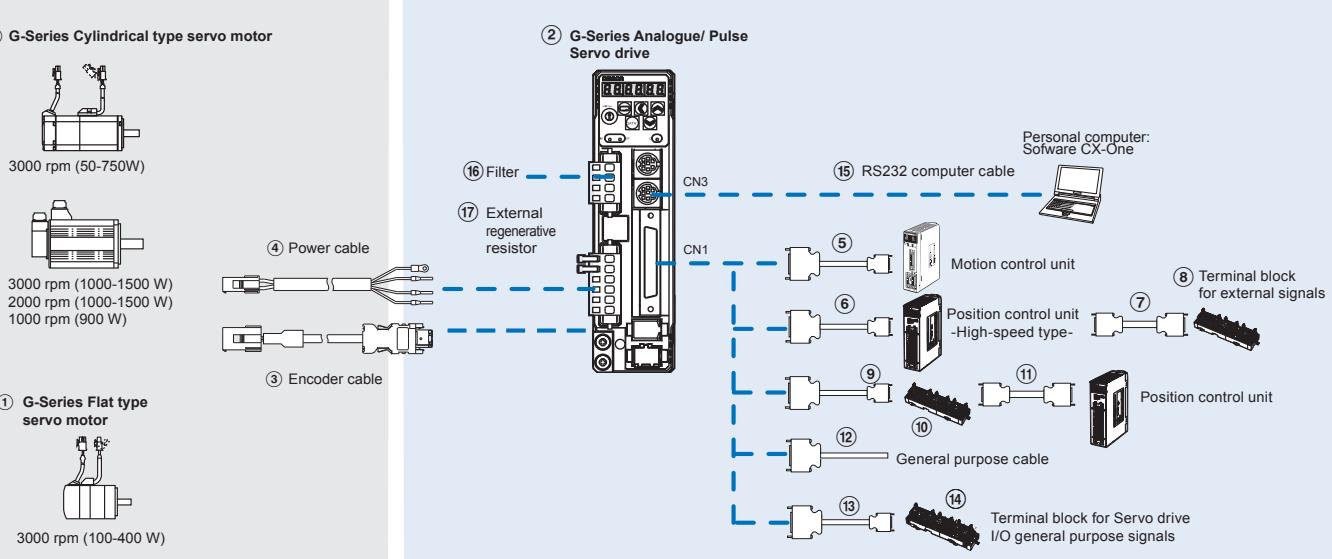

Note: The symbols ①②③④⑤... show the recommended sequence to select the components in a G-Series servo system

Servo motors, power & encoder cables

Note: ①③④ Refer to the G-Series servo motor chapter for servomotor, motor cables or connectors selection

Servo drives

Specifications		Servo drive model	① Compatible rotary servo motors	
			Cylindric type	Flat type
1 phase 200 VAC	100 W	R88D-GT01H	R88M-G05030□ R88M-G10030□	R88M-GP10030□
	200 W	R88D-GT02H	R88M-G20030□	R88M-GP20030□
	400 W	R88D-GT04H	R88M-G40030□	R88M-GP40030□
	750 W	R88D-GT08H	R88M-G75030□	-
	1.0 kW	R88D-GT10H	R88M-G1K020T□	-
	1.5 kW	R88D-GT15H	R88M-G90010T□ R88M-G1K030T□ R88M-G1K520T□ R88M-G1K530T□	- - - -

Control cables (for CN1)

Symbol	Description	Connect to	Model
○	Control cable (1 axis)	Motion control units CS1W-MC221 CS1W-MC421	1 m R88A-CPG001M1 2 m R88A-CPG002M1 3 m R88A-CPG003M1 5 m R88A-CPG005M1
	Control cable (2 axis)	Motion control units CS1W-MC221 CS1W-MC421	1 m R88A-CPG001M2 2 m R88A-CPG002M2 3 m R88A-CPG003M2 5 m R88A-CPG005M2
	Control cable (line-driver output for 1 axis)	Position control units (high-speed type) CJ1W-NC234 CJ1W-NC434	1 m XW2Z-100J-G9 5 m XW2Z-500J-G9 10 m XW2Z-10MJ-G9
	Control cable (open-collector output for 1 axis)	Position control units (high-speed type) CJ1W-NC214 CJ1W-NC414	1 m XW2Z-100J-G13 3 m XW2Z-300J-G13
	Control cable (line-driver output for 2 axis)	Position control units (high-speed type) CJ1W-NC234 CJ1W-NC434	1 m XW2Z-100J-G1 5 m XW2Z-500J-G1 10 m XW2Z-10MJ-G1
○	Control cable (open-collector output for 2 axis)	Position control units (high-speed type) CJ1W-NC214 CJ1W-NC414	1 m XW2Z-100J-G5 3 m XW2Z-300J-G5

Symbol	Description	Connect to		Model
⑦	Terminal block cable for external signals (for input common, forward/reverse run prohibited inputs, emergency stop input, origin proximity input and interrupt input)	Position control units (high-speed type) CJ1W-NC234 CJ1W-NC434 CJ1W-NC214 CJ1W-NC414	0.5 m 1 m 2 m 3 m 5 m 10 m	XW2Z-C50X XW2Z-100X XW2Z-200X XW2Z-300X XW2Z-500X XW2Z-010X
⑧	Terminal block for external signals (M3 screw, pin terminals) Terminal block for ext. signals (M3.5 screw, fork/round terminals) Terminal block for ext. signals (M3 screw, fork/round terminals)		- - -	XW2B-20G4 XW2B-20G5 XW2D-20G6
⑨	Cable from servo relay unit to servo drive	CS1W-NC1□3, CJ1W-NC1□3, C200HW-NC113, CS1W-NC2□3/4□3, CJ1W-NC2□3/4□3, C200HW-NC213/413, CQM1H-PLB21 or CQM1-CPU43 CJ1M-CPU21/22/23	1 m 2 m 1 m 2 m	XW2Z-100J-B25 XW2Z-200J-B25 XW2Z-100J-B31 XW2Z-200J-B31
⑩	Servo relay unit	Position control units CS1W-NC1□3, CJ1W-NC1□3 or C200HW-NC113 Position control units CS1W-NC2□3/4□3, CJ1W-NC2□3/4□3 or C200HW-NC213/413 CQM1H-PLB21 or CQM1-CPU43 CJ1M-CPU21/22/23	- - - -	XW2B-20J6-1B (1 axis) XW2B-40J6-2B (2 axes) XW2B-20J6-3B (1 axis) XW2B-20J6-8A (1 axis) XW2B-40J6-9A (2 axes)
⑪	Position control unit connecting cable	CQM1H-PLB21 or CQM1-CPU43 CS1W-NC113 or C200HW-NC113 CS1W-NC213/413 or C200HW-NC213/413 CS1W-NC133 CS1W-NC233/433 CJ1W-NC113 CJ1W-NC213/413 CJ1W-NC133 CJ1W-NC233/433 CJ1M-CPU21/22/23	0.5 m 1 m 0.5 m 1 m	XW2Z-050J-A3 XW2Z-100J-A3 XW2Z-050J-A6 XW2Z-100J-A6 XW2Z-050J-A7 XW2Z-100J-A7 XW2Z-050J-A10 XW2Z-100J-A10 XW2Z-050J-A11 XW2Z-100J-A11 XW2Z-050J-A14 XW2Z-100J-A14 XW2Z-050J-A15 XW2Z-100J-A15 XW2Z-050J-A18 XW2Z-100J-A18 XW2Z-050J-A19 XW2Z-100J-A19 XW2Z-050J-A33 XW2Z-100J-A33
⑫	General purpose cable	For general purpose controllers	1 m 2 m	R88A-CPG001S R88A-CPG002S
⑬	Terminal block cable	For general purpose controllers	1 m 2 m	XW2Z-100J-B24 XW2Z-200J-B24
⑭	Terminal block (M3 screw and for pin terminals) Terminal block (M3.5 screw and for fork/round terminals) Terminal block (M3 screw and for fork/round terminals)		- - -	XW2B-50G4 XW2B-50G5 XW2D-50G6

Computer cable (for CN3)

Symbol	Name		Model
15	Computer cable RS232	2 m	R88A-CCG002P2

Connectors

Specifications	Model
I/O connector kit, 50 pins (for CN1)	R88A-CNU11C

Filters

Symbol	Applicable servodrive	Filter model	Rated current	Leakage current	Rated voltage
⑯	R88D-GT01H R88D-GT02H	R88A-FIK102-RE	2.4 A	3.5 mA	250 VAC single-phase
	R88D-GT04H	R88A-FIK104-RE	4.1 A	3.5 mA	
	R88D-GT08H	R88A-FIK107-RE	6.6 A	3.5 mA	
	R88D-GT10H R88D-GT15H	R88A-FIK114-RE	14.2 A	3.5 mA	

Computer software

Specifications	Model
Configuration and monitoring software tool for servo drives and inverters. (CX-drive version 1.70 or higher)	CX-drive
Complete OMRON software package including CX-drive. (CX-One version 3.10 or higher)	CX-One

External regenerative resistor

External regenerative resistor		
Symbol	Regenerative resistor unit model	Specifications
(17)	R88A-RR08050S	50 Ω, 80 W
	R88A-RR080100S	100 Ω, 80 W
	R88A-RR22047S	47 Ω, 220 W
	R88A-RB50020S	20 Ω, 500 W

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.
To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

X-ON Electronics

Largest Supplier of Electrical and Electronic Components

Click to view similar products for AC, DC & Servo Motors category:

Click to view products by Omron manufacturer:

Other Similar products are found below :

[79207644](#) [805470B40040MY](#) [80807028](#) [808070Y01125Z](#) [825294A40005MW](#) [82664024](#) [R88M-G10030H-S2](#) [M4E068-EC03-01](#) [1032](#)
[80510503](#) [805470B40020MY](#) [80627003](#) [808070Y00250Y](#) [82714023](#) [82800003](#) [82830009](#) [KDE4014XF-380 \(D5\)](#) [R88A-RG08UA](#)
[82810017](#) [82861019](#) [R88M-K75030H](#) [R88M-G10030L-OS2](#) [R88M-GP20030L-OS2](#) [R88M-K90010F-S2](#) [R88M-GP40030L-OS2](#) [R88M-](#)
[K1K030H-S2](#) [89830012](#) [R88M-GP20030H-BO](#) [R88M-G10030L-BO](#) [R88M-GP20030S-OS2](#) [R88M-K20030H-B](#) [R88M-G40030H-BS2](#)
[R88M-GP20030H-O](#) [R88M-G40030T-S2](#) [R88M-K10030L](#) [82840003](#) [82840004](#) [R88M-GP20030L](#) [R88M-GP20030H-BS2](#) [R88M-GP10030S](#)
[R88M-GP20030L-S2](#) [R88M-G40030H](#) [R88M-GP20030L-O](#) [R88M-GP20030L-BS2](#) [R88M-GP20030T-OS2](#) [82869011](#) [R88M-K1K020F](#)
[82524021](#) [R88M-K1K520F](#) [82862202](#)